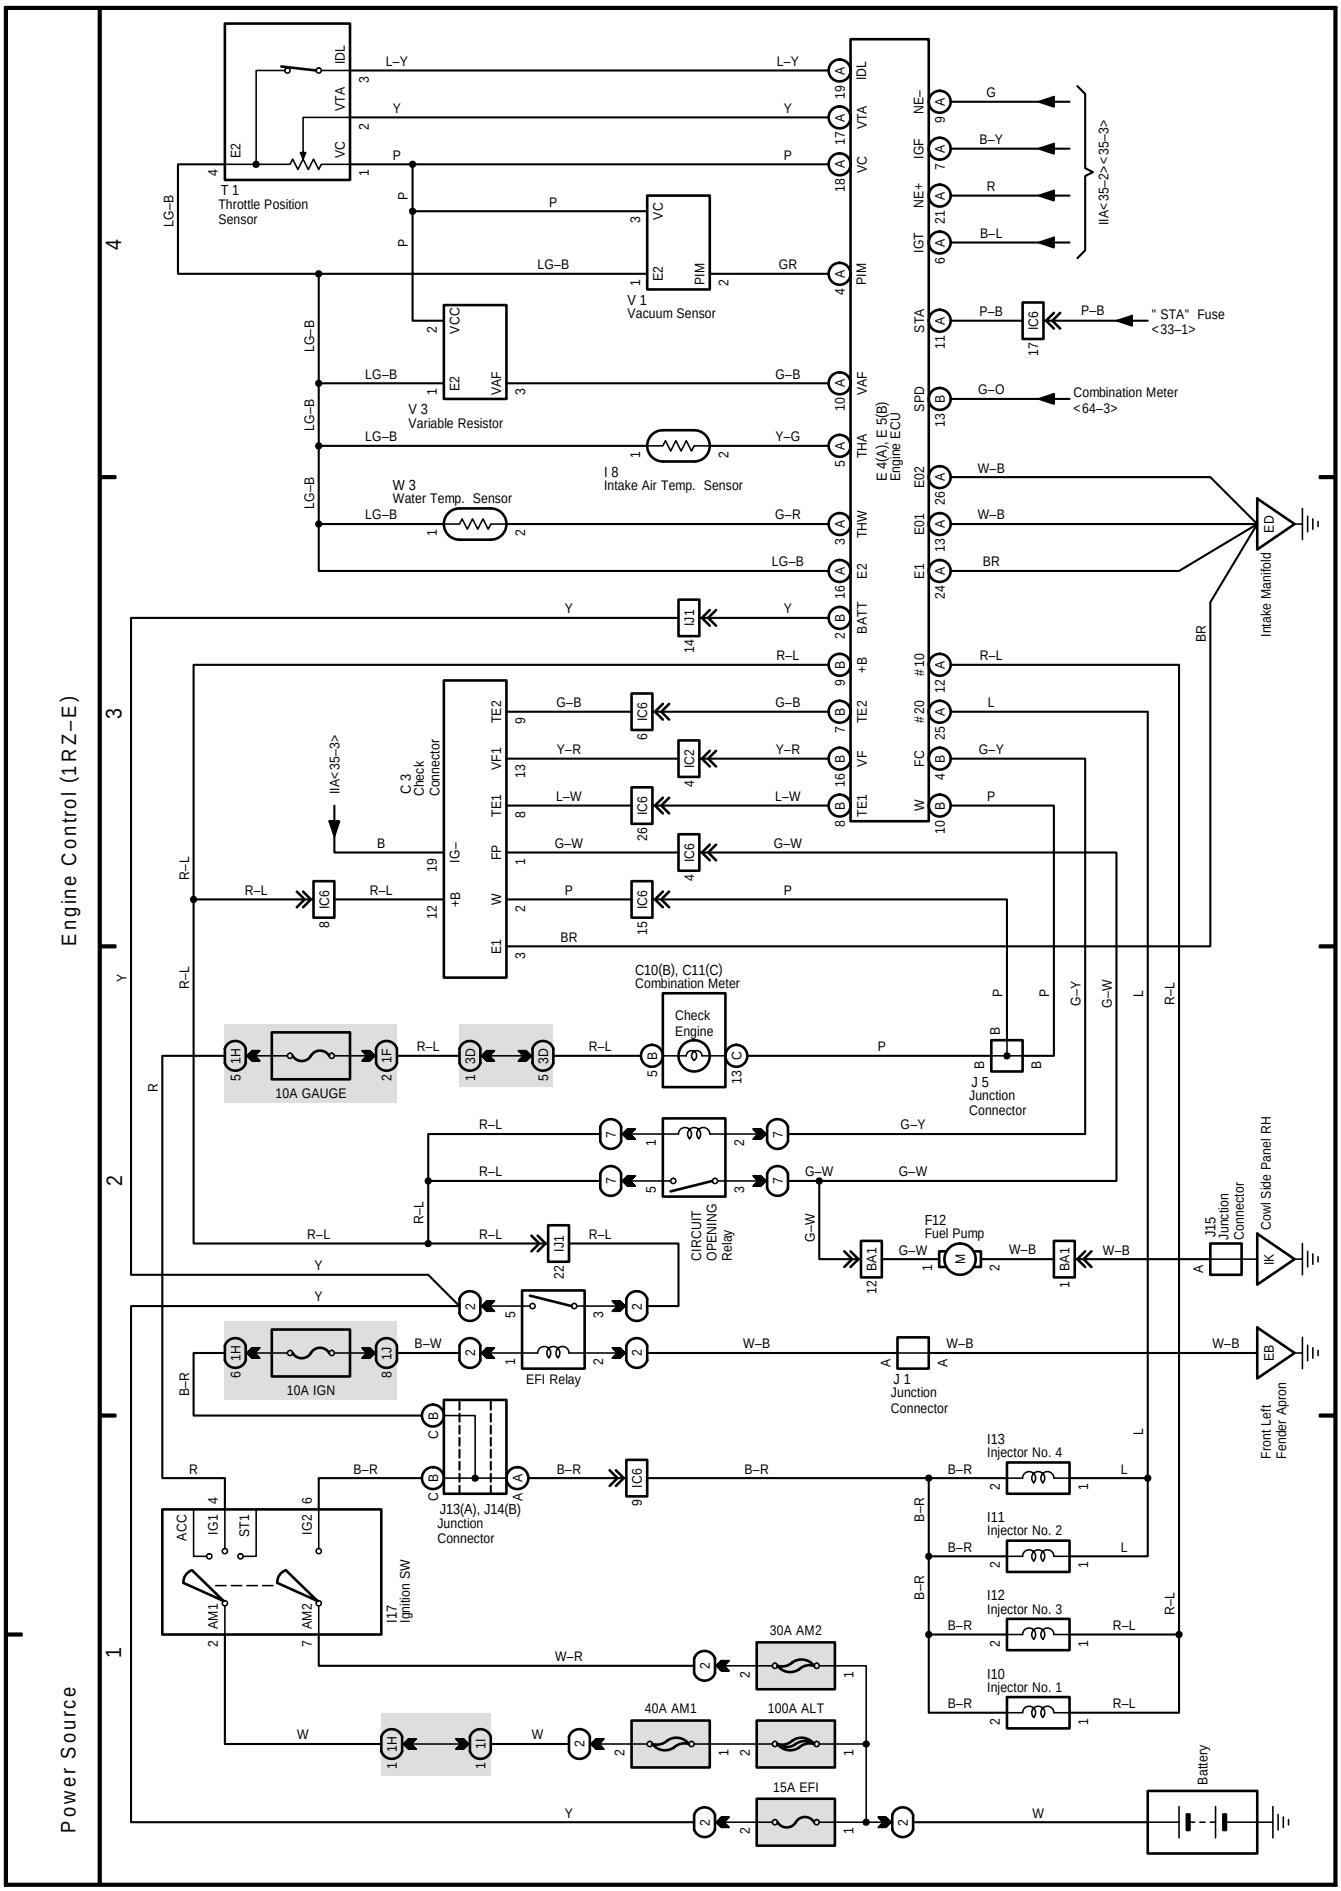

Engine Control (1RZ–E)
Power Source
T 1
Throttle Position Sensor
V 1
Vacuum Sensor
V 3
Variable Resistor
I 8
Intake Air Temp. Sensor
W 3
Water Temp. Sensor
E 4(A), E 5(B)
Engine ECU
C 3
Check Connector
C10(B), C11(C)
Combination Meter
Check Engine
J 5
Junction Connector
10A GAUGE
10A IGN
EFI Relay
CIRCUIT OPENING Relay
F12
Fuel Pump
J 1
Junction Connector
J13(A), J14(B)
Junction Connector
J15
Junction Connector
Cowl Side Panel RH
Front Left Fender Apron
Intake Manifold
I17
Ignition SW
I13
Injector No. 4
I11
Injector No. 2
I12
Injector No. 3
I10
Injector No. 1
30A AM2
40A AM1
100A ALT
15A EFI
Battery
" STA" Fuse
<33–1>
Combination Meter
<64–3>
IIA<35–2><35–3>
IIA<35–3>