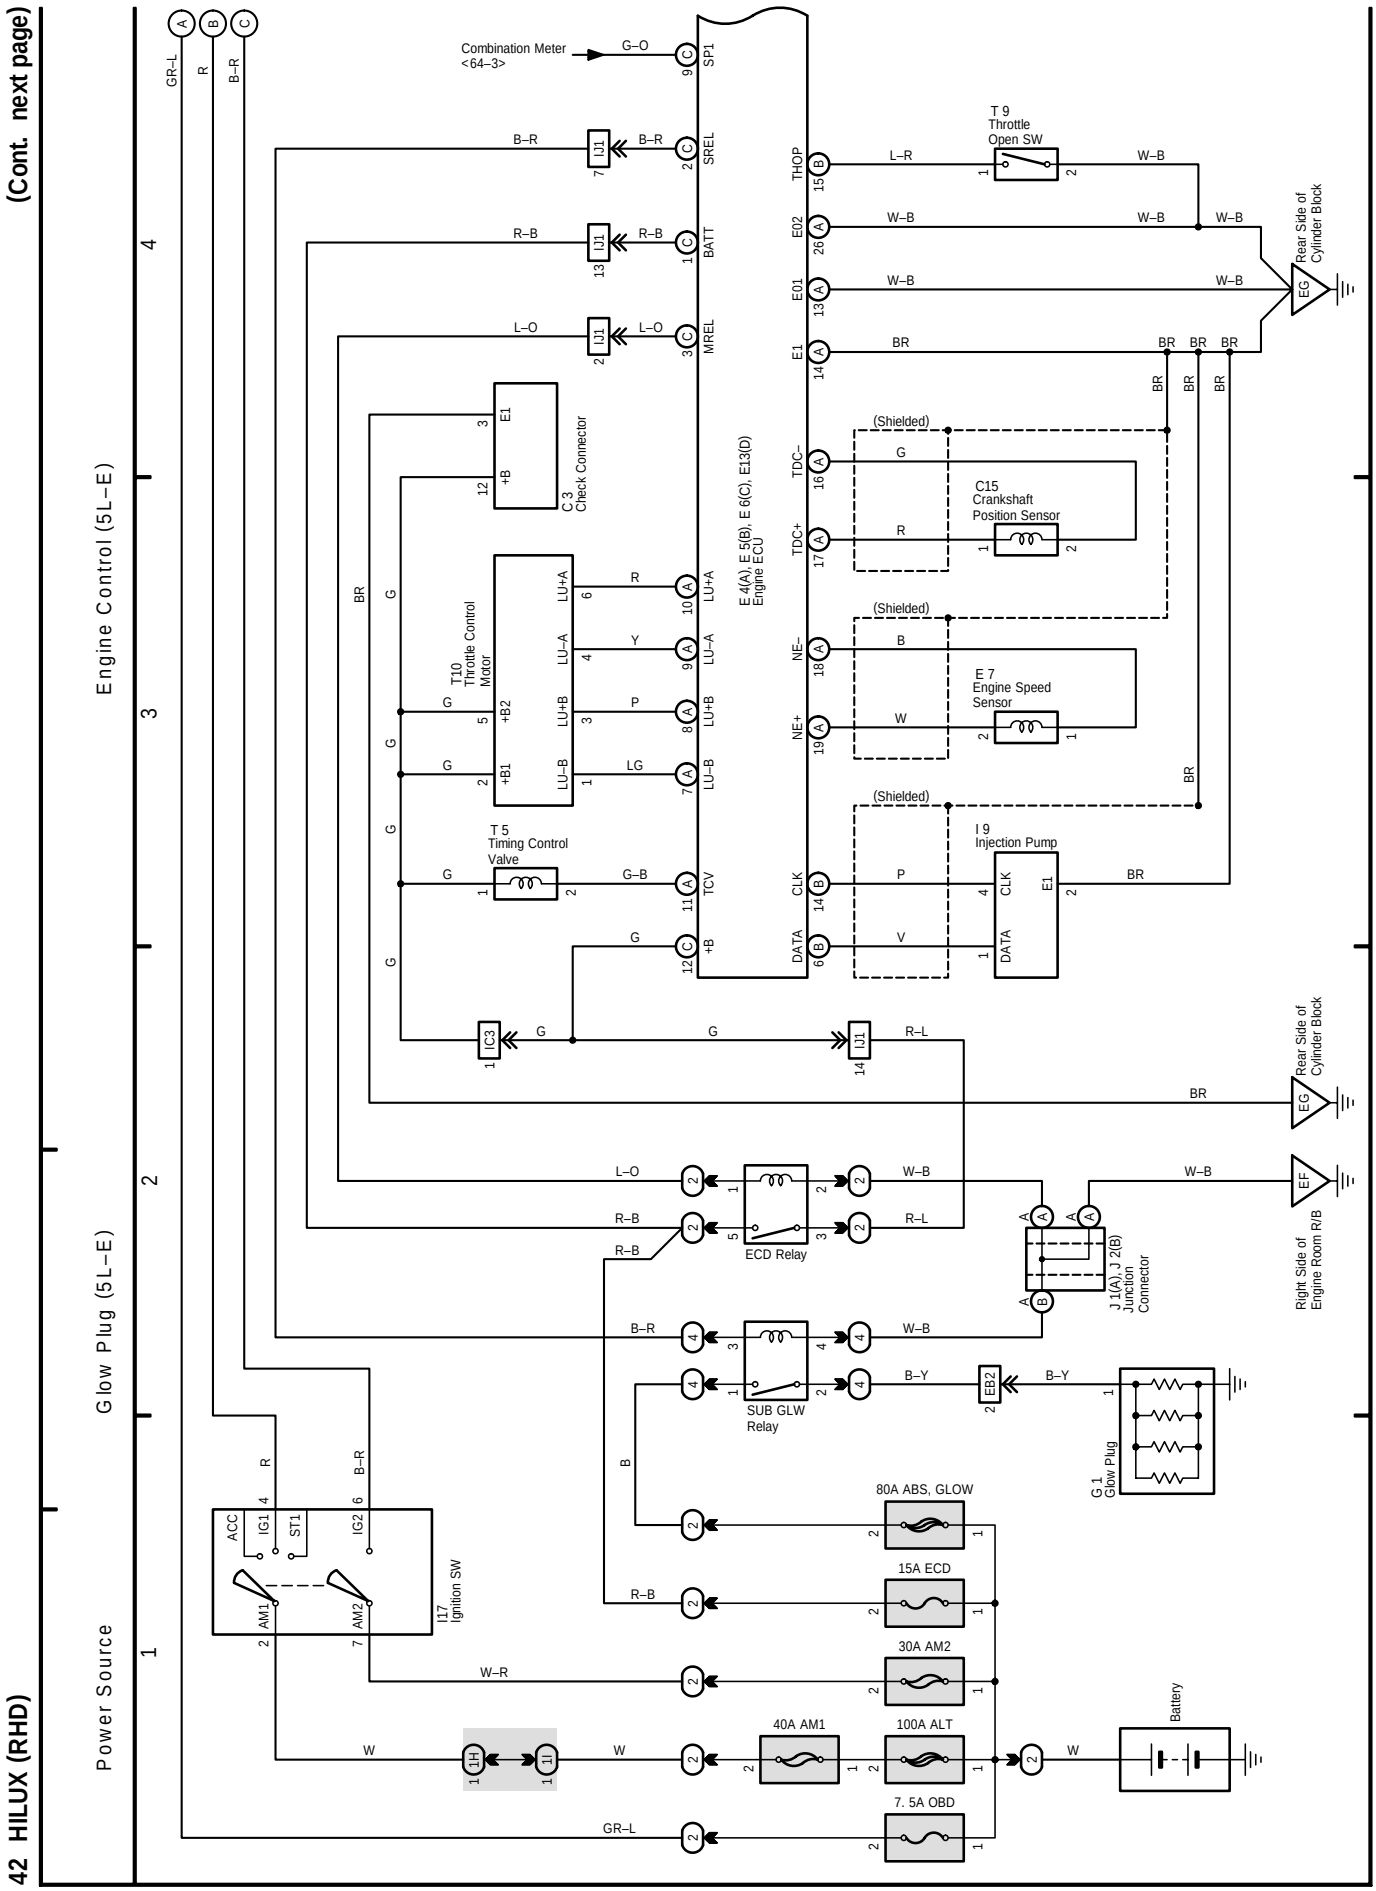

(Cont. next page)
42 HILUX (RHD)
Power Source
Glow Plug (5L–E)
Engine Control (5L–E)
1
2
3
4
A
B
C
GR–L
R
B–R
Combination Meter
<64–3>
G–O
SP1
B–R
IJ1
SREL
R–B
BATT
L–O
MREL
E1
C3
Check Connector
+B
T10
Throttle Control
Motor
+B2
+B1
LU+A
LU–A
LU+B
LU–B
R
Y
P
LG
T5
Timing Control
Valve
G–B
TCV
E 4(A), E 5(B), E 6(C), E13(D)
Engine ECU
THOP
E02
E01
E1
TDC–
TDC+
NE–
NE+
CLK
DATA
T 9
Throttle
Open SW
L–R
W–B
Rear Side of
Cylinder Block
EG
BR
(Shielded)
G
R
C15
Crankshaft
Position Sensor
B
W
E 7
Engine Speed
Sensor
P
V
I 9
Injection Pump
IC3
R–L
L–O
R–B
ECD Relay
EF
Right Side of
Engine Room R/B
J 1(A), J 2(B)
Junction
Connector
B–R
SUB GLW
Relay
B–Y
EB2
G 1
Glow Plug
B
80A ABS, GLOW
15A ECD
30A AM2
W–R
40A AM1
100A ALT
7. 5A OBD
W
GR–L
ACC
IG1
ST1
IG2
AM1
AM2
I17
Ignition SW
1H
1I
Battery

42 HILUX (RHD) (Cont' d)

