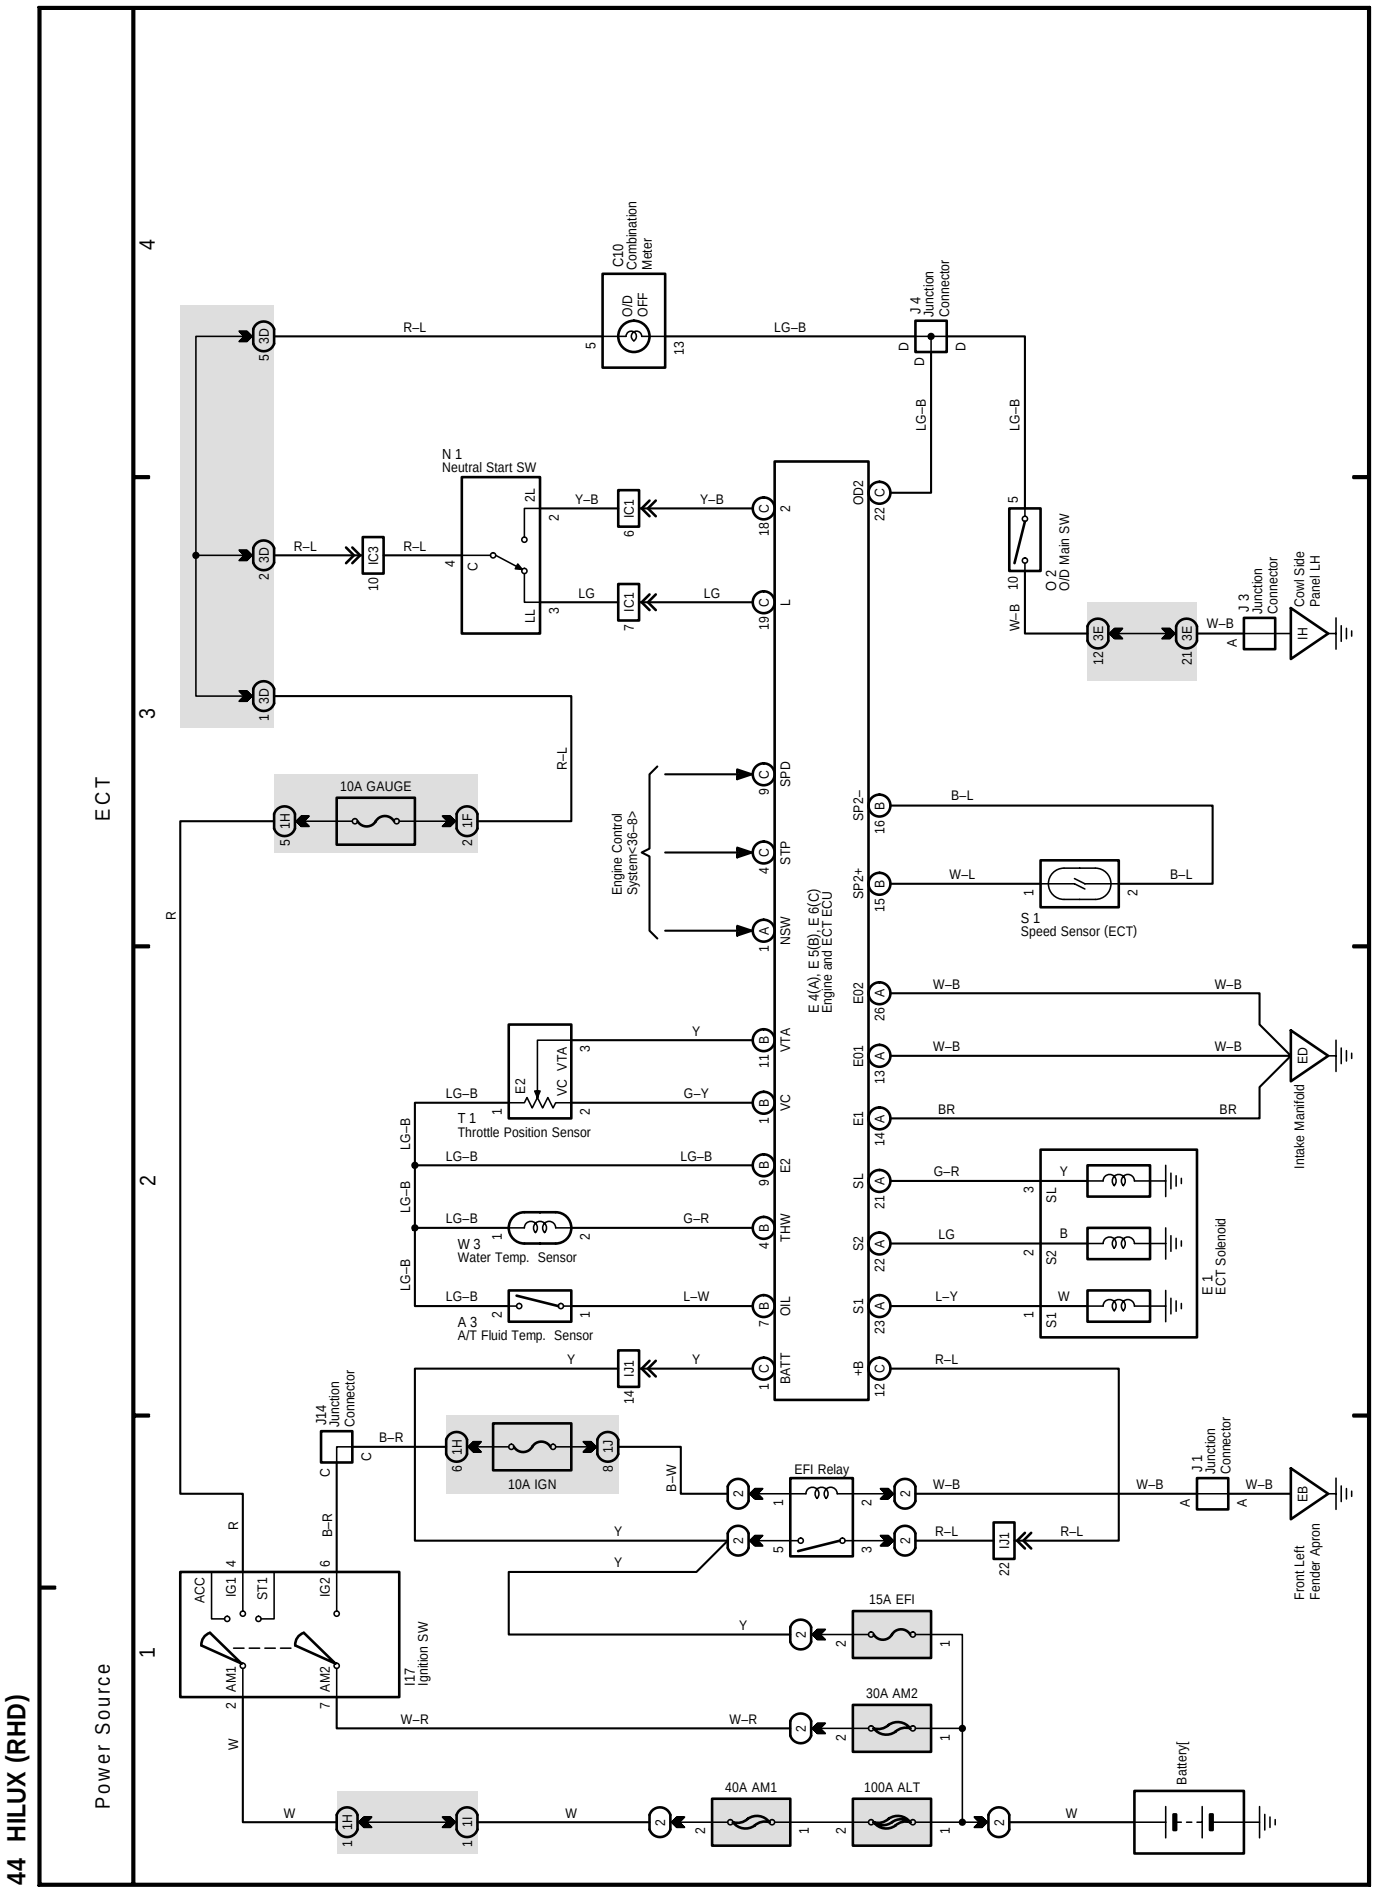

44 HILUX (RHD)
Power Source
ECT
C10 Combination Meter
O/D OFF
J4 Junction Connector
N1 Neutral Start SW
IC1
IC3
O2 O/D Main SW
J3 Junction Connector
Cowl Side Panel LH
10A GAUGE
Engine Control System<36–8>
E4(A), E5(B), E6(C) Engine and ECT ECU
SPD
STP
NSW
VTA
VC
E2
THW
OIL
BATT
SP2–
SP2+
E02
E01
E1
SL
S2
S1
+B
S1 Speed Sensor (ECT)
T1 Throttle Position Sensor
W3 Water Temp. Sensor
A3 A/T Fluid Temp. Sensor
Intake Manifold
E1 ECT Solenoid
J14 Junction Connector
10A IGN
EFI Relay
J1 Junction Connector
Front Left Fender Apron
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
15A EFI
30A AM2
40A AM1
100A ALT
Battery