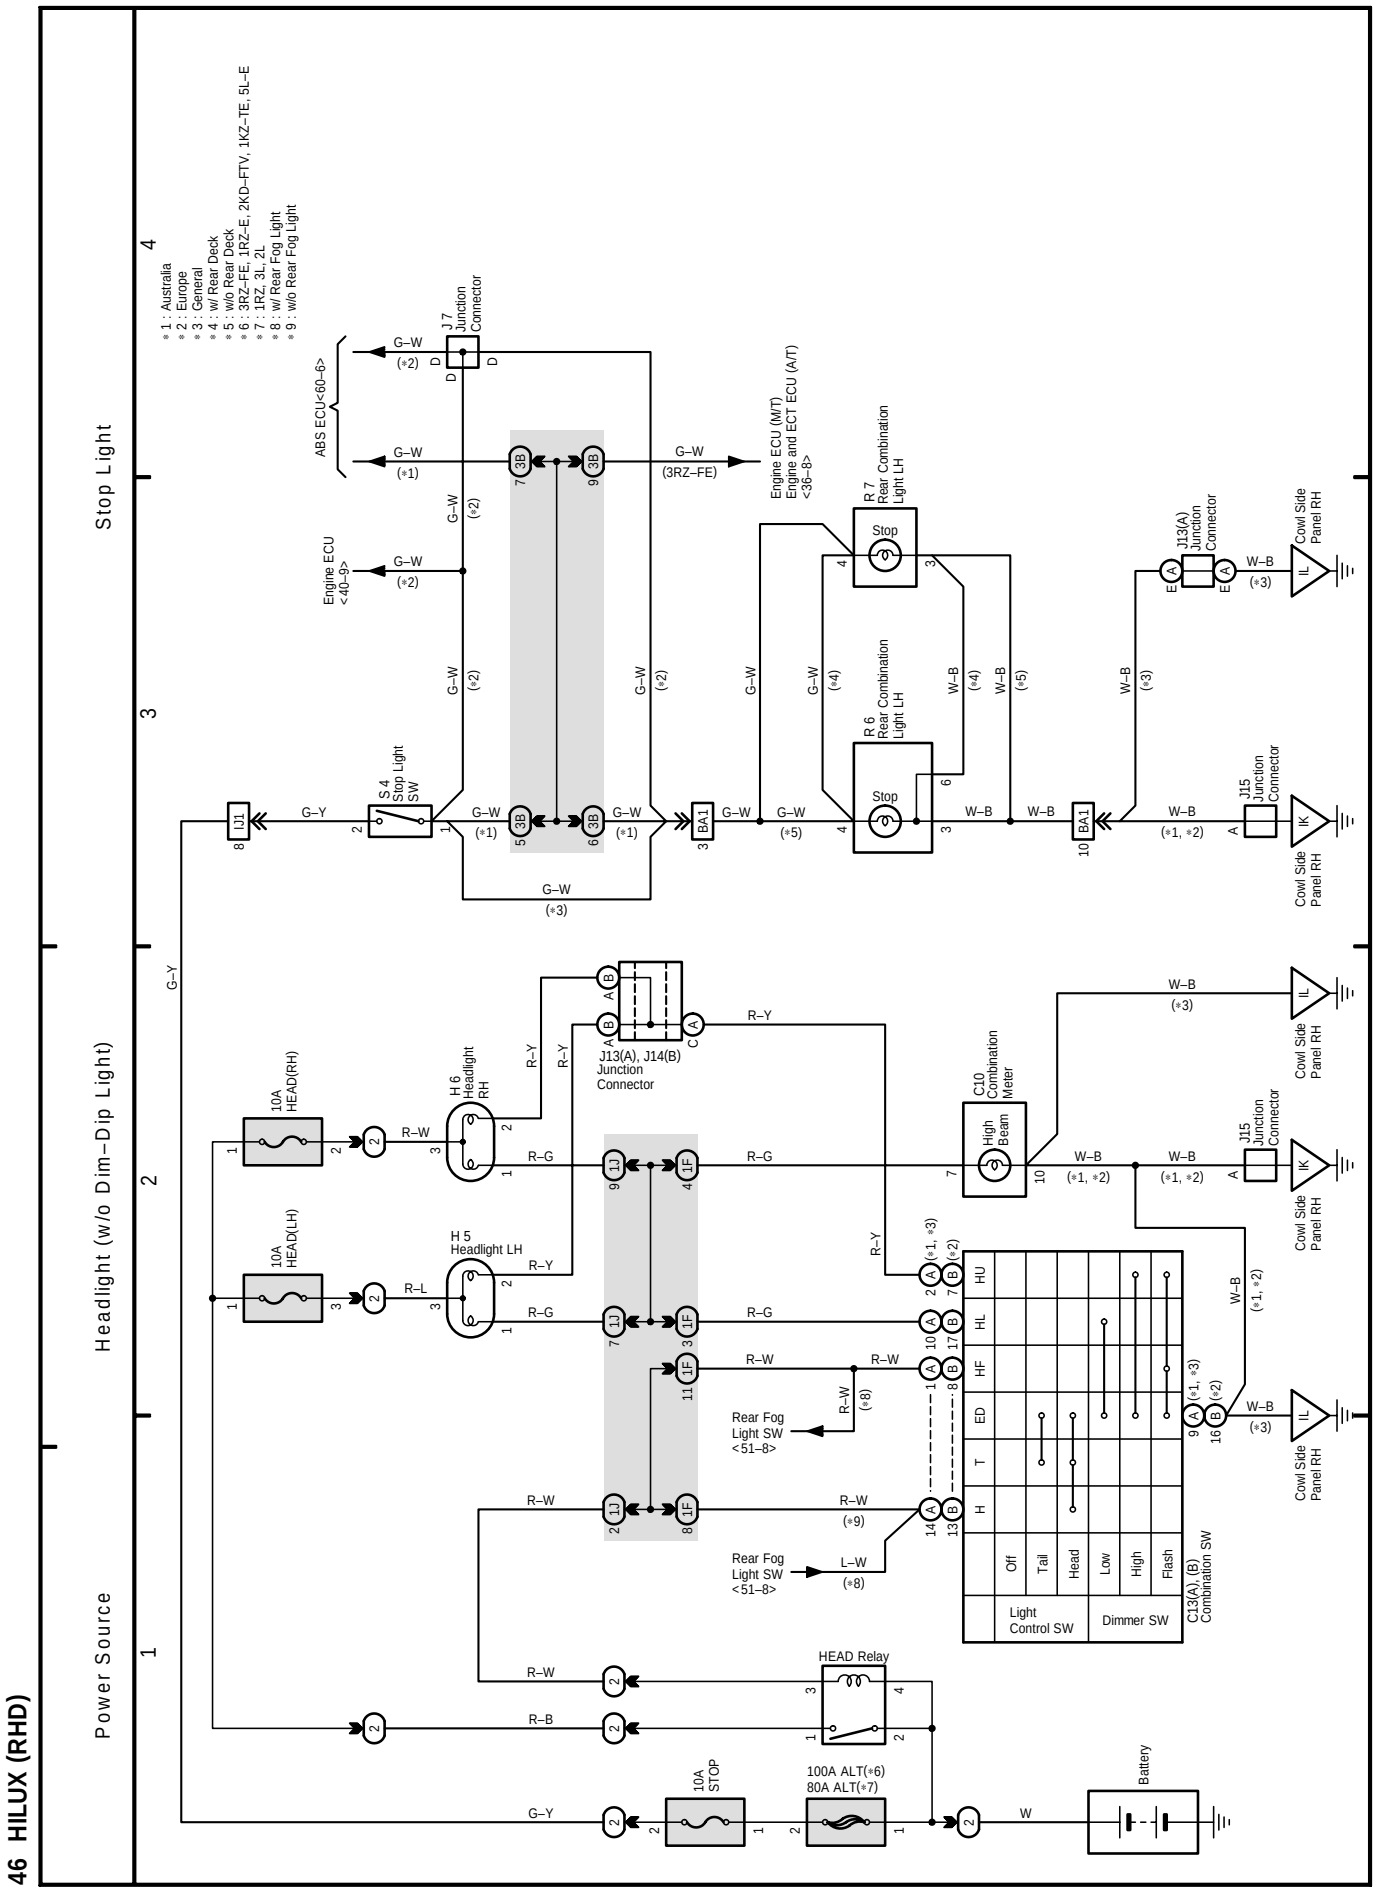

46 HILUX (RHD)
Power Source
Headlight (w/o Dim–Dip Light)
Stop Light
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : w/ Rear Deck
* 5 : w/o Rear Deck
* 6 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
* 7 : 1RZ, 3L, 2L
* 8 : w/ Rear Fog Light
* 9 : w/o Rear Fog Light
ABS ECU<60–6>
Engine ECU <40–9>
J7 Junction Connector
Engine ECU (M/T) Engine and ECT ECU (A/T) <36–8>
R 7 Rear Combination Light LH
R 6 Rear Combination Light LH
J13(A) Junction Connector
Cowl Side Panel RH
J15 Junction Connector
S 4 Stop Light SW
J13(A), J14(B) Junction Connector
H 6 Headlight RH
H 5 Headlight LH
10A HEAD(RH)
10A HEAD(LH)
C10 Combination Meter
High Beam
Rear Fog Light SW <51–8>
C13(A), (B) Combination SW
Light Control SW
Dimmer SW
Off
Tail
Head
Low
High
Flash
HU
HL
HF
ED
T
H
HEAD Relay
10A STOP
100A ALT(*6) 80A ALT(*7)
Battery
G–Y
G–W
R–W
R–B
R–G
R–Y
R–L
L–W
W–B
W