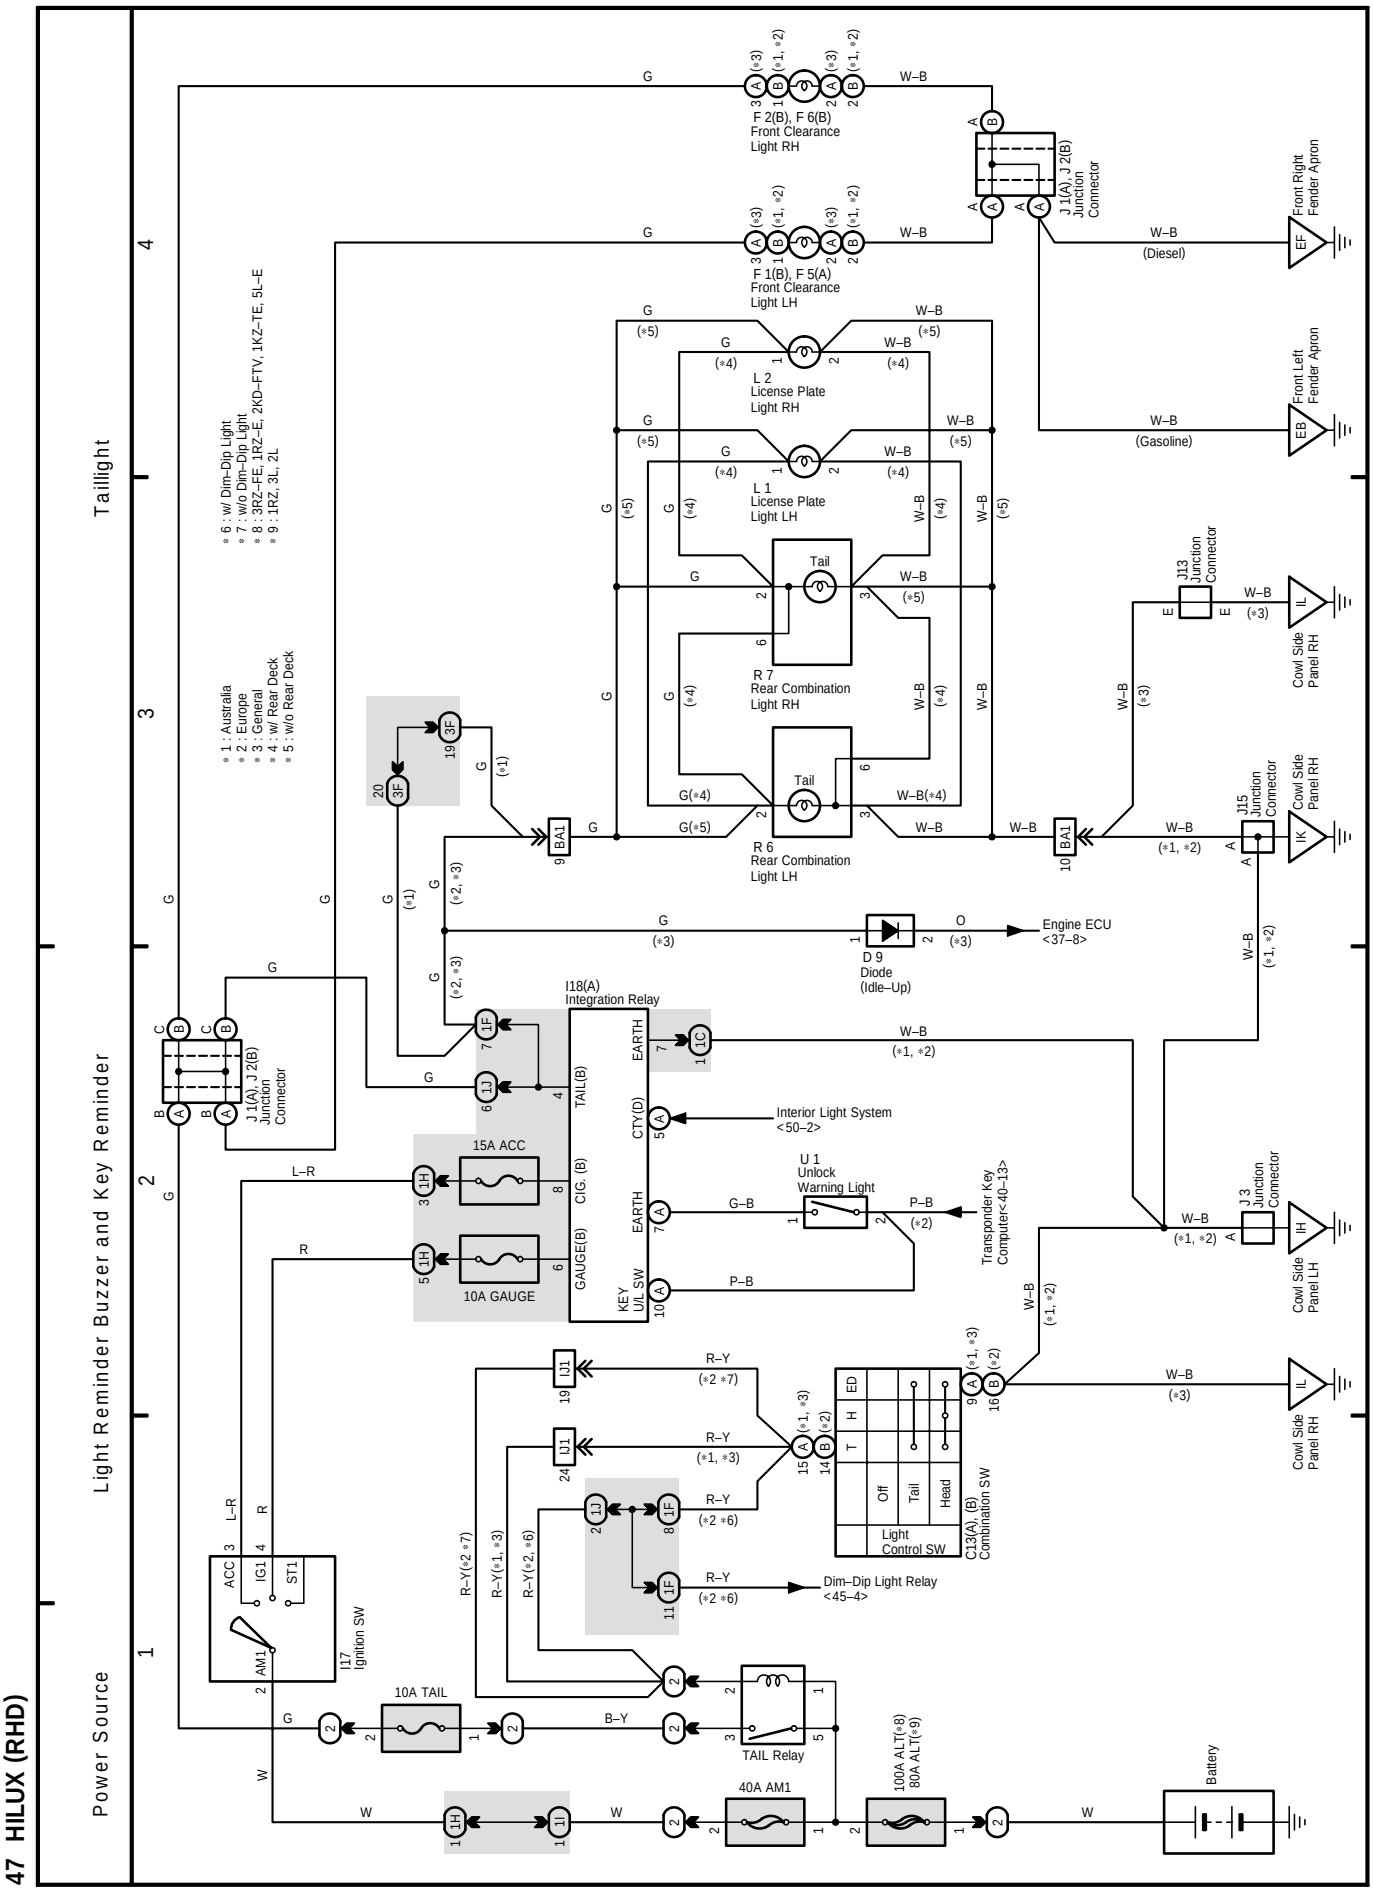

47 HILUX (RHD)
Power Source
Light Reminder Buzzer and Key Reminder
Taillight
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : w/ Rear Deck
* 5 : w/o Rear Deck
* 6 : w/ Dim–Dip Light
* 7 : w/o Dim–Dip Light
* 8 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
* 9 : 1RZ, 3L, 2L
F 2(B), F 6(B) Front Clearance Light RH
F 1(B), F 5(A) Front Clearance Light LH
J1(A), J2(B) Junction Connector
Front Right Fender Apron
Front Left Fender Apron
W–B (Diesel)
W–B (Gasoline)
L 2 License Plate Light RH
L 1 License Plate Light LH
R 7 Rear Combination Light RH
R 6 Rear Combination Light LH
Tail
J13 Junction Connector
J15 Junction Connector
J3 Junction Connector
Cowl Side Panel RH
Cowl Side Panel LH
D 9 Diode (Idle–Up)
Engine ECU <37–8>
I18(A) Integration Relay
EARTH
TAIL(B)
CTY(D)
CIG. (B)
GAUGE(B)
KEY U/L SW
15A ACC
10A GAUGE
Interior Light System <50–2>
U 1 Unlock Warning Light
Transponder Key Computer<40–13>
C13(A), (B) Combination SW
Light Control SW
Off
Tail
Head
Dim–Dip Light Relay <45–4>
I17 Ignition SW
ACC
IG1
ST1
AM1
10A TAIL
TAIL Relay
40A AM1
100A ALT(*8) 80A ALT(*9)
Battery