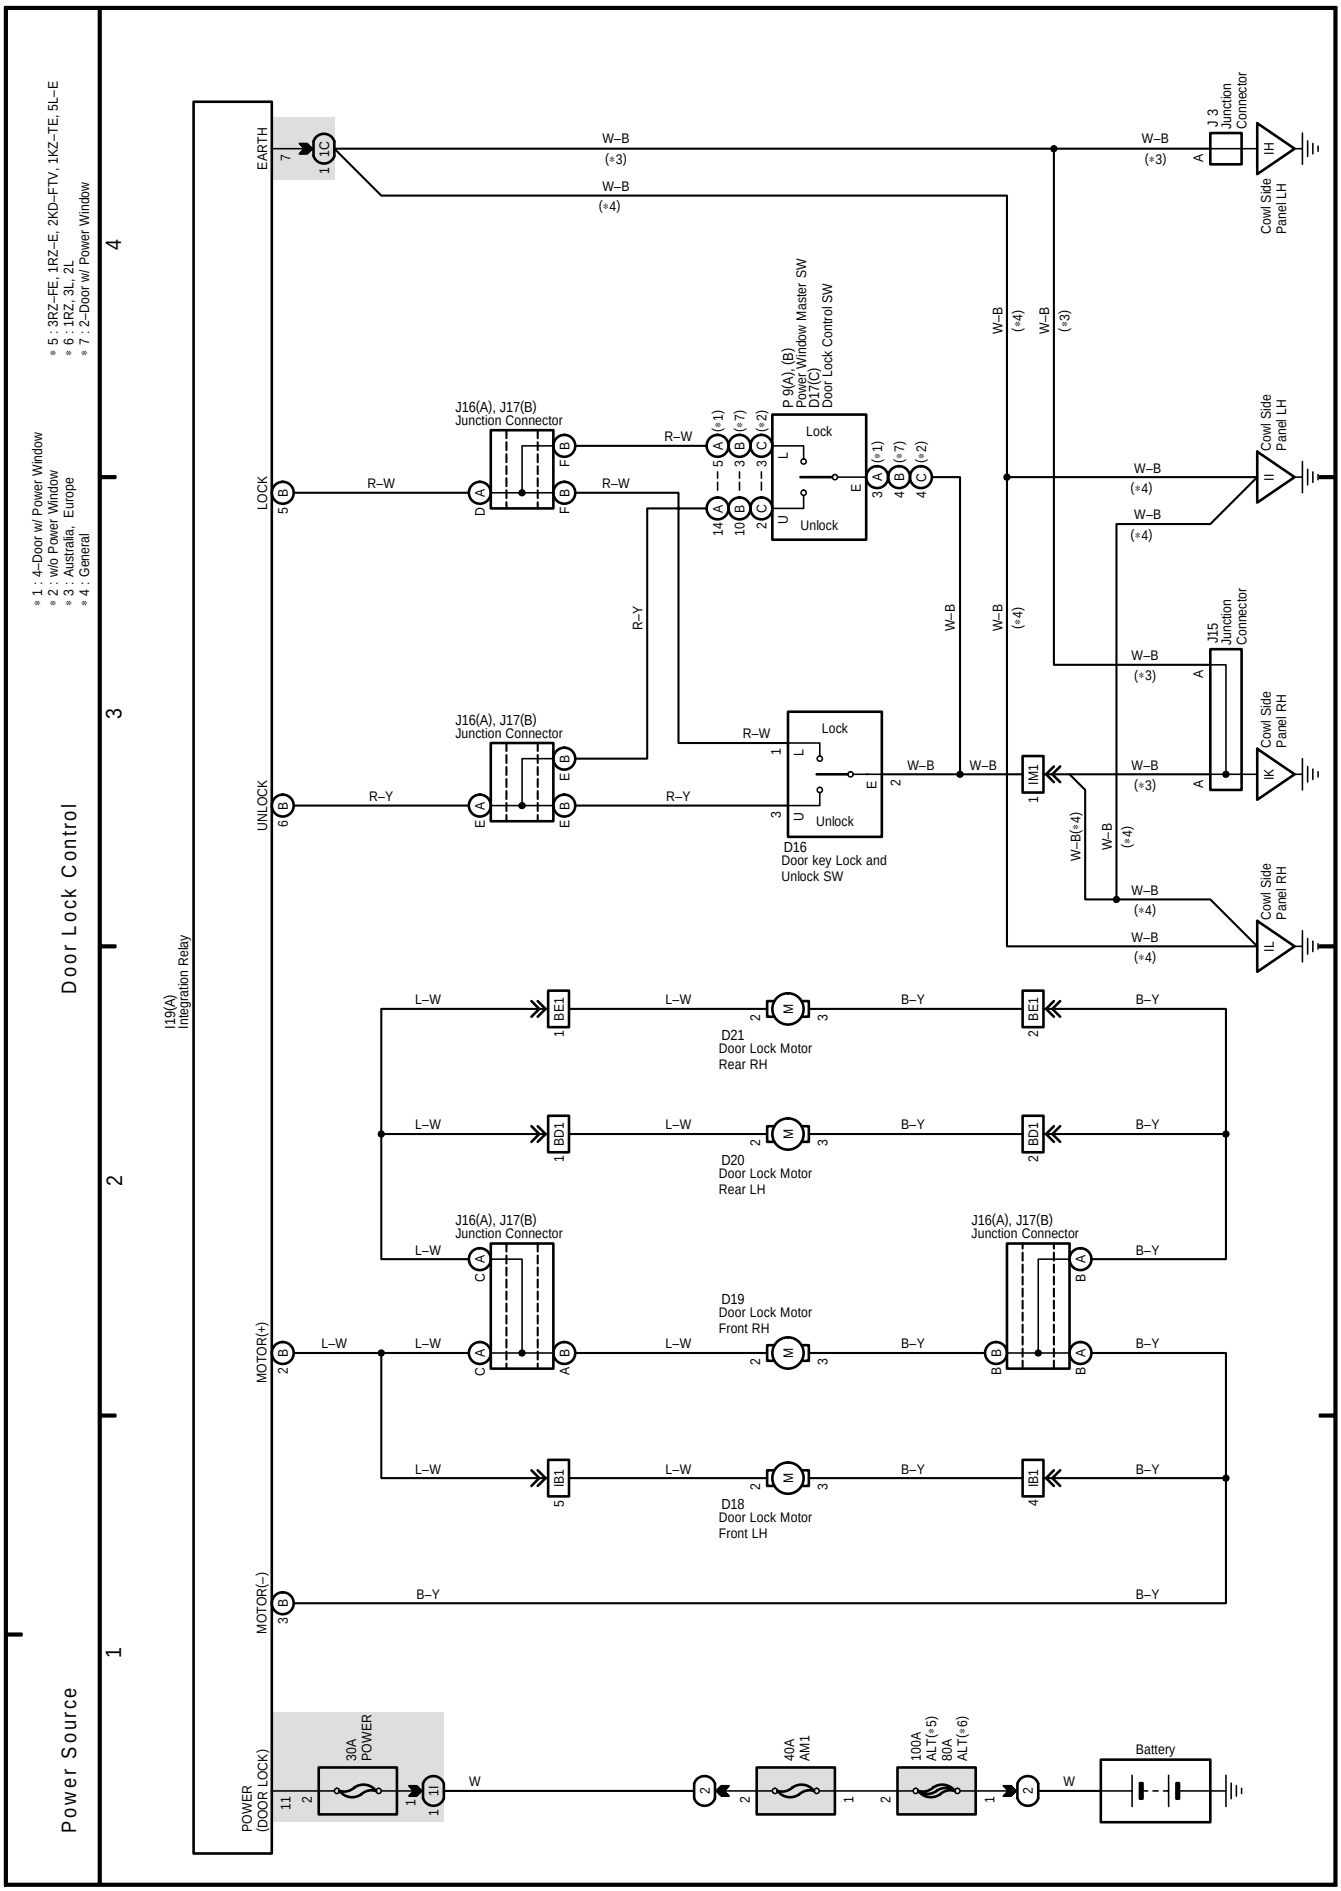

Door Lock Control
Power Source
1
2
3
4
* 1 : 4–Door w/ Power Window
* 2 : w/o Power Window
* 3 : Australia, Europe
* 4 : General
* 5 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
* 6 : 1RZ, 3L, 2L
* 7 : 2–Door w/ Power Window
I19(A)
Integration Relay
EARTH
LOCK
UNLOCK
MOTOR(+)
MOTOR(–)
POWER
(DOOR LOCK)
W–B
(*3)
(*4)
J 3
Junction
Connector
Cowl Side
Panel LH
J15
Junction
Connector
Cowl Side
Panel RH
J16(A), J17(B)
Junction Connector
P 9(A), (B)
Power Window Master SW
D17(C)
Door Lock Control SW
Lock
Unlock
D16
Door key Lock and
Unlock SW
D21
Door Lock Motor
Rear RH
D20
Door Lock Motor
Rear LH
D19
Door Lock Motor
Front RH
D18
Door Lock Motor
Front LH
30A
POWER
40A
AM1
100A
ALT(*5)
80A
ALT(*6)
Battery