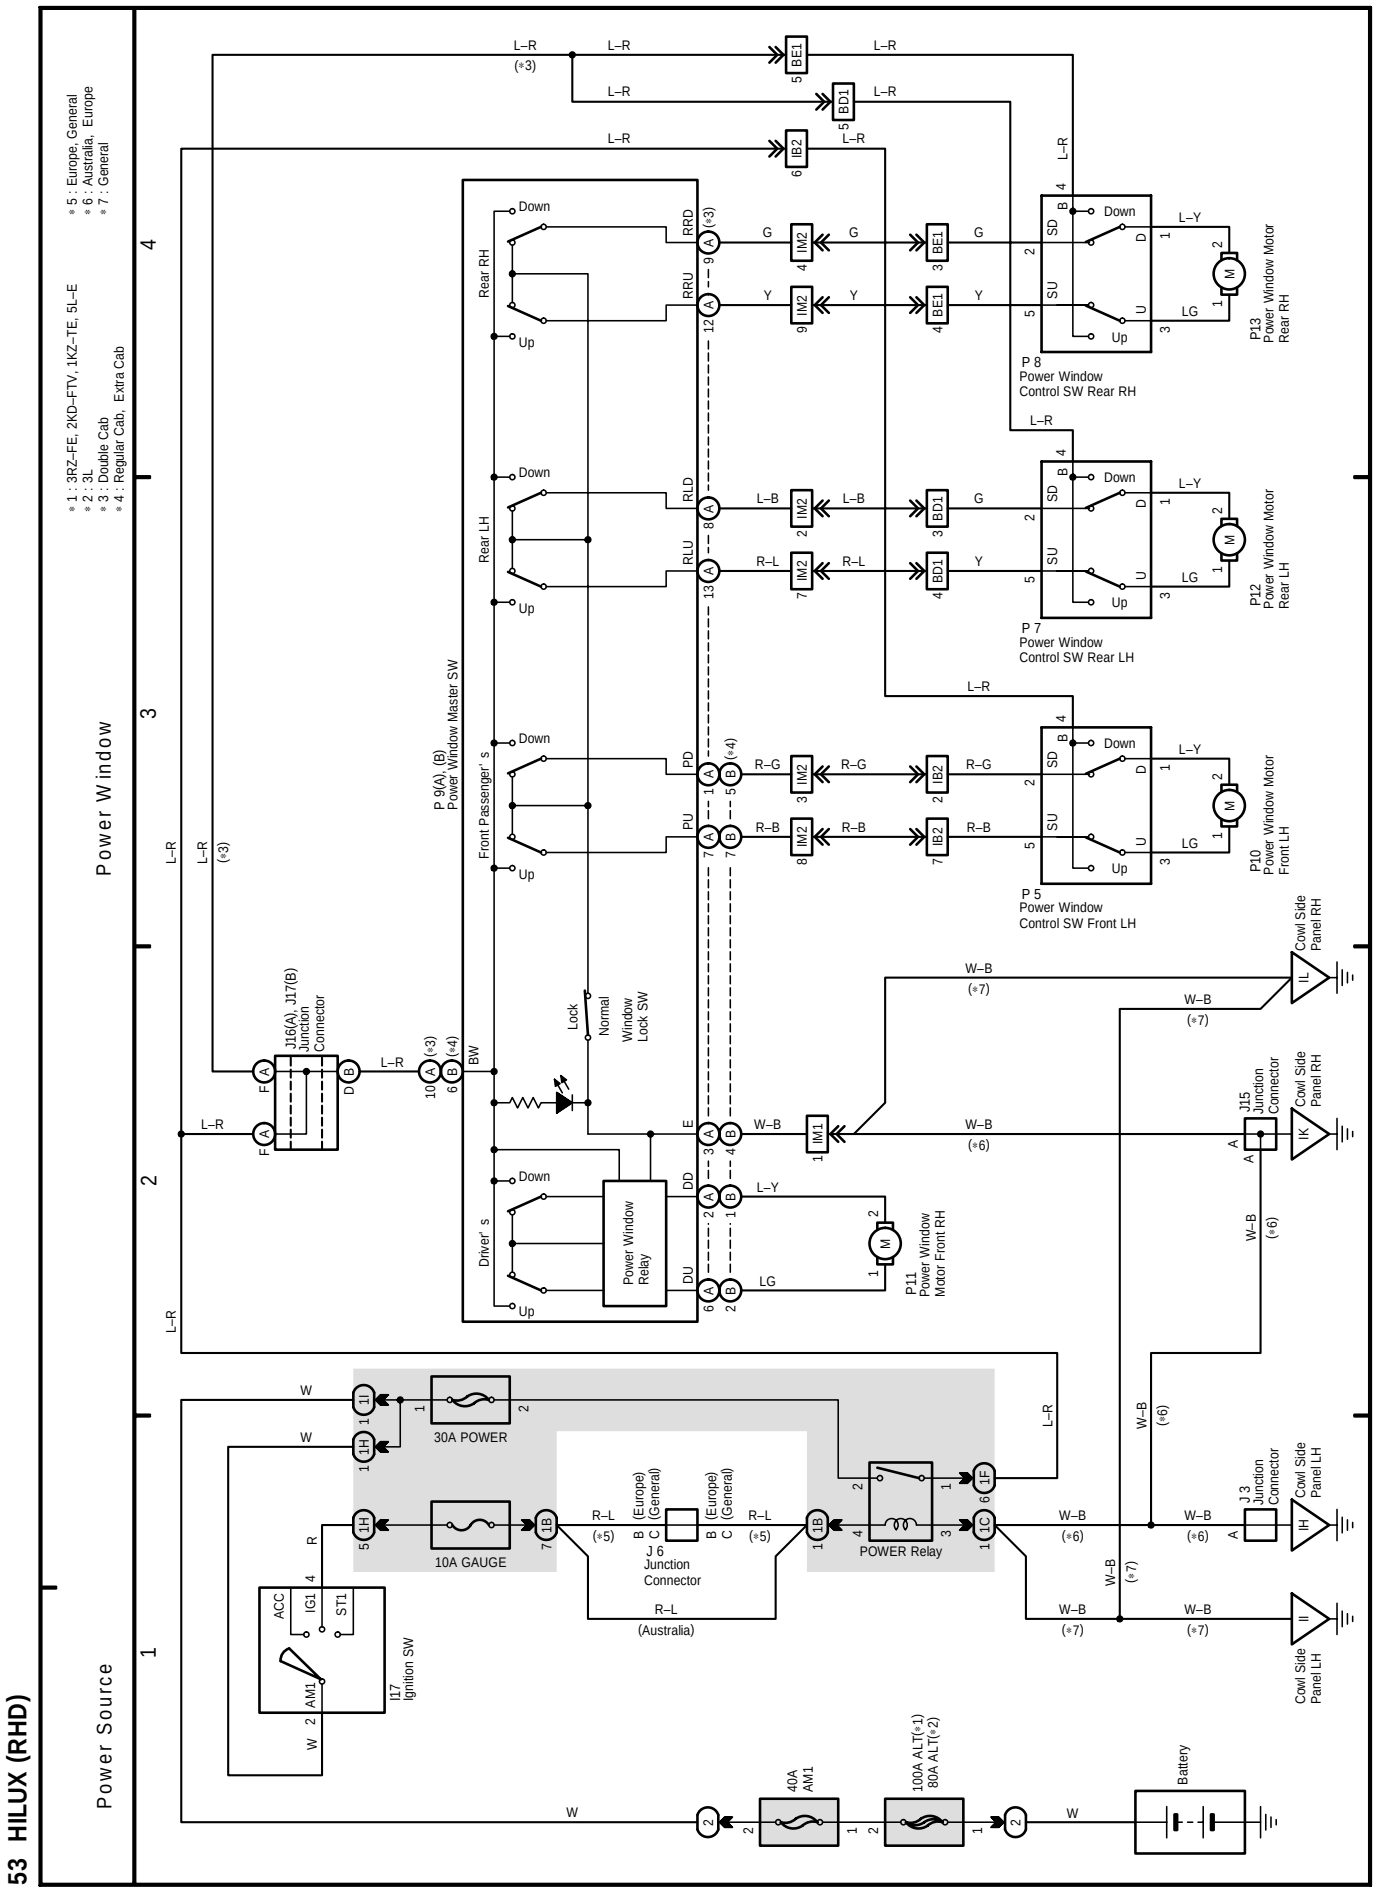

53 HILUX (RHD)
Power Source
Power Window
1
2
3
4
∗1 : 3RZ–FE, 2KD–FTV, 1KZ–TE, 5L–E
∗2 : 3L
∗3 : Double Cab
∗4 : Regular Cab, Extra Cab
∗5 : Europe, General
∗6 : Australia, Europe
∗7 : General
P 9(A), (B)
Power Window Master SW
Front Passenger' s
Driver' s
Rear RH
Rear LH
Down
Up
Lock
Normal
Window Lock SW
Power Window Relay
P 8
Power Window Control SW Rear RH
P 7
Power Window Control SW Rear LH
P 5
Power Window Control SW Front LH
P13 Power Window Motor Rear RH
P12 Power Window Motor Rear LH
P10 Power Window Motor Front LH
P11 Power Window Motor Front RH
J16(A), J17(B) Junction Connector
J15 Junction Connector
J 3 Junction Connector
J 6 Junction Connector
Cowl Side Panel RH
Cowl Side Panel LH
30A POWER
10A GAUGE
POWER Relay
I17 Ignition SW
ACC
IG1
ST1
AM1
40A AM1
100A ALT(∗1)
80A ALT(∗2)
Battery
(Europe)
(General)
(Australia)