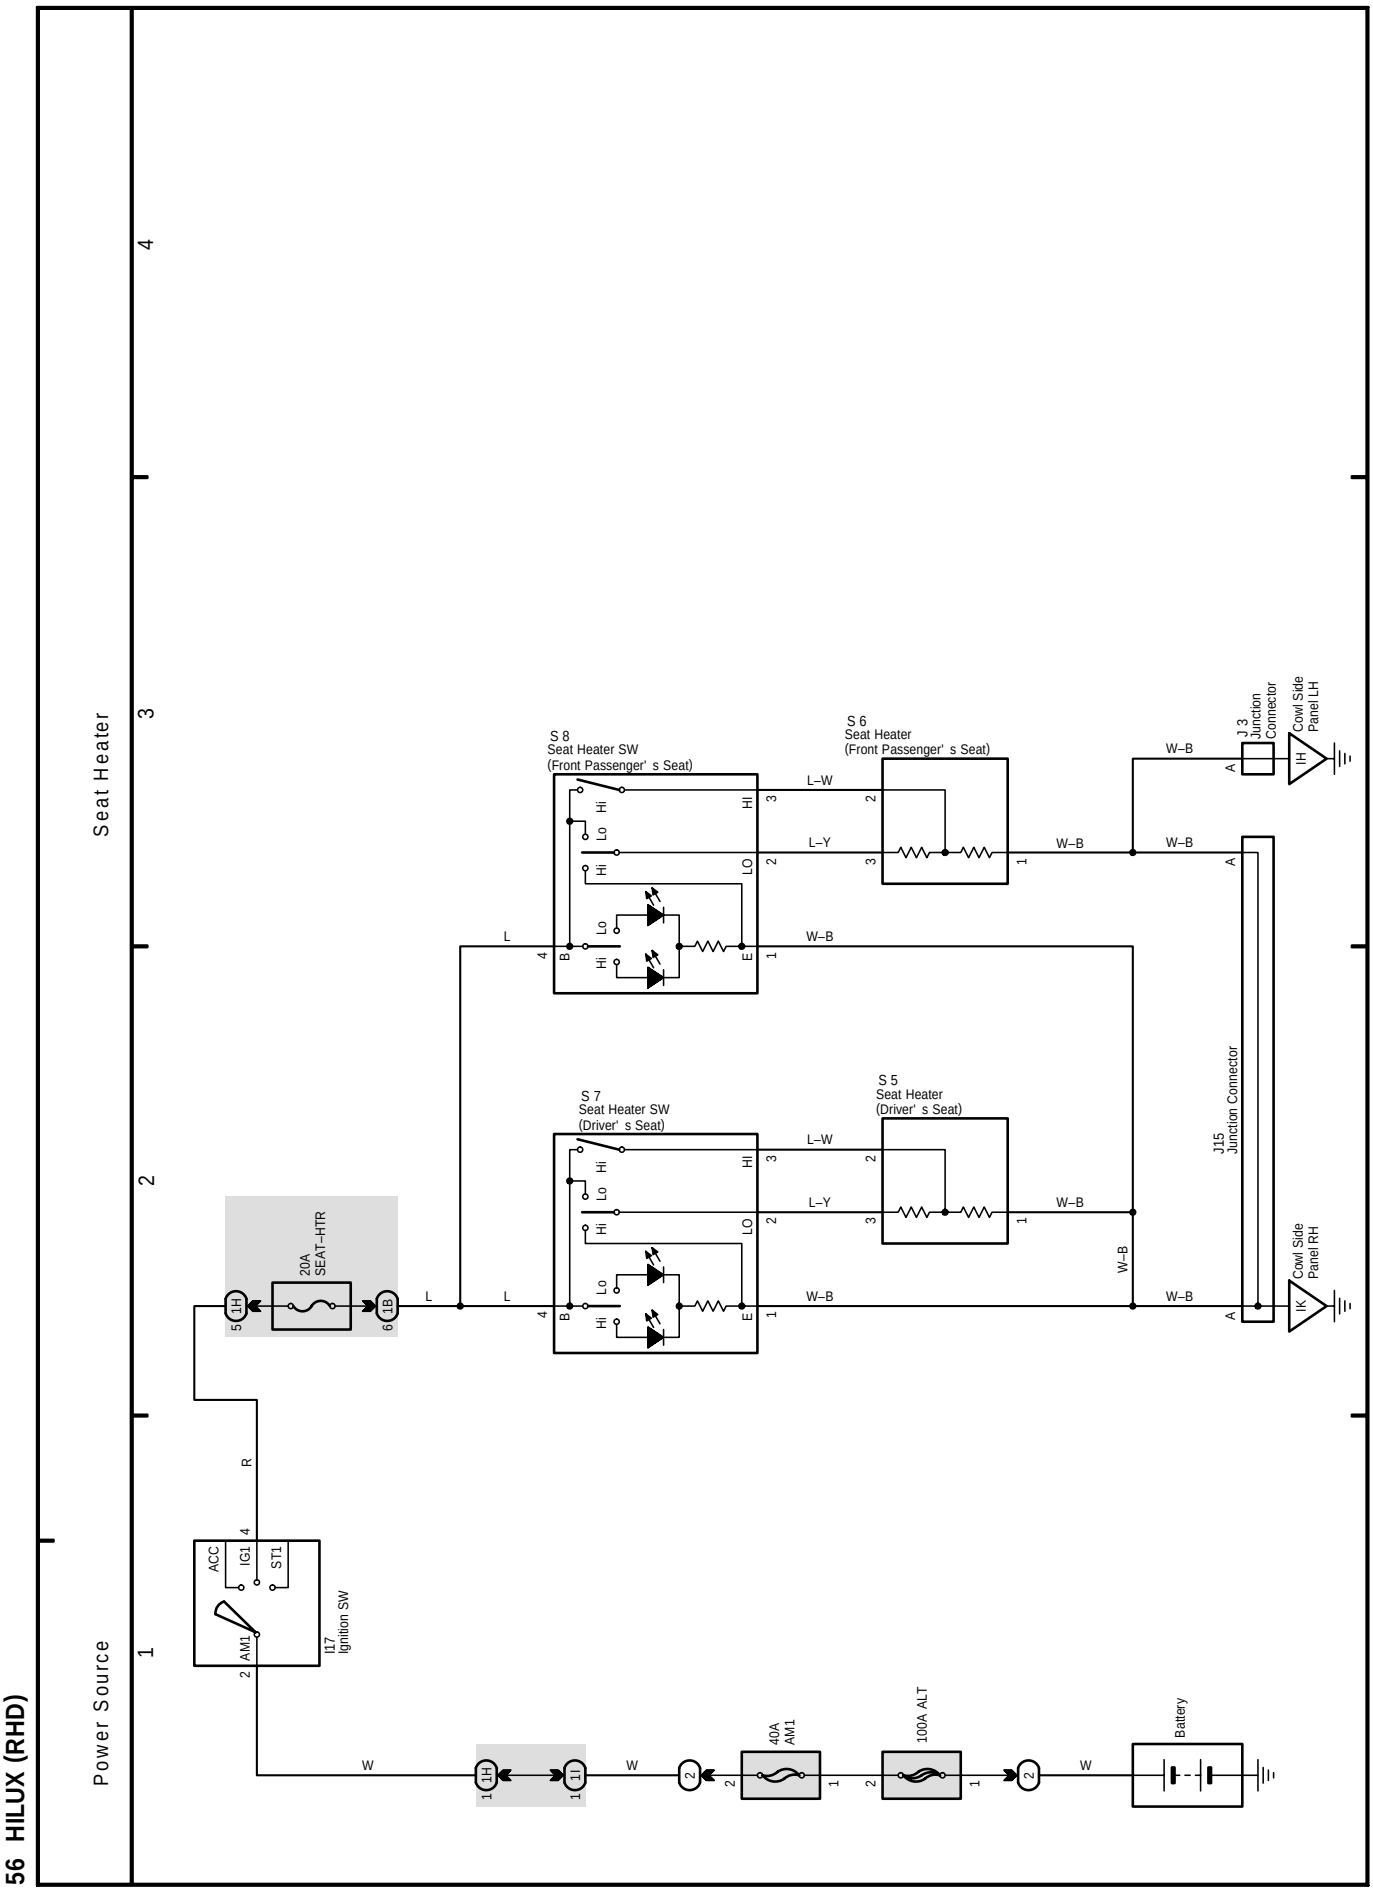

56 HILUX (RHD)
Power Source
Seat Heater
1
2
3
4
I17
Ignition SW
ACC
IG1
ST1
AM1
R
W
20A
SEAT–HTR
1H
1B
1I
2
40A
AM1
100A ALT
Battery
S 8
Seat Heater SW
(Front Passenger' s Seat)
S 7
Seat Heater SW
(Driver' s Seat)
S 6
Seat Heater
(Front Passenger' s Seat)
S 5
Seat Heater
(Driver' s Seat)
Hi
Lo
HI
LO
B
E
L
L–W
L–Y
W–B
J3
Junction
Connector
J15
Junction Connector
Cowl Side
Panel LH
Cowl Side
Panel RH
IH
IK
A