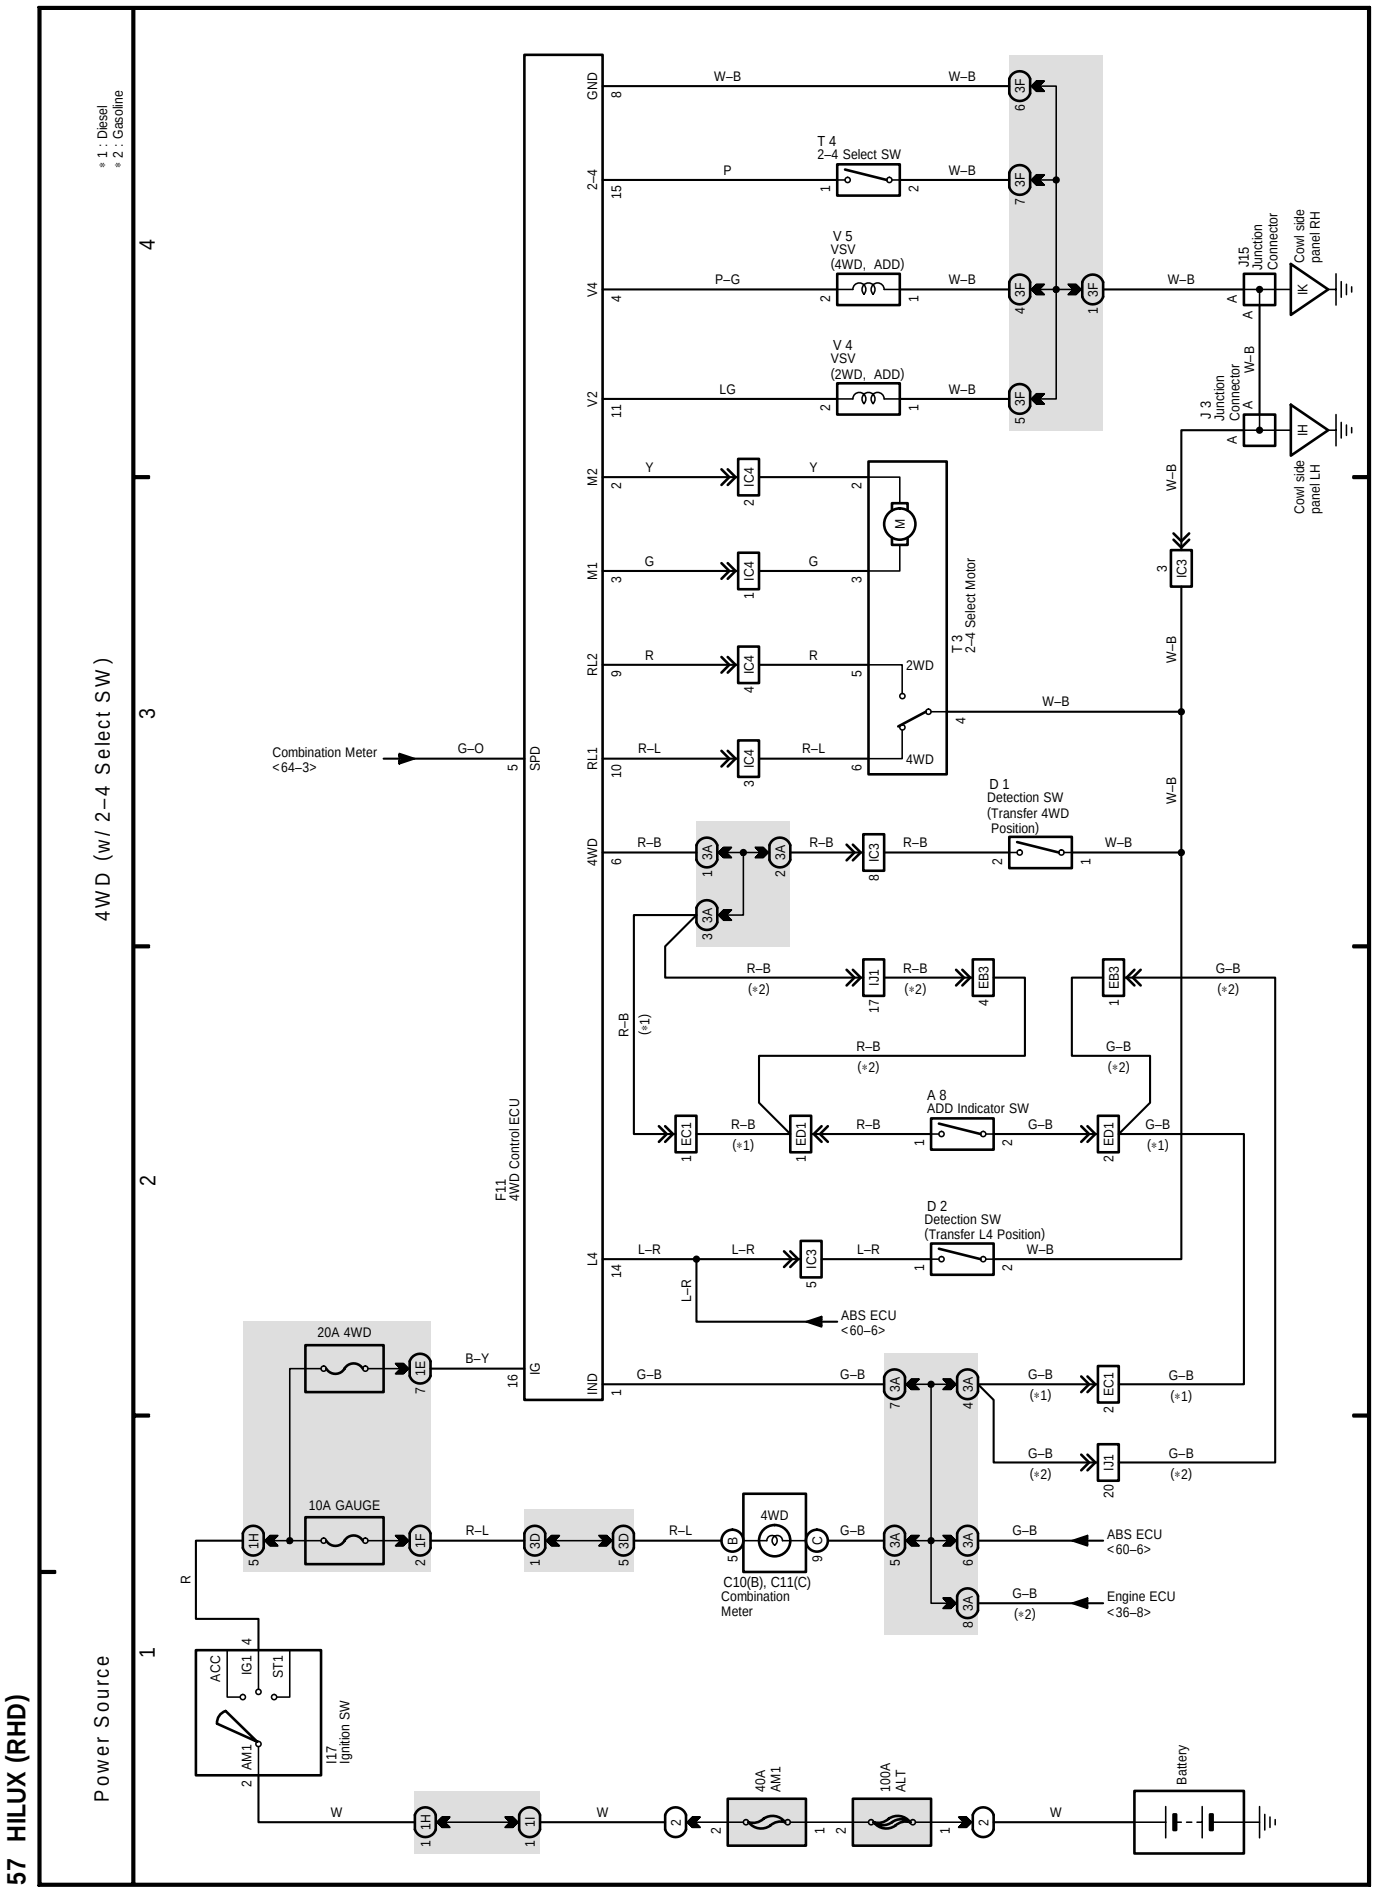

57 HILUX (RHD)
Power Source
4WD (w/ 2–4 Select SW)
*1 : Diesel
*2 : Gasoline
T 4
2–4 Select SW
V 5
VSV
(4WD, ADD)
V 4
VSV
(2WD, ADD)
T 3
2–4 Select Motor
2WD
4WD
D 1
Detection SW
(Transfer 4WD
Position)
D 2
Detection SW
(Transfer L4 Position)
A 8
ADD Indicator SW
J15
Junction
Connector
Cowl side
panel RH
J 3
Junction
Connector
Cowl side
panel LH
Combination Meter
<64–3>
F11
4WD Control ECU
ABS ECU
<60–6>
Engine ECU
<36–8>
C10(B), C11(C)
Combination
Meter
20A 4WD
10A GAUGE
40A
AM1
100A
ALT
Battery
I17
Ignition SW
ACC
IG1
ST1
AM1