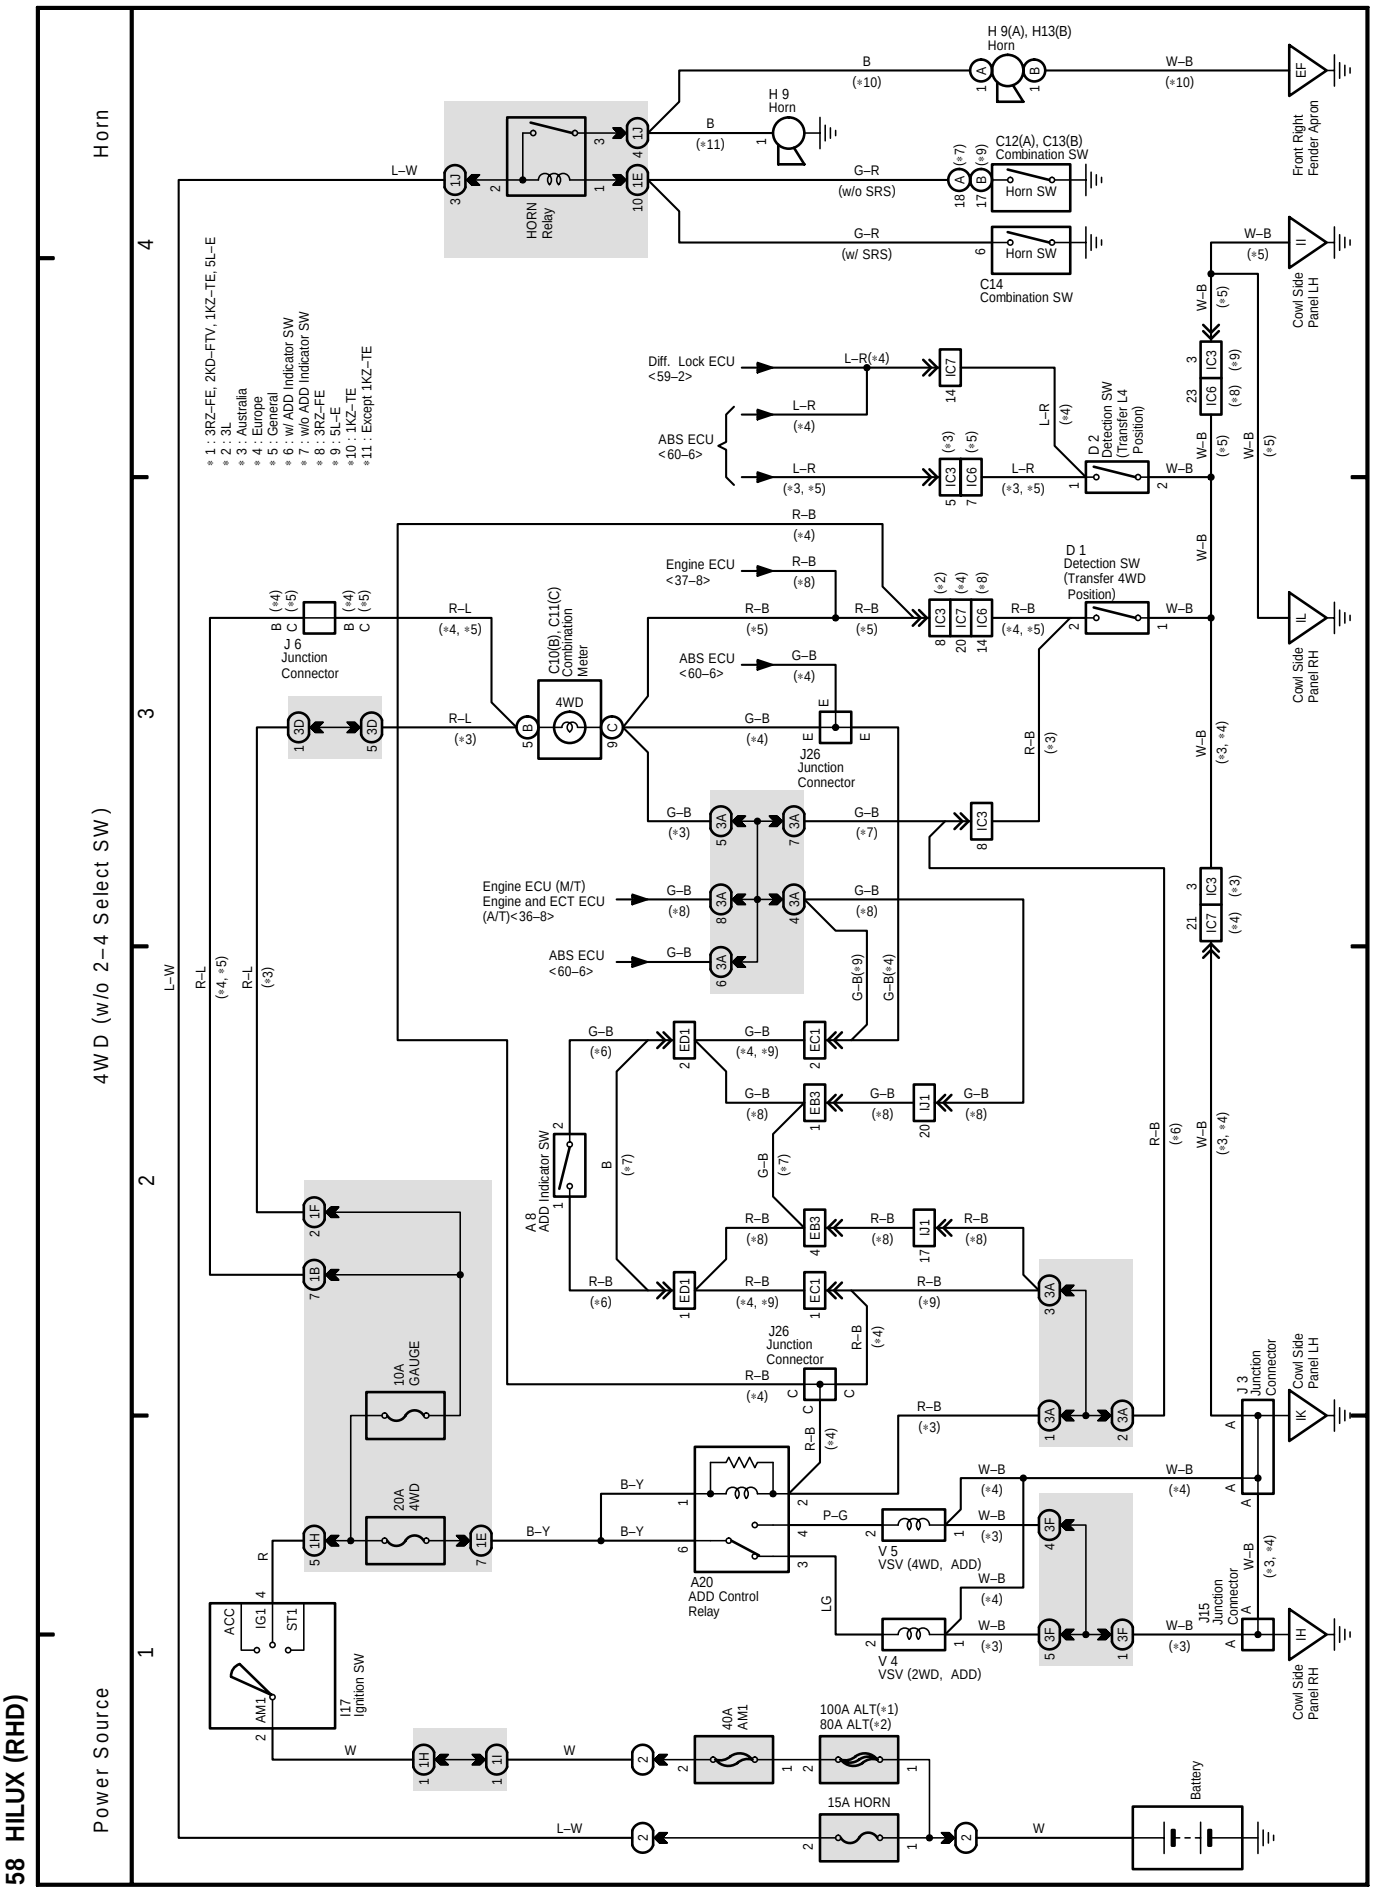

Horn
4WD (w/o 2–4 Select SW)
Power Source
58 HILUX (RHD)
H 9(A), H13(B) Horn
H 9 Horn
C12(A), C13(B) Combination SW
Horn SW
C14 Combination SW
HORN Relay
Front Right Fender Apron
Cowl Side Panel LH
Cowl Side Panel RH
Diff. Lock ECU <59–2>
ABS ECU <60–6>
D 2 Detection SW (Transfer L4 Position)
D 1 Detection SW (Transfer 4WD Position)
Engine ECU <37–8>
Engine ECU (M/T) Engine and ECT ECU (A/T)<36–8>
J 6 Junction Connector
C10(B), C11(C) Combination Meter
4WD
J26 Junction Connector
A 8 ADD Indicator SW
J 3 Junction Connector
J15 Junction Connector
10A GAUGE
20A 4WD
A20 ADD Control Relay
V 5 VSV (4WD, ADD)
V 4 VSV (2WD, ADD)
I17 Ignition SW
ACC
IG1
ST1
40A AM1
100A ALT(*1) 80A ALT(*2)
15A HORN
Battery
*1 : 3RZ–FE, 2KD–FTV, 1KZ–TE, 5L–E
*2 : 3L
*3 : Australia
*4 : Europe
*5 : General
*6 : w/ ADD Indicator SW
*7 : w/o ADD Indicator SW
*8 : 3RZ–FE
*9 : 5L–E
*10 : 1KZ–TE
*11 : Except 1KZ–TE