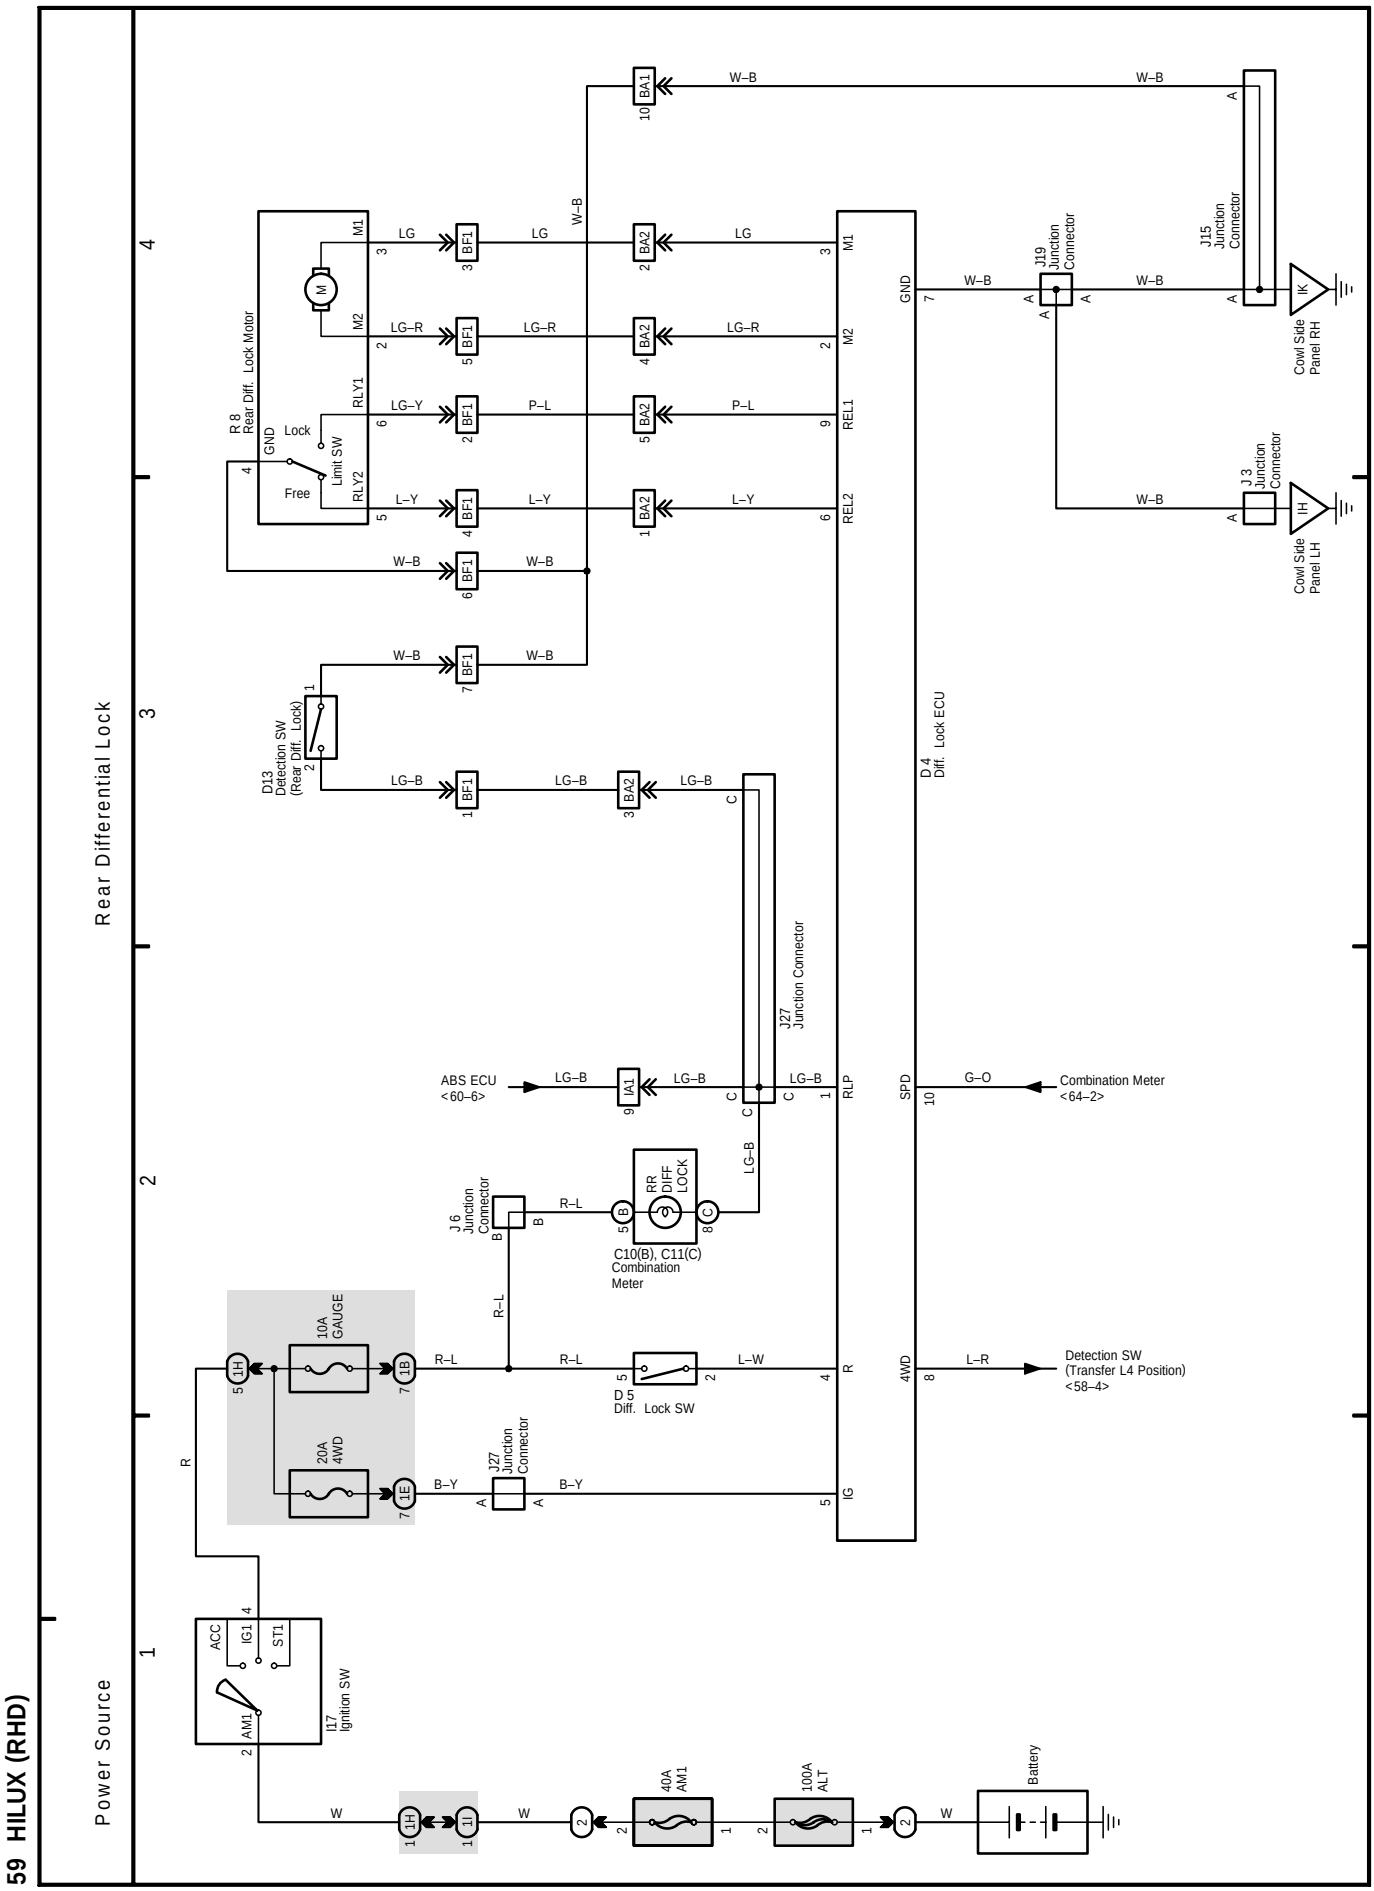

59 HILUX (RHD)
Power Source
Rear Differential Lock
R 8
Rear Diff. Lock Motor
Lock
Free
Limit SW
GND
M1
M2
RLY1
RLY2
D13
Detection SW
(Rear Diff. Lock)
D 4
Diff. Lock ECU
J27
Junction Connector
J19
Junction Connector
J15
Junction Connector
J3
Junction Connector
Cowl Side
Panel RH
Cowl Side
Panel LH
ABS ECU
<60–6>
Combination Meter
<64–2>
J6
Junction Connector
RR
DIFF
LOCK
C10(B), C11(C)
Combination
Meter
D 5
Diff. Lock SW
Detection SW
(Transfer L4 Position)
<58–4>
10A
GAUGE
20A
4WD
I17
Ignition SW
ACC
IG1
ST1
AM1
40A
AM1
100A
ALT
Battery
W–B
LG
LG–R
LG–Y
L–Y
LG–B
P–L
R–L
L–W
B–Y
G–O
L–R
W