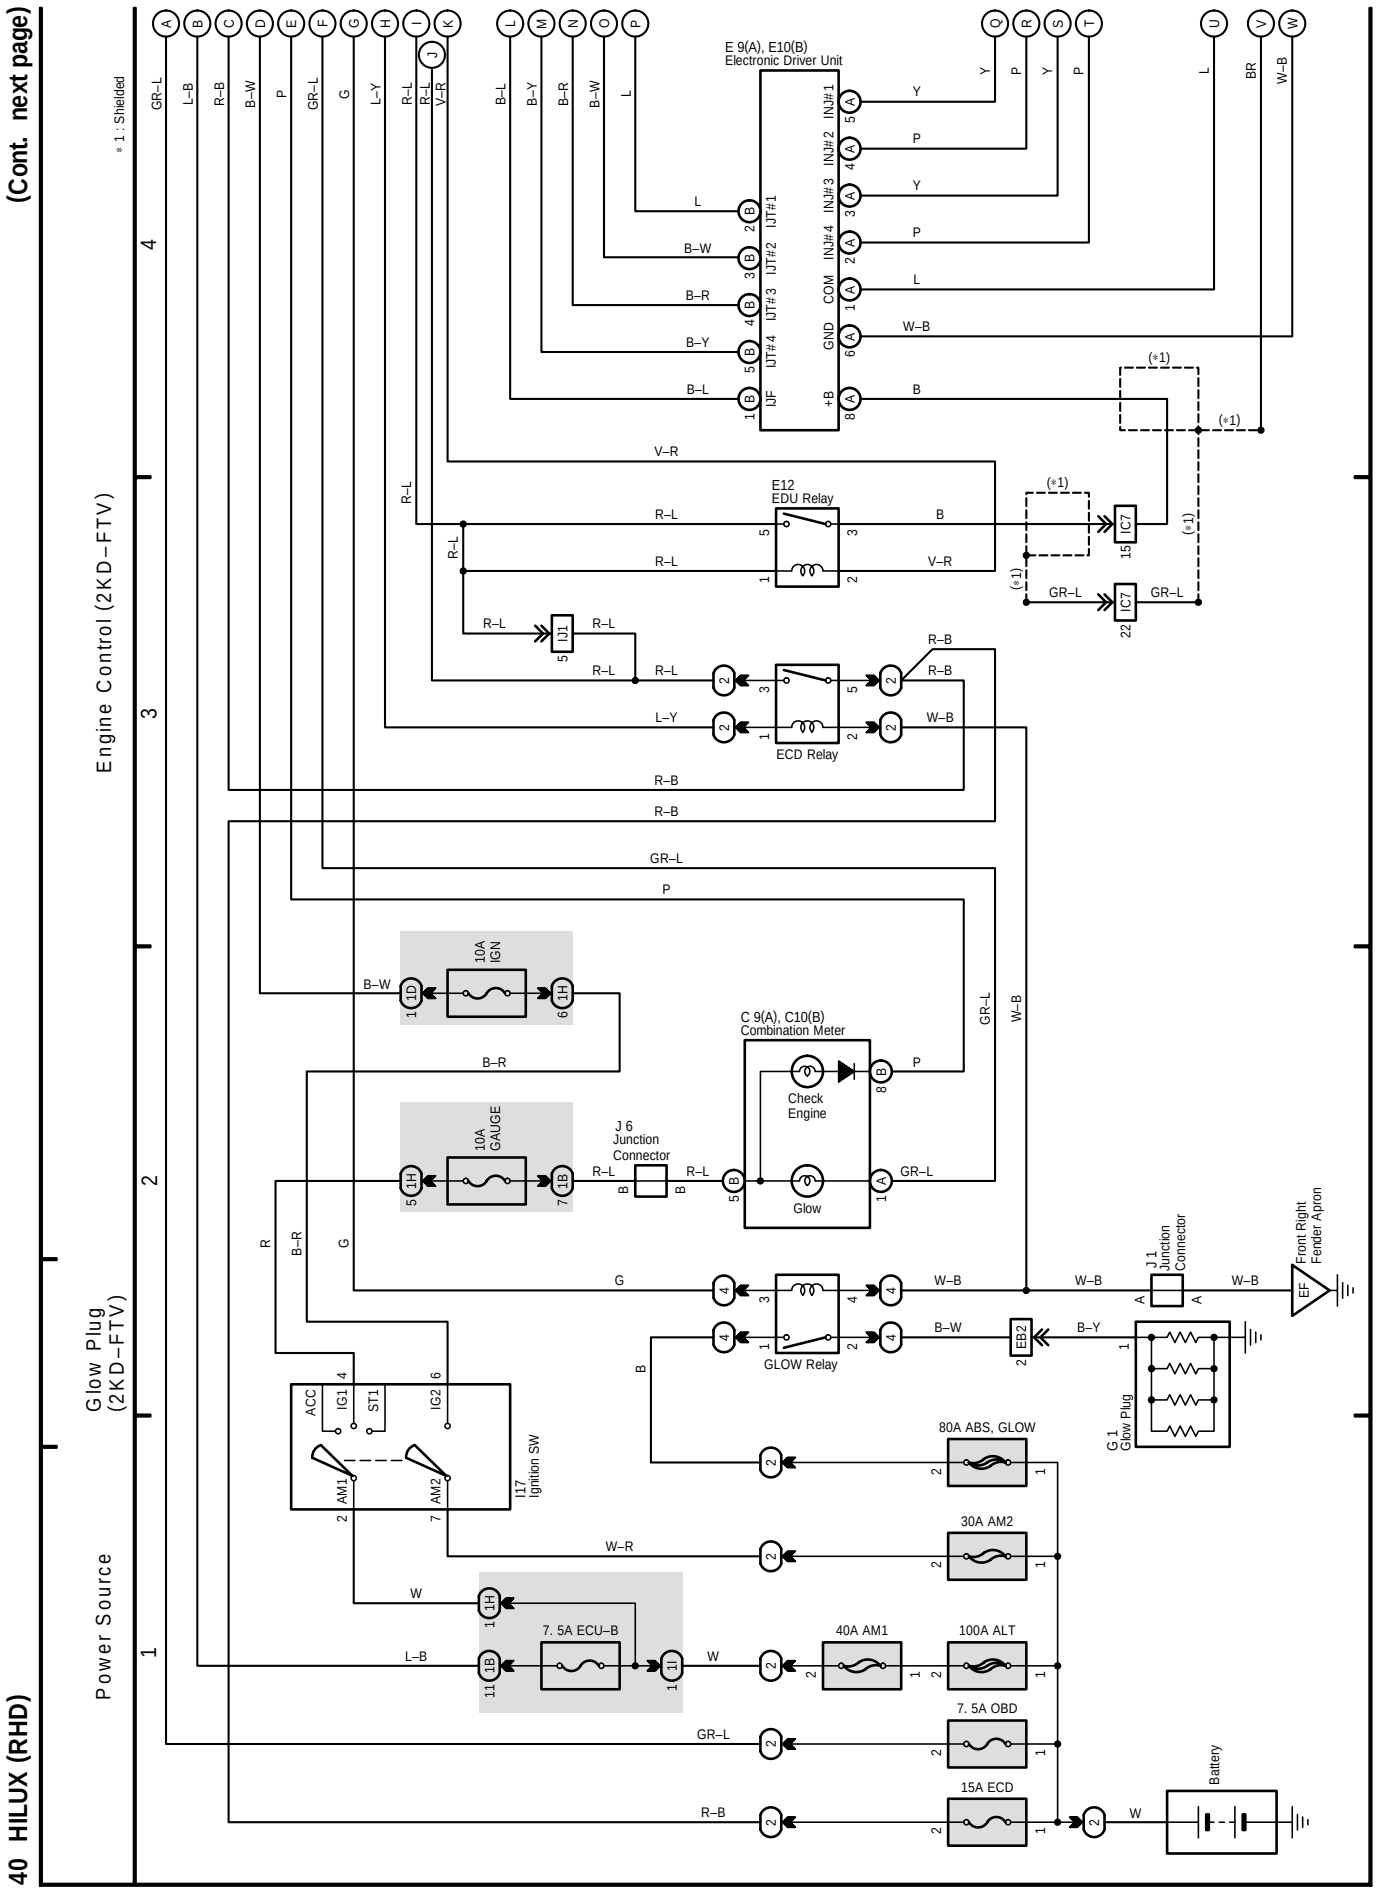
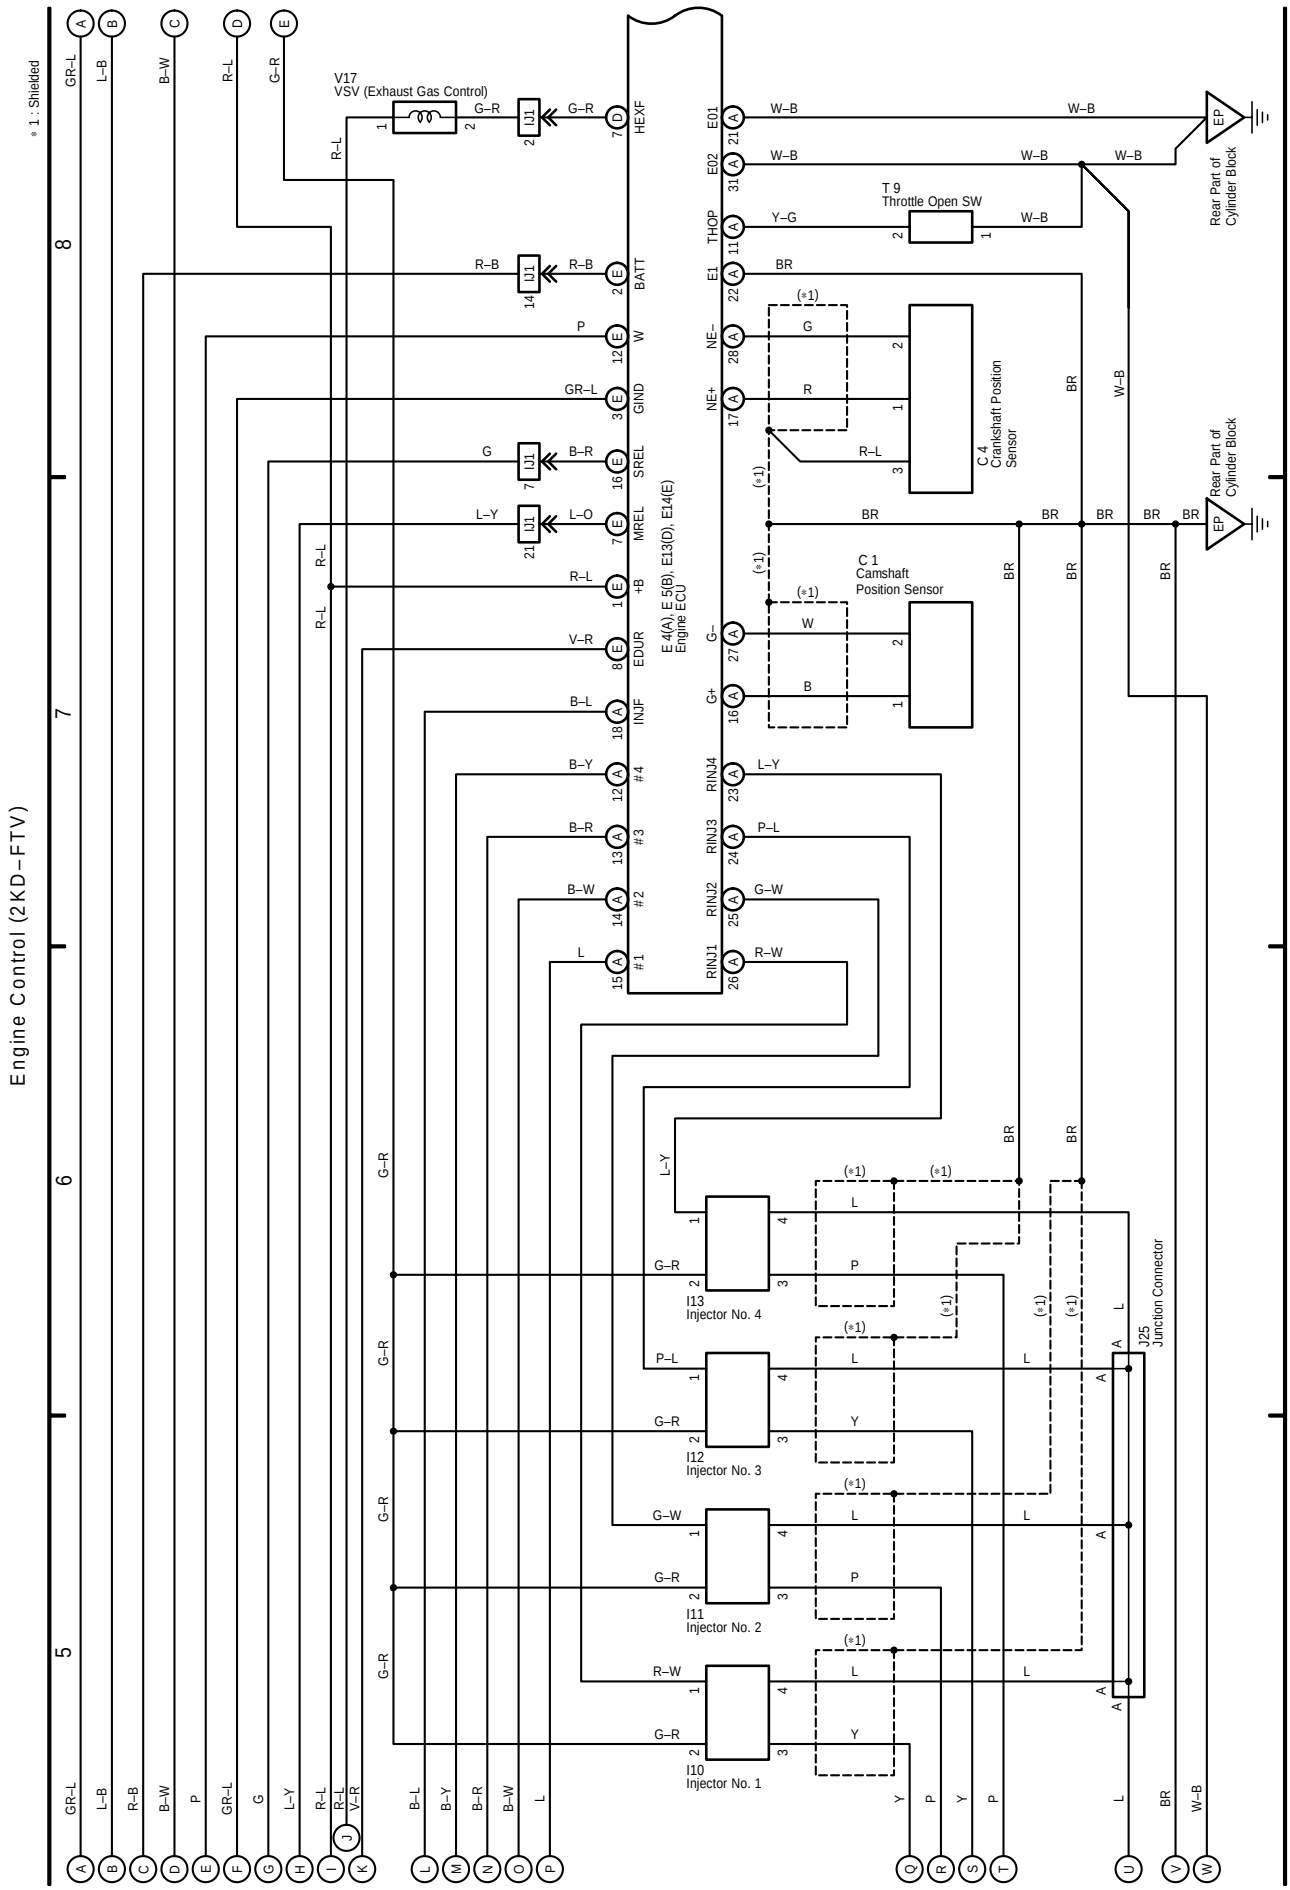
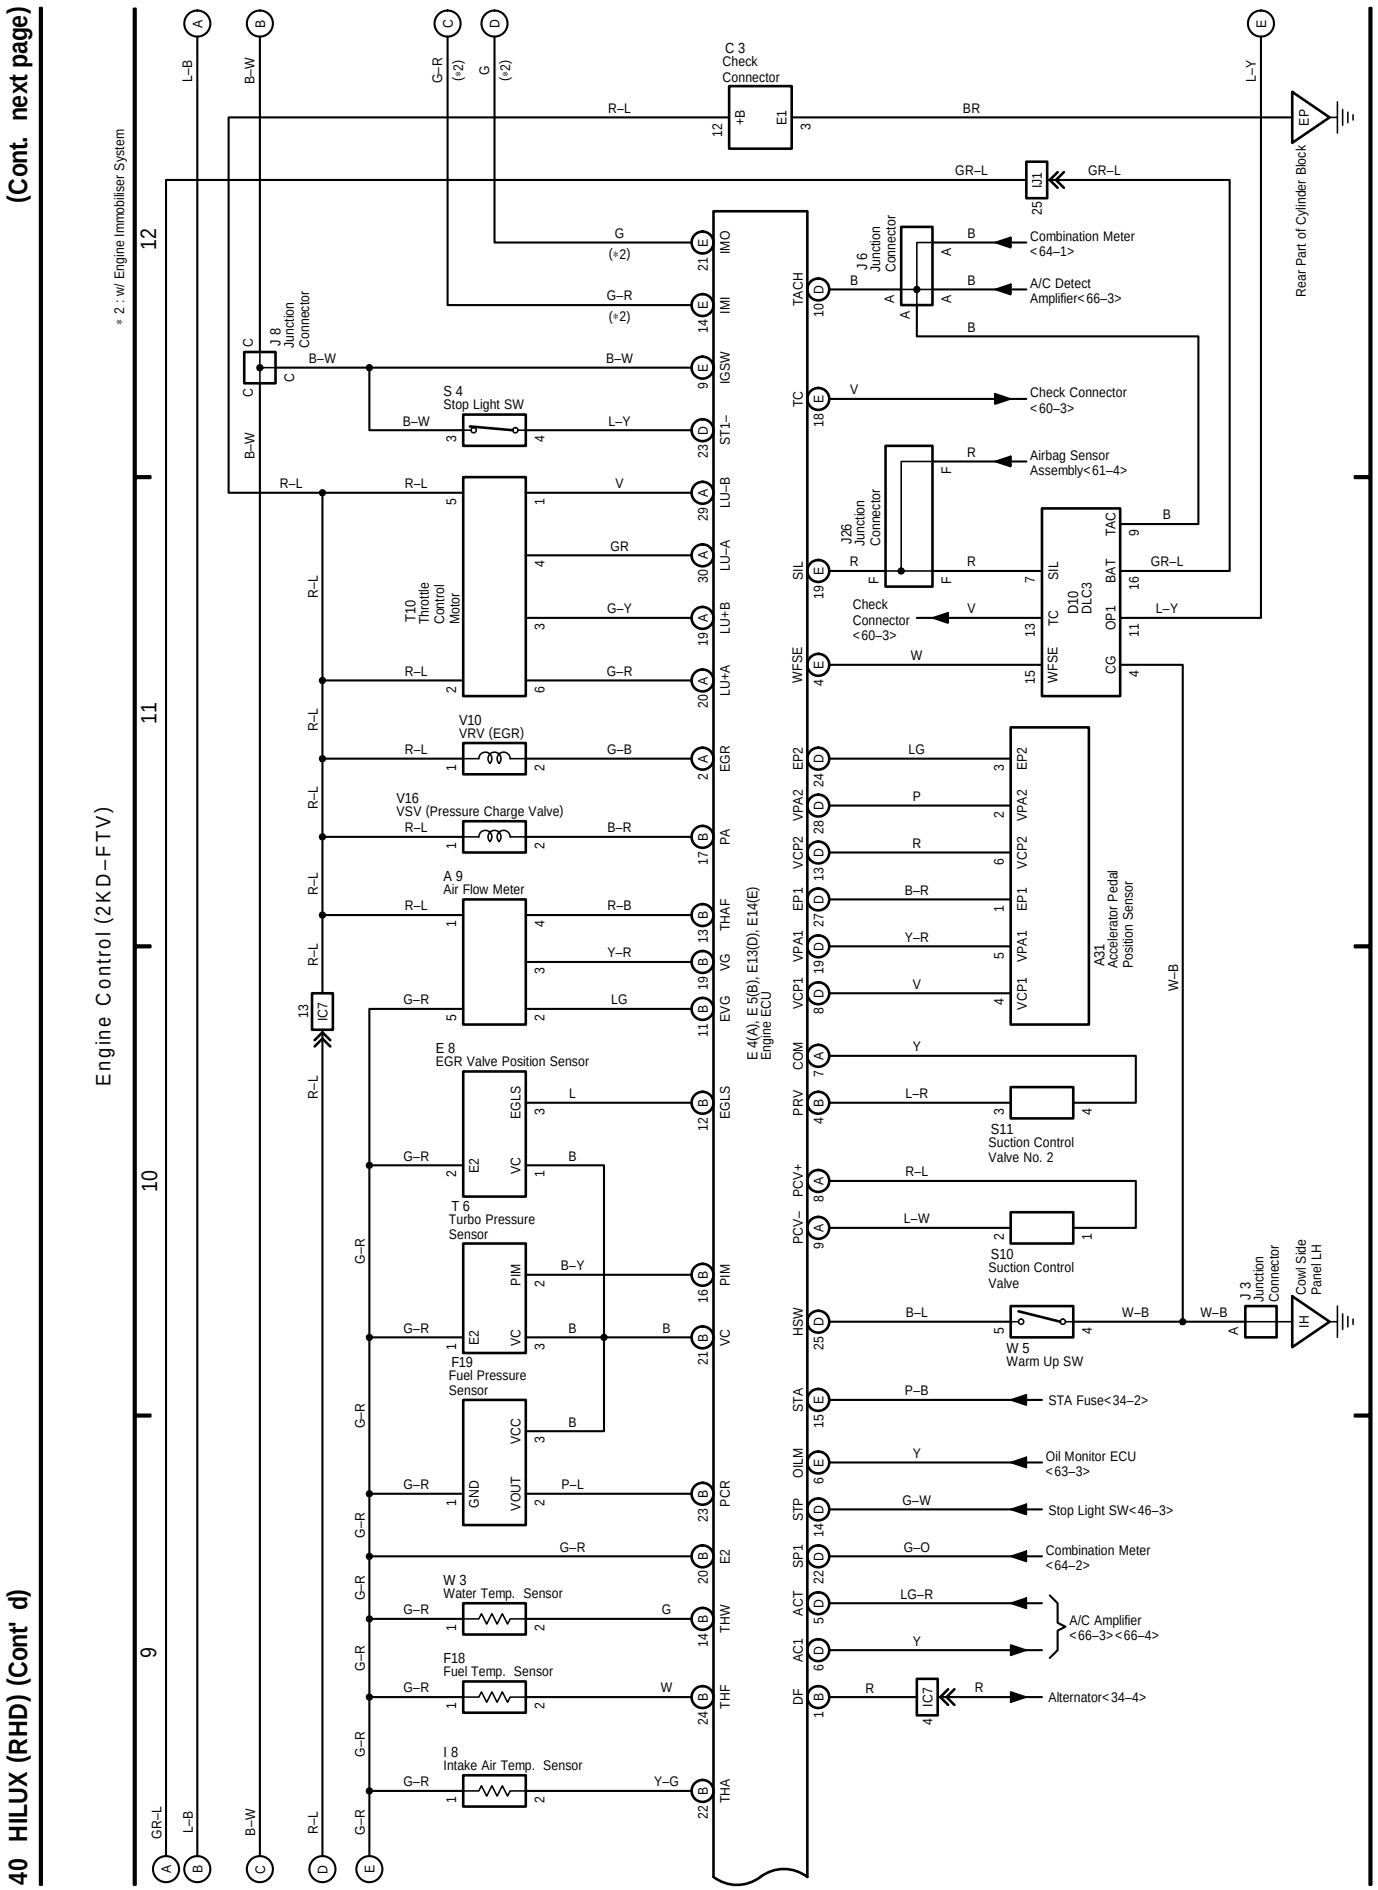
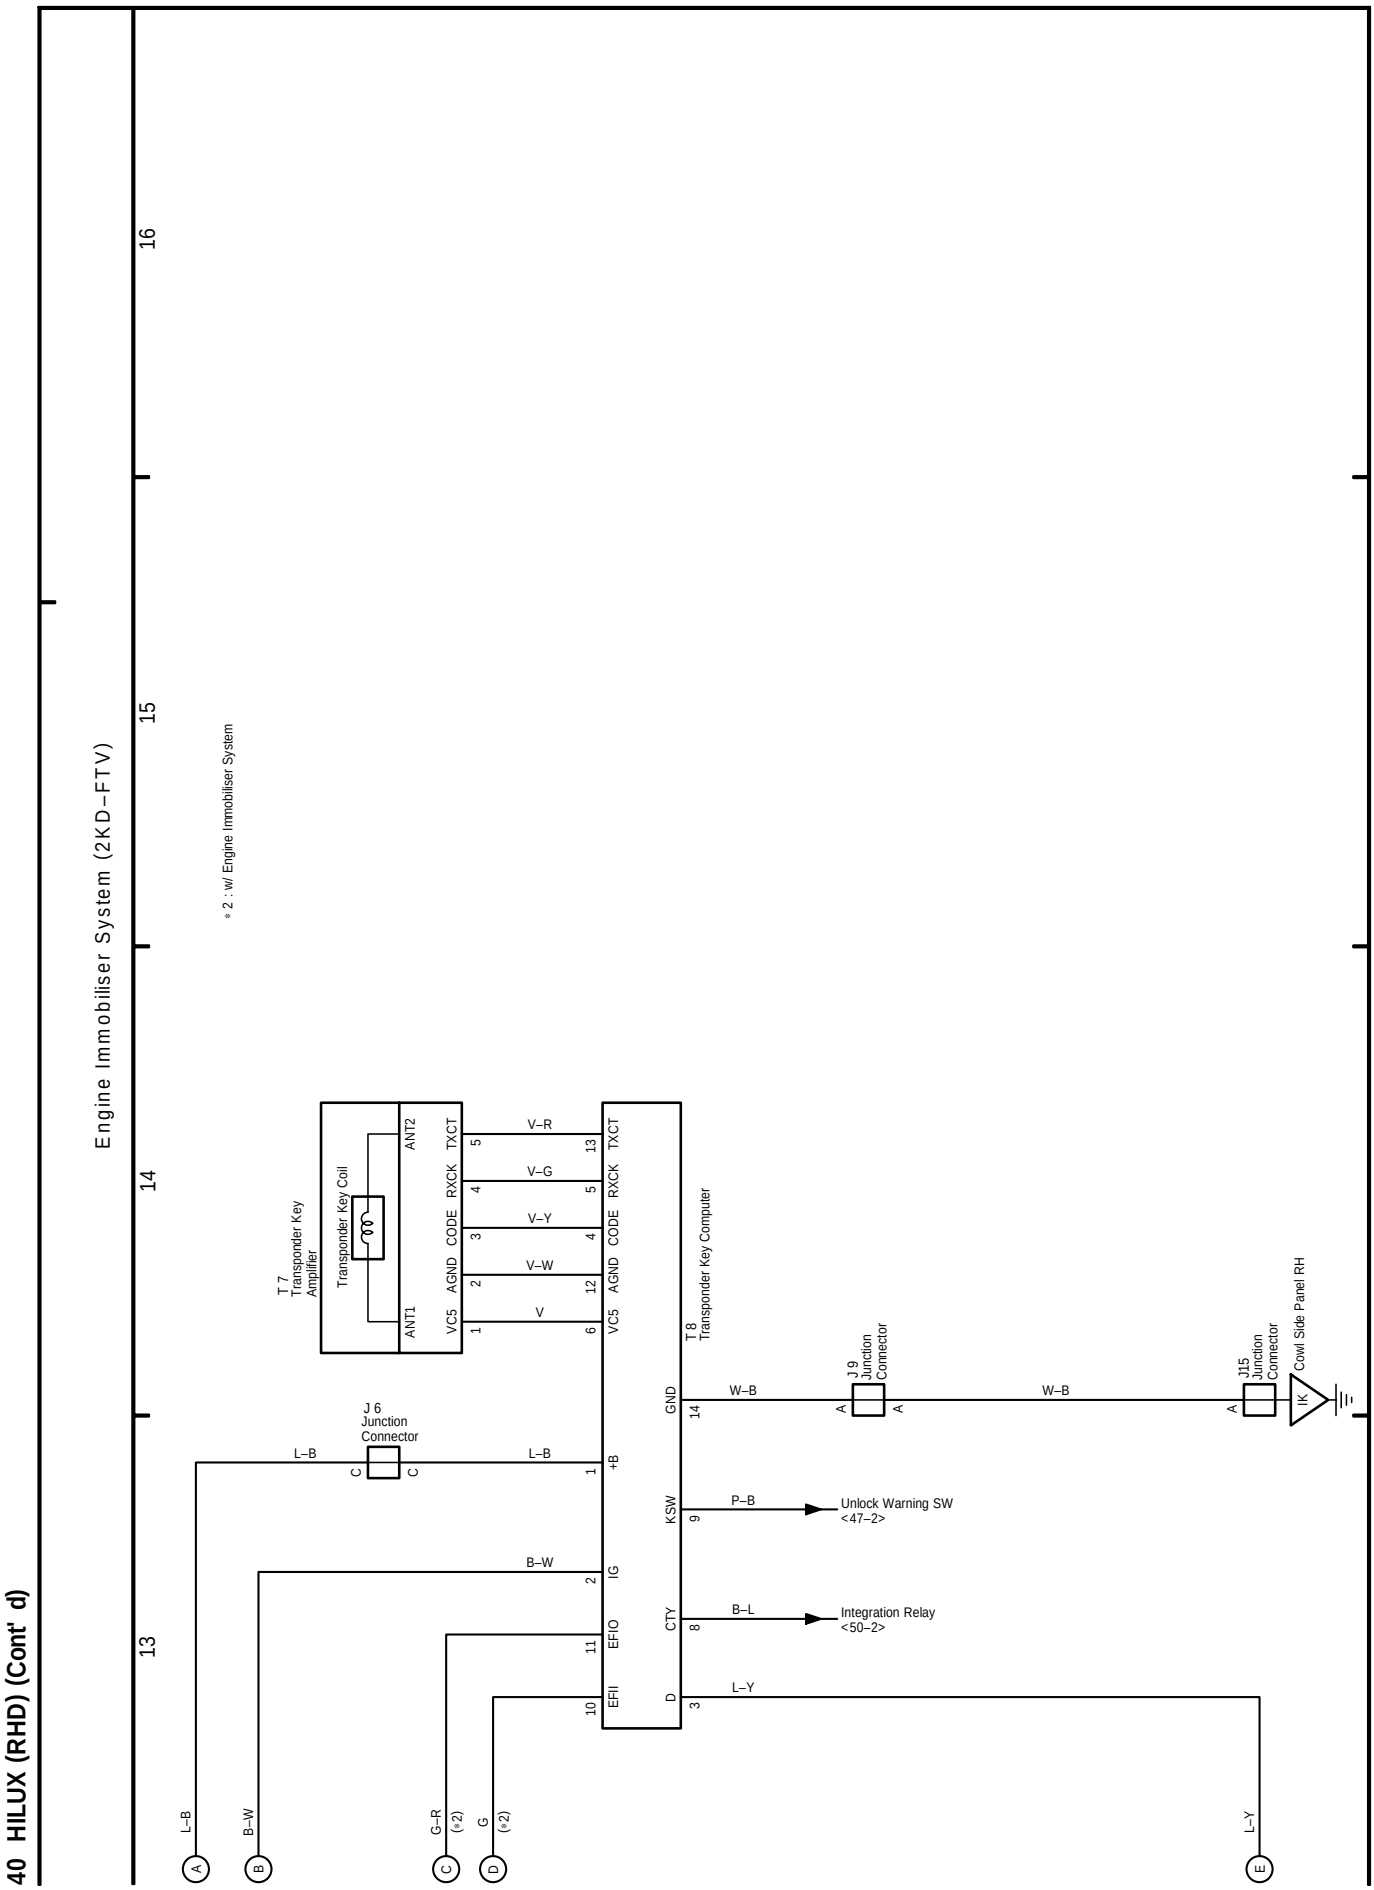

(Cont. next page)
40 HILUX (RHD)
Power Source
Glow Plug (2KD–FTV)
Engine Control (2KD–FTV)
* 1 : Shielded
E 9(A), E10(B) Electronic Driver Unit
E12 EDU Relay
ECD Relay
GLOW Relay
J 6 Junction Connector
J 1 Junction Connector
C 9(A), C10(B) Combination Meter
Check Engine
Glow
10A IGN
10A GAUGE
i17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
80A ABS, GLOW
30A AM2
7. 5A ECU–B
40A AM1
100A ALT
7. 5A OBD
15A ECD
Battery
G 1 Glow Plug
Front Right Fender Apron

40 HILUX (RHD) (Cont' d)

(Cont. next page)




(Cont. next page)
40 HILUX (RHD) (Cont' d)
Engine Control (2KD–FTV)
* 2 : w/ Engine Immobiliser System
C 3 Check Connector
J 8 Junction Connector
S 4 Stop Light SW
T10 Throttle Control Motor
V10 VRV (EGR)
V16 VSV (Pressure Charge Valve)
A 9 Air Flow Meter
E 8 EGR Valve Position Sensor
T 6 Turbo Pressure Sensor
F19 Fuel Pressure Sensor
W 3 Water Temp. Sensor
F18 Fuel Temp. Sensor
I 8 Intake Air Temp. Sensor
E 4(A), E 5(B), E13(D), E14(E) Engine ECU
J 6 Junction Connector
J26 Junction Connector
D10 DLC3
A31 Accelerator Pedal Position Sensor
S11 Suction Control Valve No. 2
S10 Suction Control Valve
W 5 Warm Up SW
J 3 Junction Connector
Cowl Side Panel LH
Rear Part of Cylinder Block
Combination Meter <64–1>
A/C Detect Amplifier< 66–3>
Check Connector <60–3>
Airbag Sensor Assembly< 61–4>
STA Fuse< 34–2>
Oil Monitor ECU <63–3>
Stop Light SW< 46–3>
Combination Meter <64–2>
A/C Amplifier <66–3><66–4>
Alternator< 34–4>


40 HILUX (RHD) (Cont' d)
Engine Immobiliser System (2KD–FTV)
13
14
15
16
* 2 : w/ Engine Immobiliser System
T 7
Transponder Key Amplifier
Transponder Key Coil
ANT2
ANT1
TXCT
RXCK
CODE
AGND
VC5
V–R
V–G
V–Y
V–W
V
T 8
Transponder Key Computer
J 6
Junction Connector
J 9
Junction Connector
J15
Junction Connector
Cowl Side Panel RH
L–B
B–W
G–R
G
L–Y
W–B
P–B
B–L
B–W
Unlock Warning SW
<47–2>
Integration Relay
<50–2>
+B
IG
EFIO
EFII
KSW
CTY
GND
(*2)