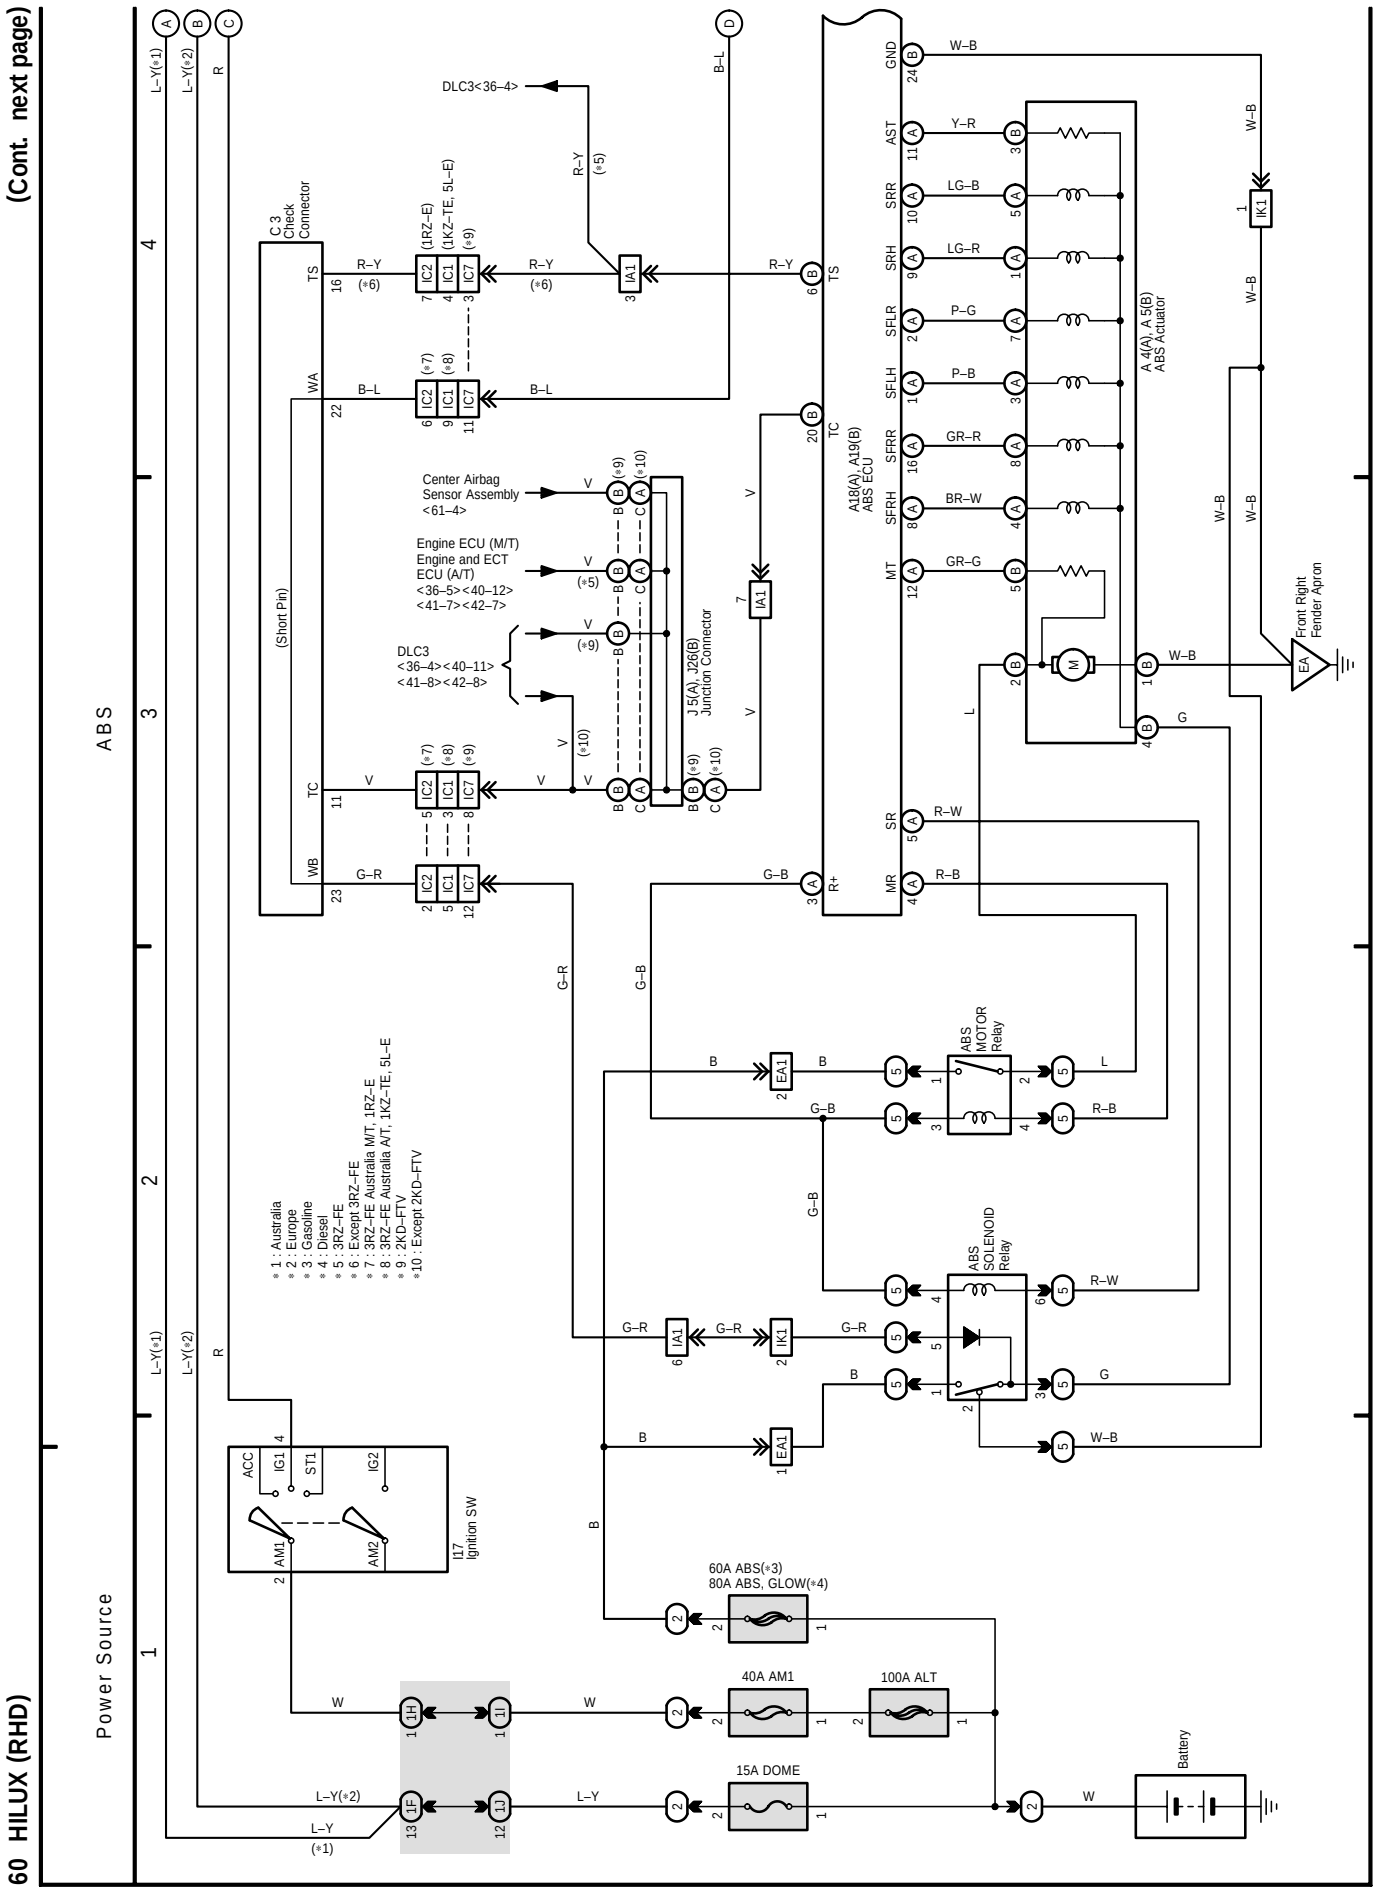

(Cont. next page)
60 HILUX (RHD)
ABS
Power Source
DLC3<36–4>
C 3 Check Connector
(Short Pin)
Center Airbag Sensor Assembly <61–4>
Engine ECU (M/T) Engine and ECT ECU (A/T) <36–5><40–12> <41–7><42–7>
DLC3 <36–4><40–11> <41–8><42–8>
J 5(A), J26(B) Junction Connector
A18(A), A19(B) ABS ECU
A 4(A), A 5(B) ABS Actuator
Front Right Fender Apron
ABS MOTOR Relay
ABS SOLENOID Relay
I17 Ignition SW
60A ABS(*3) 80A ABS, GLOW(*4)
40A AM1
100A ALT
15A DOME
Battery
*1 : Australia
*2 : Europe
*3 : Gasoline
*4 : Diesel
*5 : 3RZ–FE
*6 : Except 3RZ–FE
*7 : 3RZ–FE Australia M/T, 1RZ–E
*8 : 3RZ–FE Australia A/T, 1KZ–TE, 5L–E
*9 : 2KD–FTV
*10 : Except 2KD–FTV

60 HILUX (RHD) (Cont' d)

