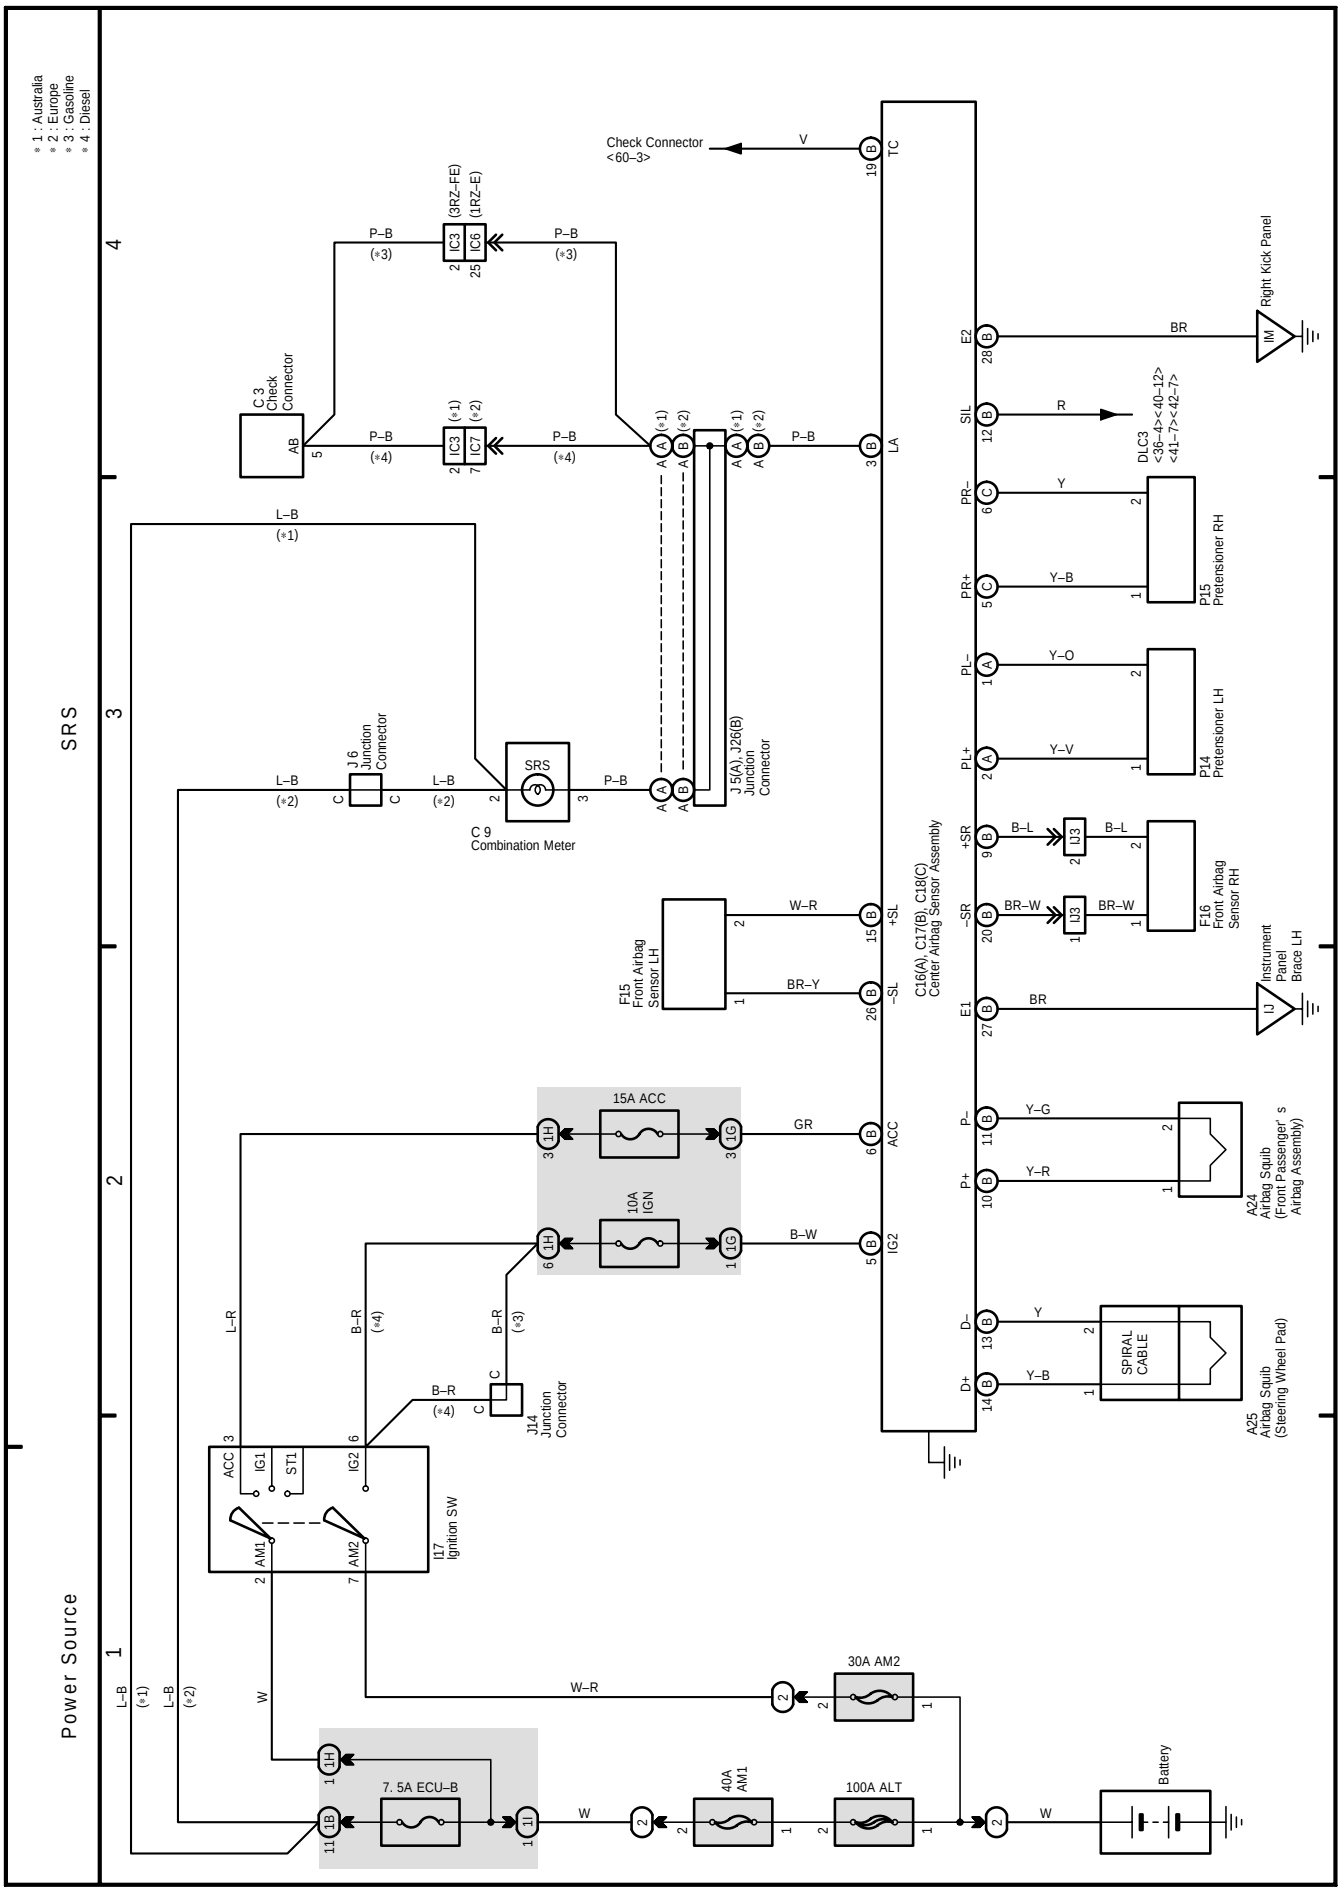

61 HILUX (RHD)
Power Source
SRS
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : Gasoline
* 4 : Diesel
Check Connector <60–3>
C 3 Check Connector
C 9 Combination Meter
J 6 Junction Connector
J 5(A), J26(B) Junction Connector
J14 Junction Connector
I17 Ignition SW
F15 Front Airbag Sensor LH
C16(A), C17(B), C18(C) Center Airbag Sensor Assembly
F16 Front Airbag Sensor RH
P15 Pretensioner RH
P14 Pretensioner LH
DLC3 <36–4><40–12> <41–7><42–7>
A24 Airbag Squib (Front Passenger' s Airbag Assembly)
A25 Airbag Squib (Steering Wheel Pad)
SPIRAL CABLE
Right Kick Panel
Instrument Panel Brace LH
15A ACC
10A IGN
7. 5A ECU–B
30A AM2
40A AM1
100A ALT
Battery