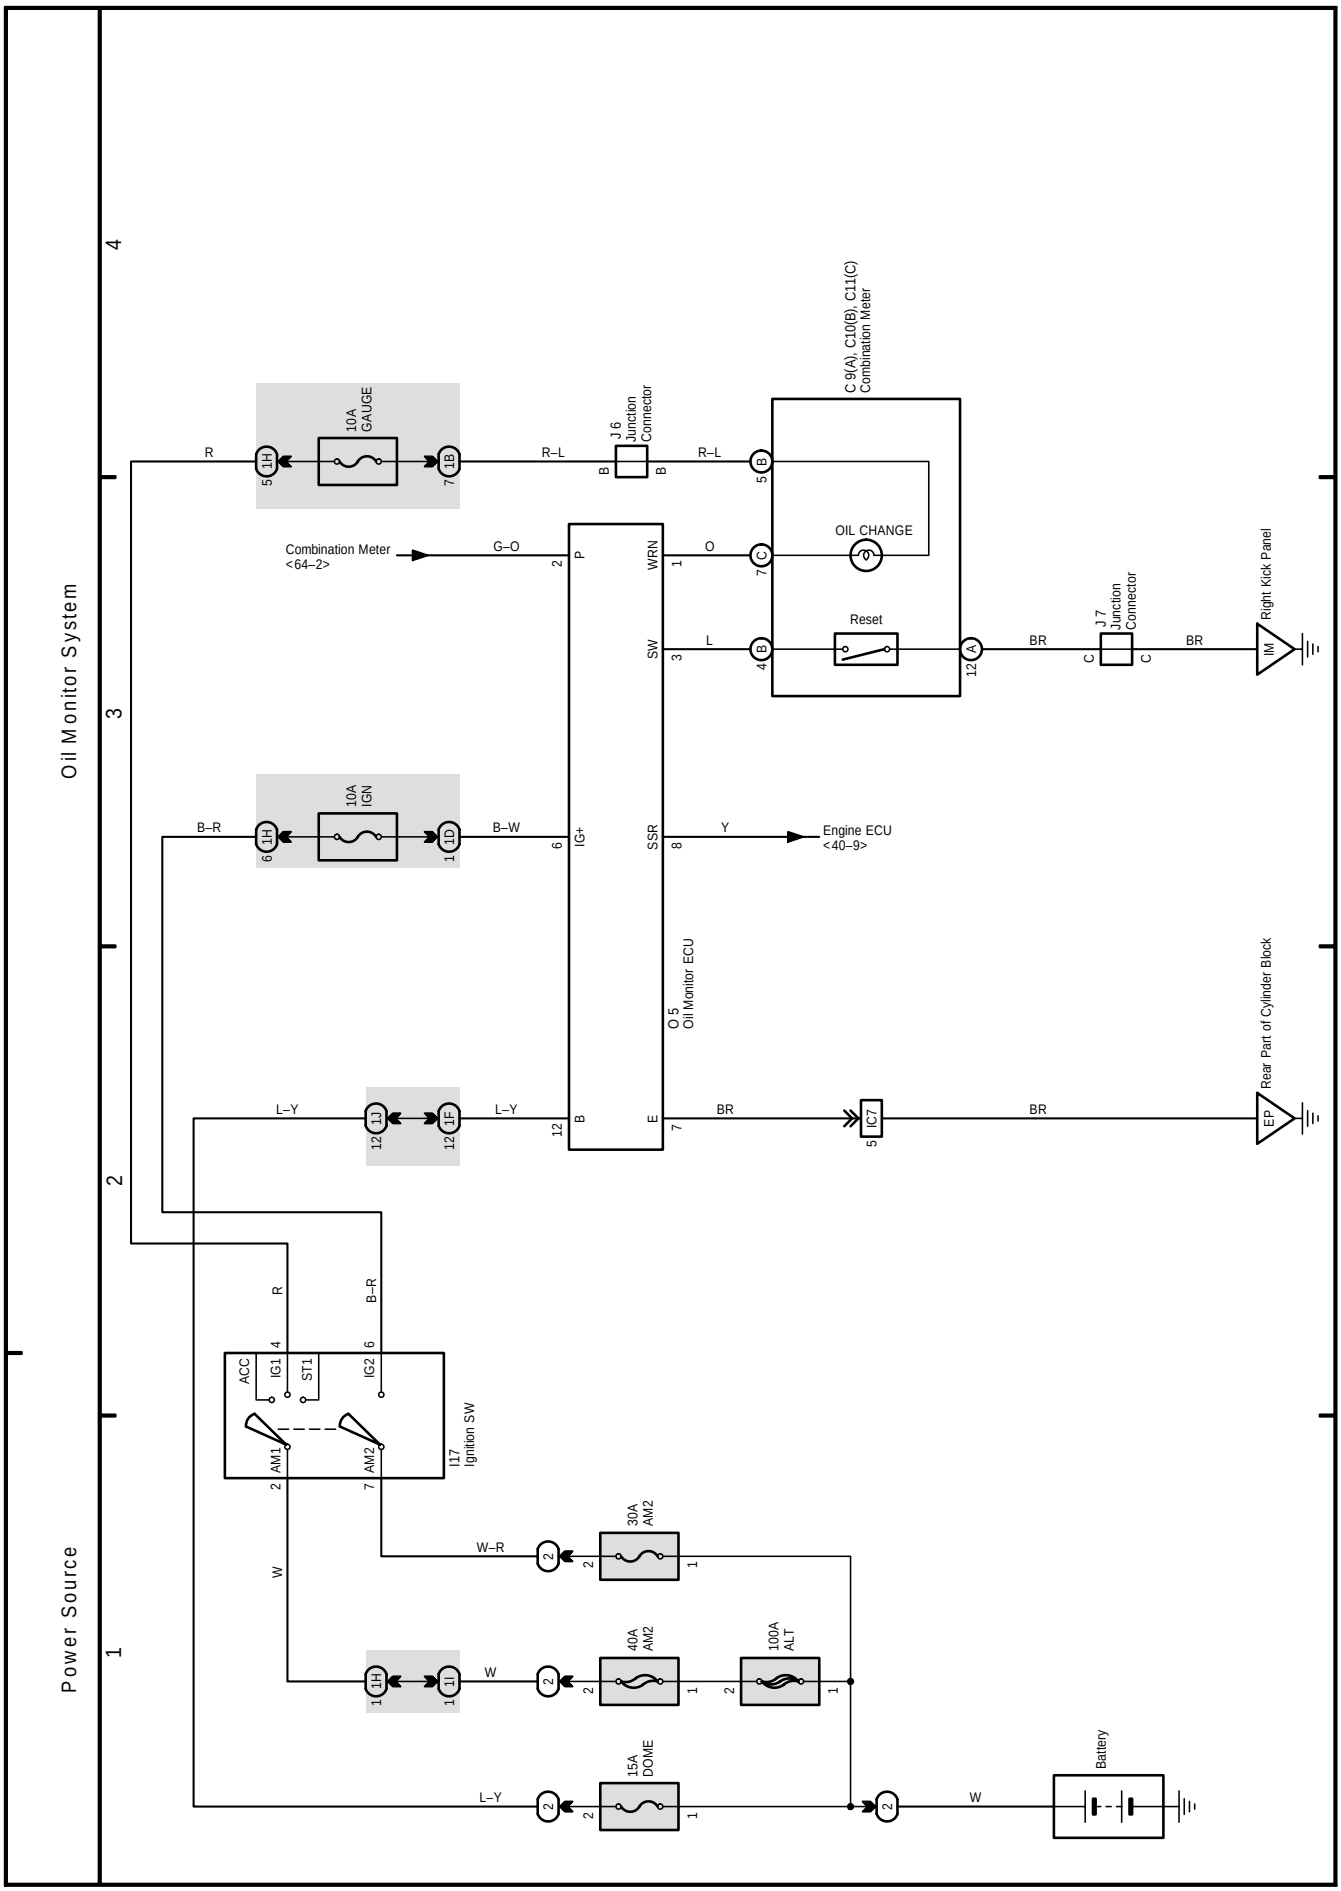

63 HILUX (RHD)
Power Source
Oil Monitor System
1
2
3
4
10A GAUGE
J 6 Junction Connector
C 9(A), C10(B), C11(C) Combination Meter
OIL CHANGE
Reset
J 7 Junction Connector
Right Kick Panel
Combination Meter <64–2>
10A IGN
Engine ECU <40–9>
O 5 Oil Monitor ECU
Rear Part of Cylinder Block
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
40A AM2
100A ALT
15A DOME
Battery