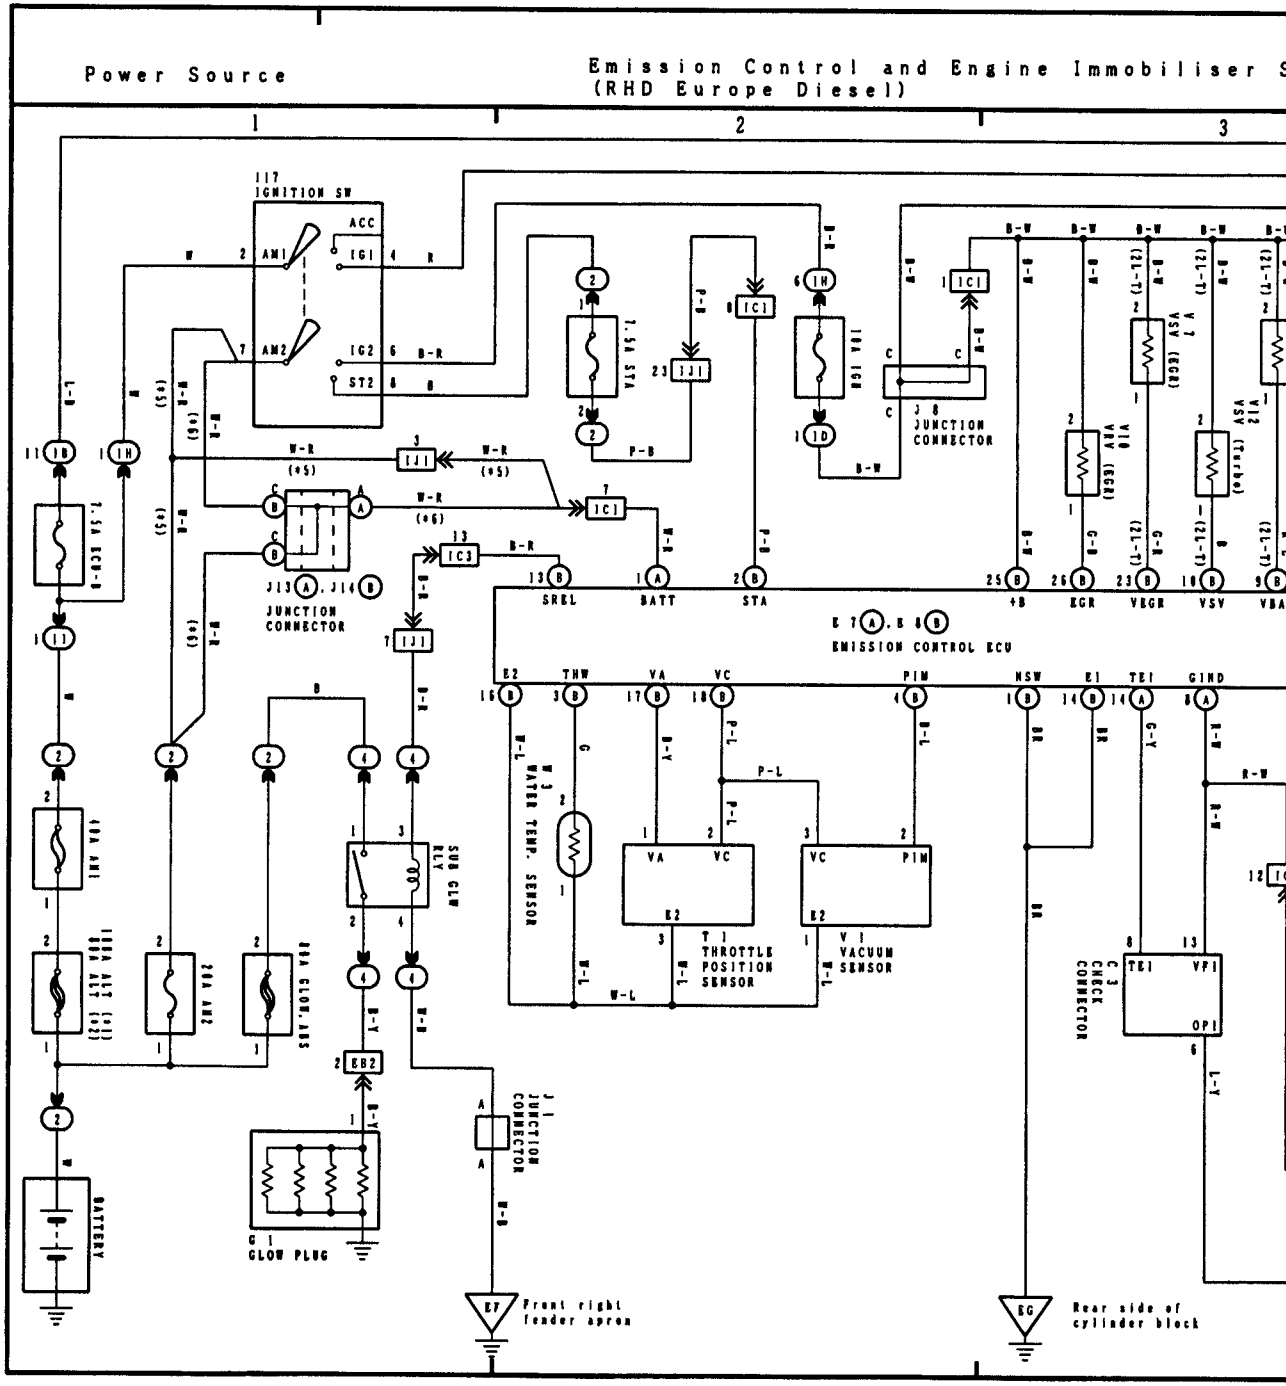

Power Source
Emission Control and Engine Immobiliser S
(RHD Europe Diesel)
1
2
3
I17
IGNITION SW
ACC
AM1
AM2
IG1
IG2
ST2
7.5A STA
15A IGN
J8
JUNCTION CONNECTOR
ASA (ECU)
ASA (Turbo)
J13, J14
JUNCTION CONNECTOR
7.5A ECU-B
10A ANT
10A ALT (1)(2)
20A ACC
20A CLOCK, ABS
SUB CLK RLY
GLOW PLUG
BATTERY
J1
JUNCTION CONNECTOR
E7
Front right fender apron
E 7, E 8
EMISSION CONTROL ECU
SREL
BATT
STA
+B
EGR
VEGR
VSV
VBA
WATER TEMP. SENSOR
THROTTLE POSITION SENSOR
VACUUM SENSOR
NSW
CHECK CONNECTOR
TEI
VPI
OPI
GIND
E6
Rear side of cylinder block

Emission Control and Engine Immobiliser S
(RHD Europe Diesel)

