

(Cont. next page)

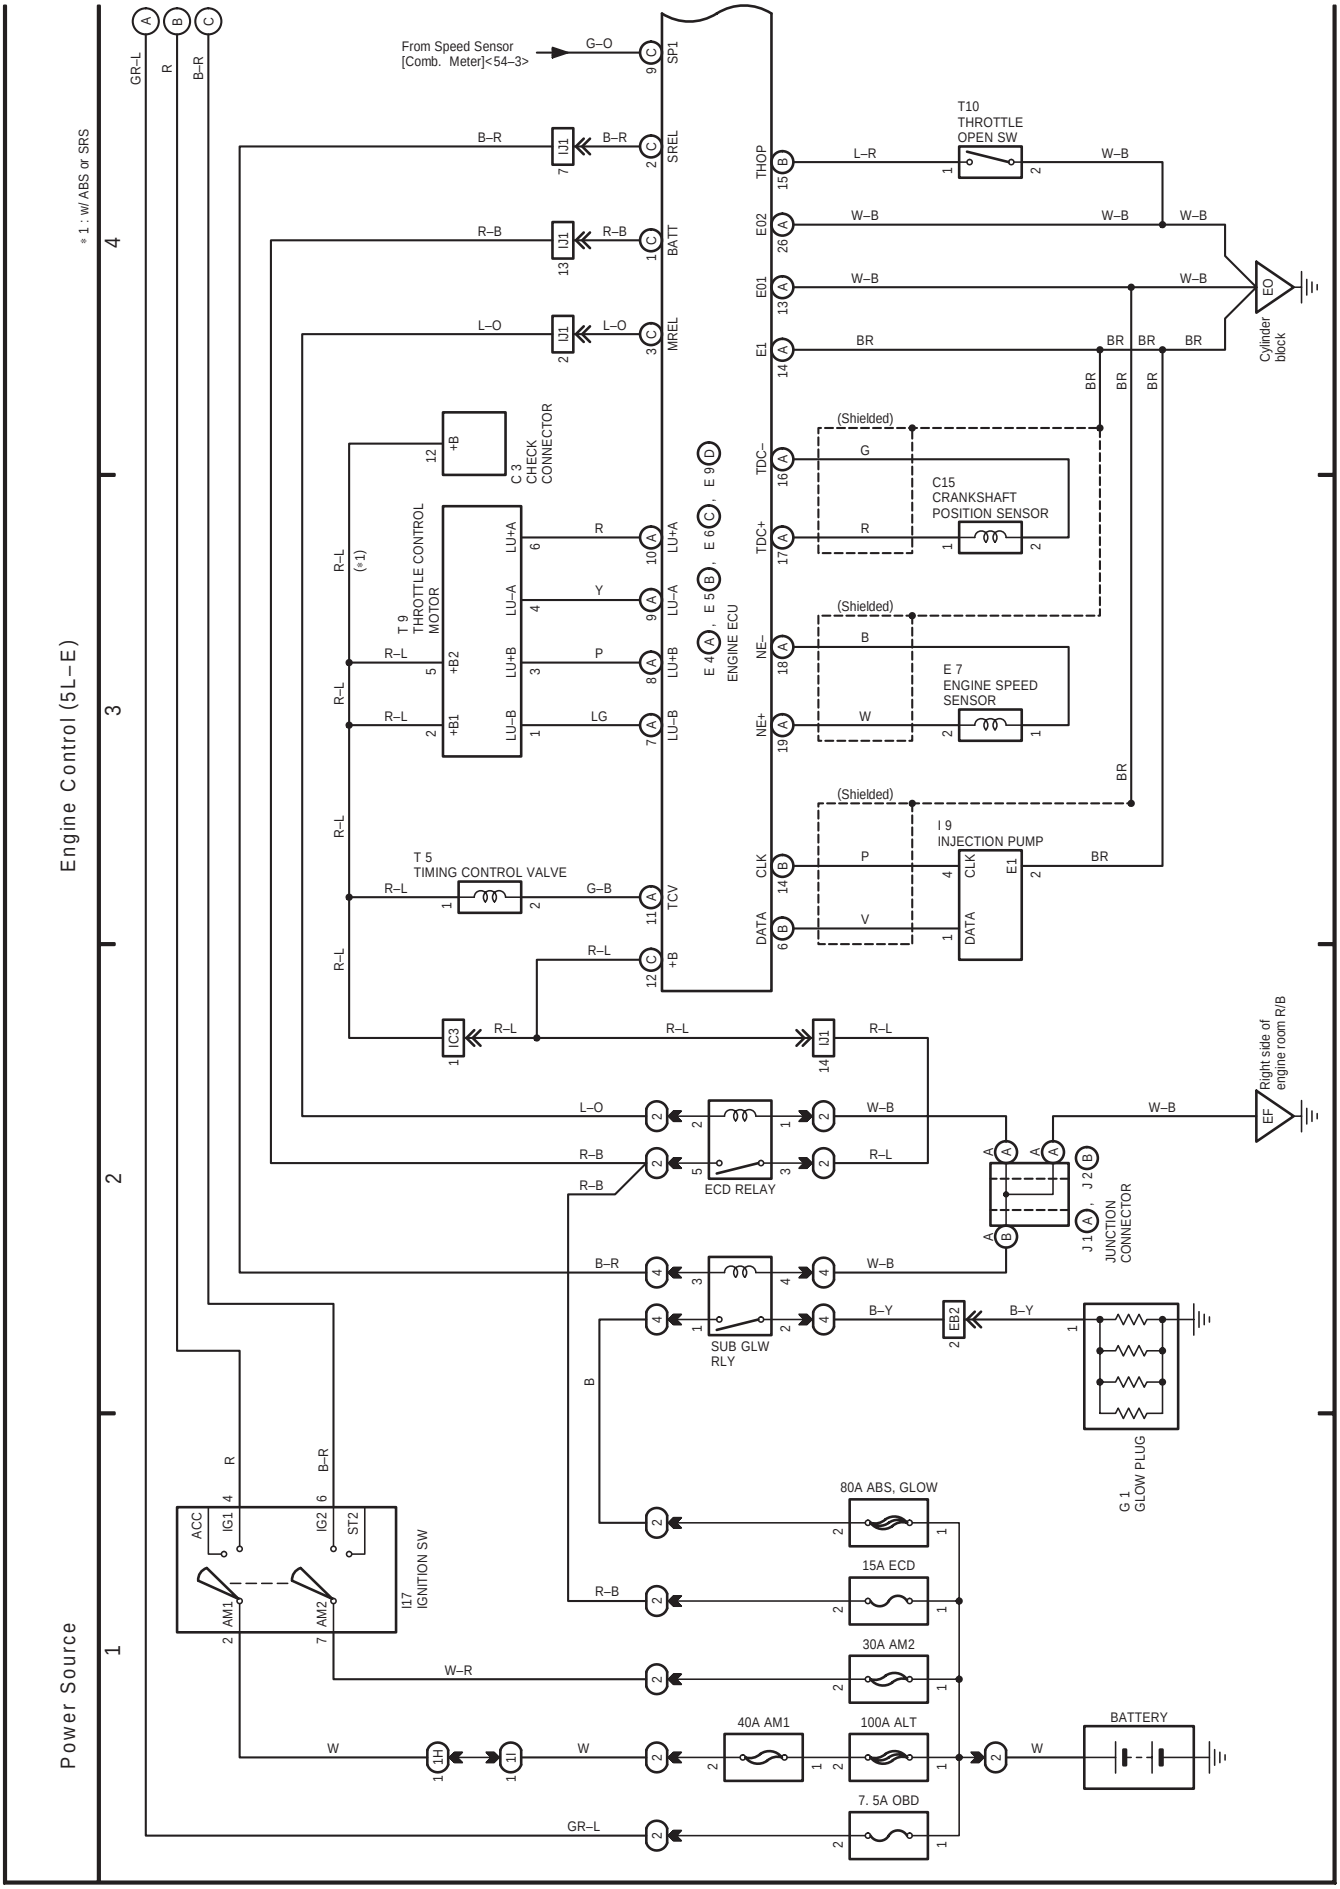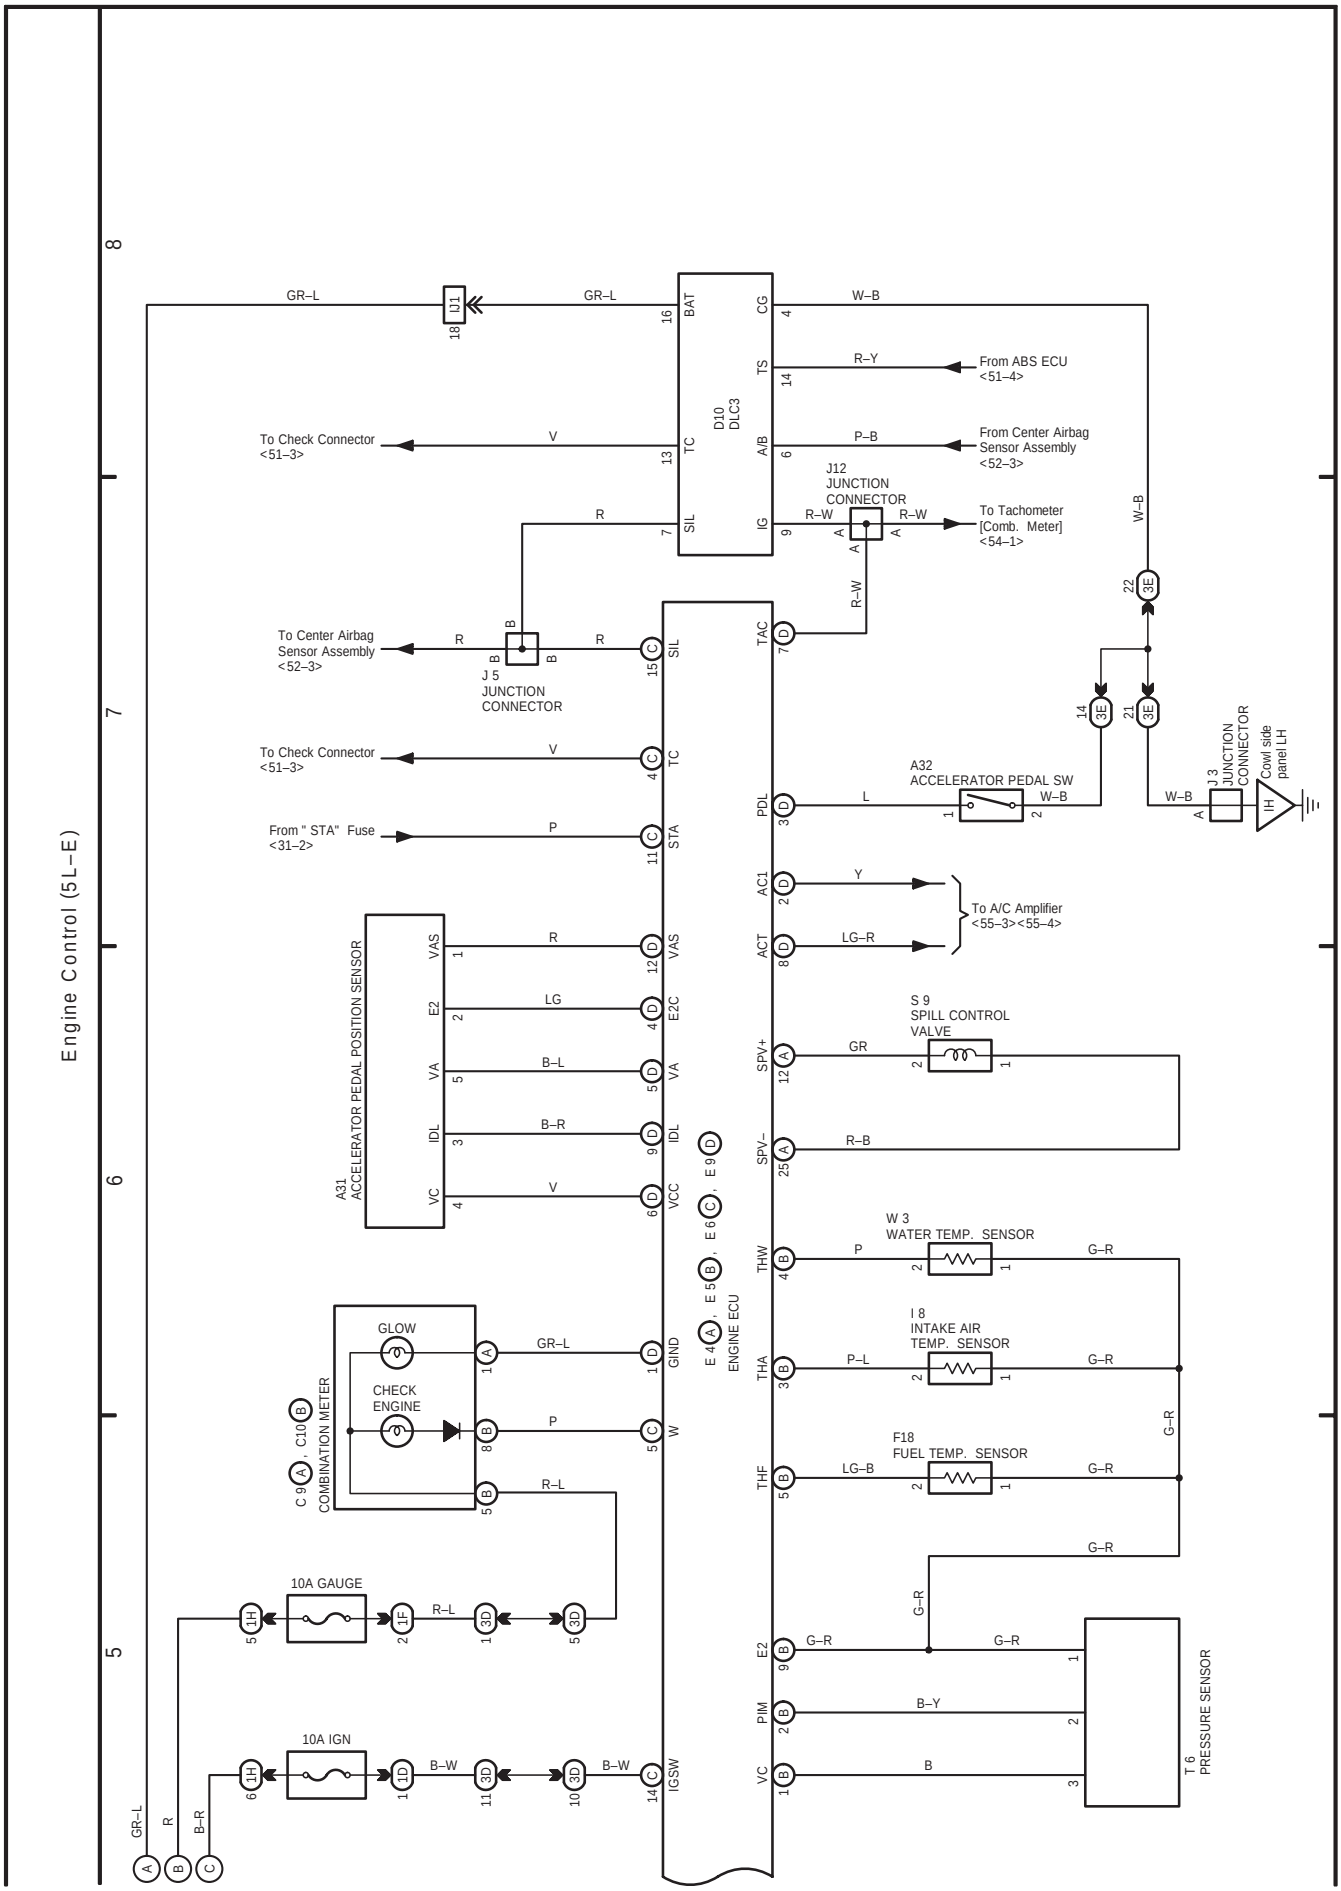


Engine Control (5L–E)
GR–L
J1
BAT
CG
W–B
From ABS ECU
<51–4>
TS
R–Y
D10
DLC3
To Check Connector
<51–3>
V
TC
A/B
P–B
From Center Airbag
Sensor Assembly
<52–3>
J12
JUNCTION
CONNECTOR
To Tachometer
[Comb. Meter]
<54–1>
SIL
IG
R–W
To Center Airbag
Sensor Assembly
<52–3>
J 5
JUNCTION
CONNECTOR
TAC
22
3E
14
21
J 3
JUNCTION
CONNECTOR
Cowl side
panel LH
IH
A32
ACCELERATOR PEDAL SW
PDL
L
W–B
From " STA" Fuse
<31–2>
STA
P
AC1
Y
To A/C Amplifier
<55–3><55–4>
ACT
LG–R
A31
ACCELERATOR PEDAL POSITION SENSOR
VAS
E2
LG
VA
B–L
IDL
B–R
VC
S 9
SPILL CONTROL
VALVE
SPV+
GR
SPV–
R–B
W 3
WATER TEMP. SENSOR
THW
G–R
I 8
INTAKE AIR
TEMP. SENSOR
THA
P–L
F18
FUEL TEMP. SENSOR
THF
LG–B
GLOW
CHECK
ENGINE
GIND
W
C 9 , C10
COMBINATION METER
E 4 , E 5 , E 6 , E 9
ENGINE ECU
10A GAUGE
10A IGN
IGSW
E2
PIM
VC
B–Y
B
T 6
PRESSURE SENSOR
GR–L
R
B–R
5
6
7
8