
Position of Parts in Engine Compartment

[RHD : 5VZ–FE]

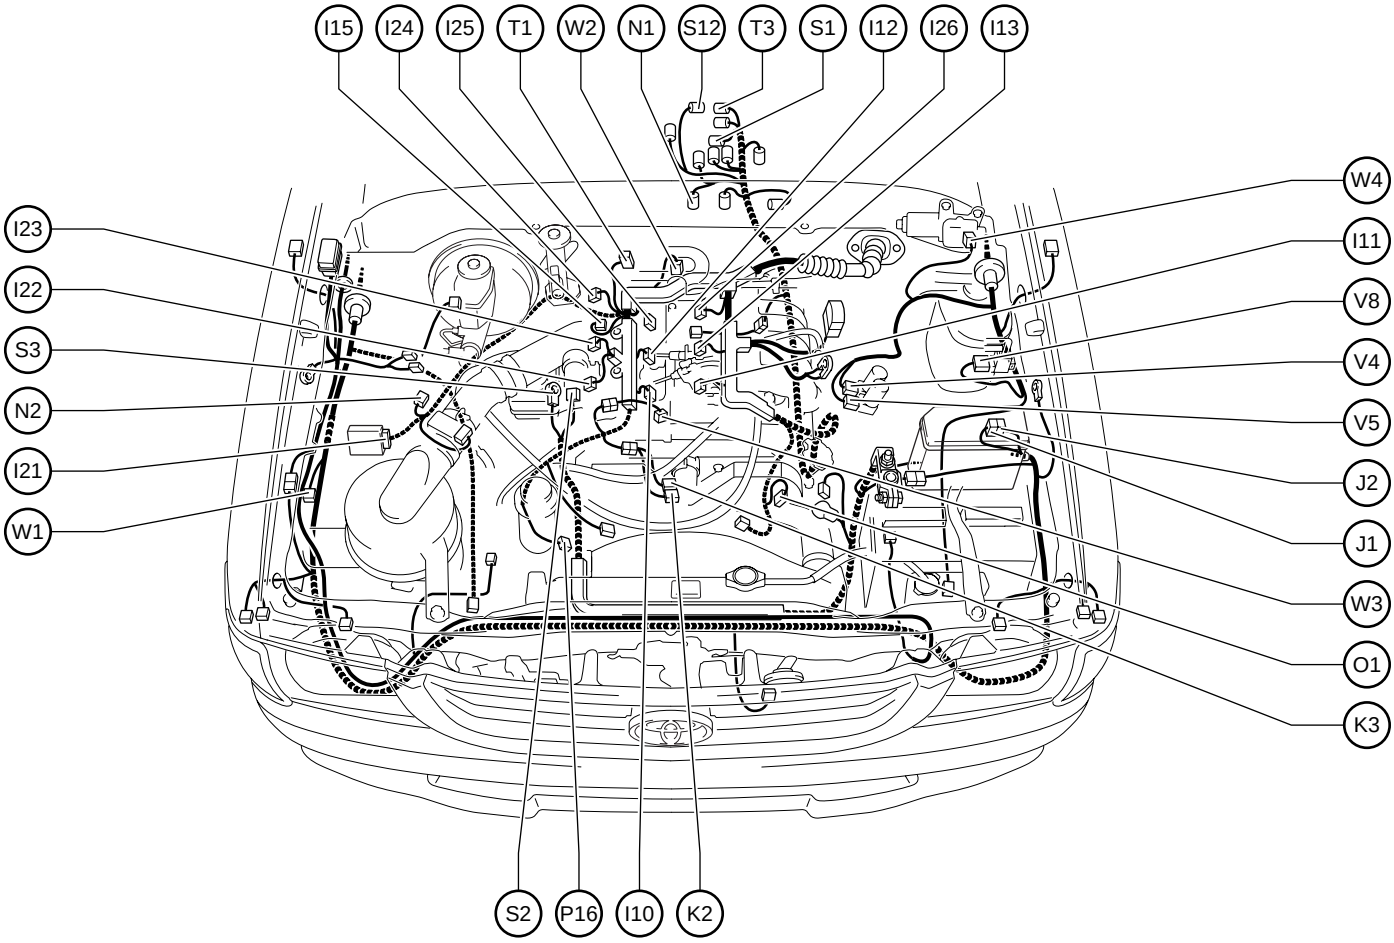

I 10 Injector No.1
I 11 Injector No.2
I 12 Injector No.3
I 13 Injector No.4
I 15 ISC Valve
I 21 Igniter
I 22 Ignition Coil No.1
I 23 Ignition Coil No.2
I 24 Ignition Coil No.3
I 25 Injector No.5
I 26 Injector No.6

J 1 Junction Connector
J 2 Junction Connector

K 2 Knock Sensor 1
K 3 Knock Sensor 2

N 1 Back–Up Light SW
Neutral Start SW
N 2 Noise Filter

O 1 Oil Pressure SW

P 16 Power Steering Oil Pressure SW

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter
S 12 Speed Sensor (Combination Meter)

T 1 Throttle Position Sensor
T 3 2–4 Select Motor

V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)
V 8 VSV (EVAP)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor