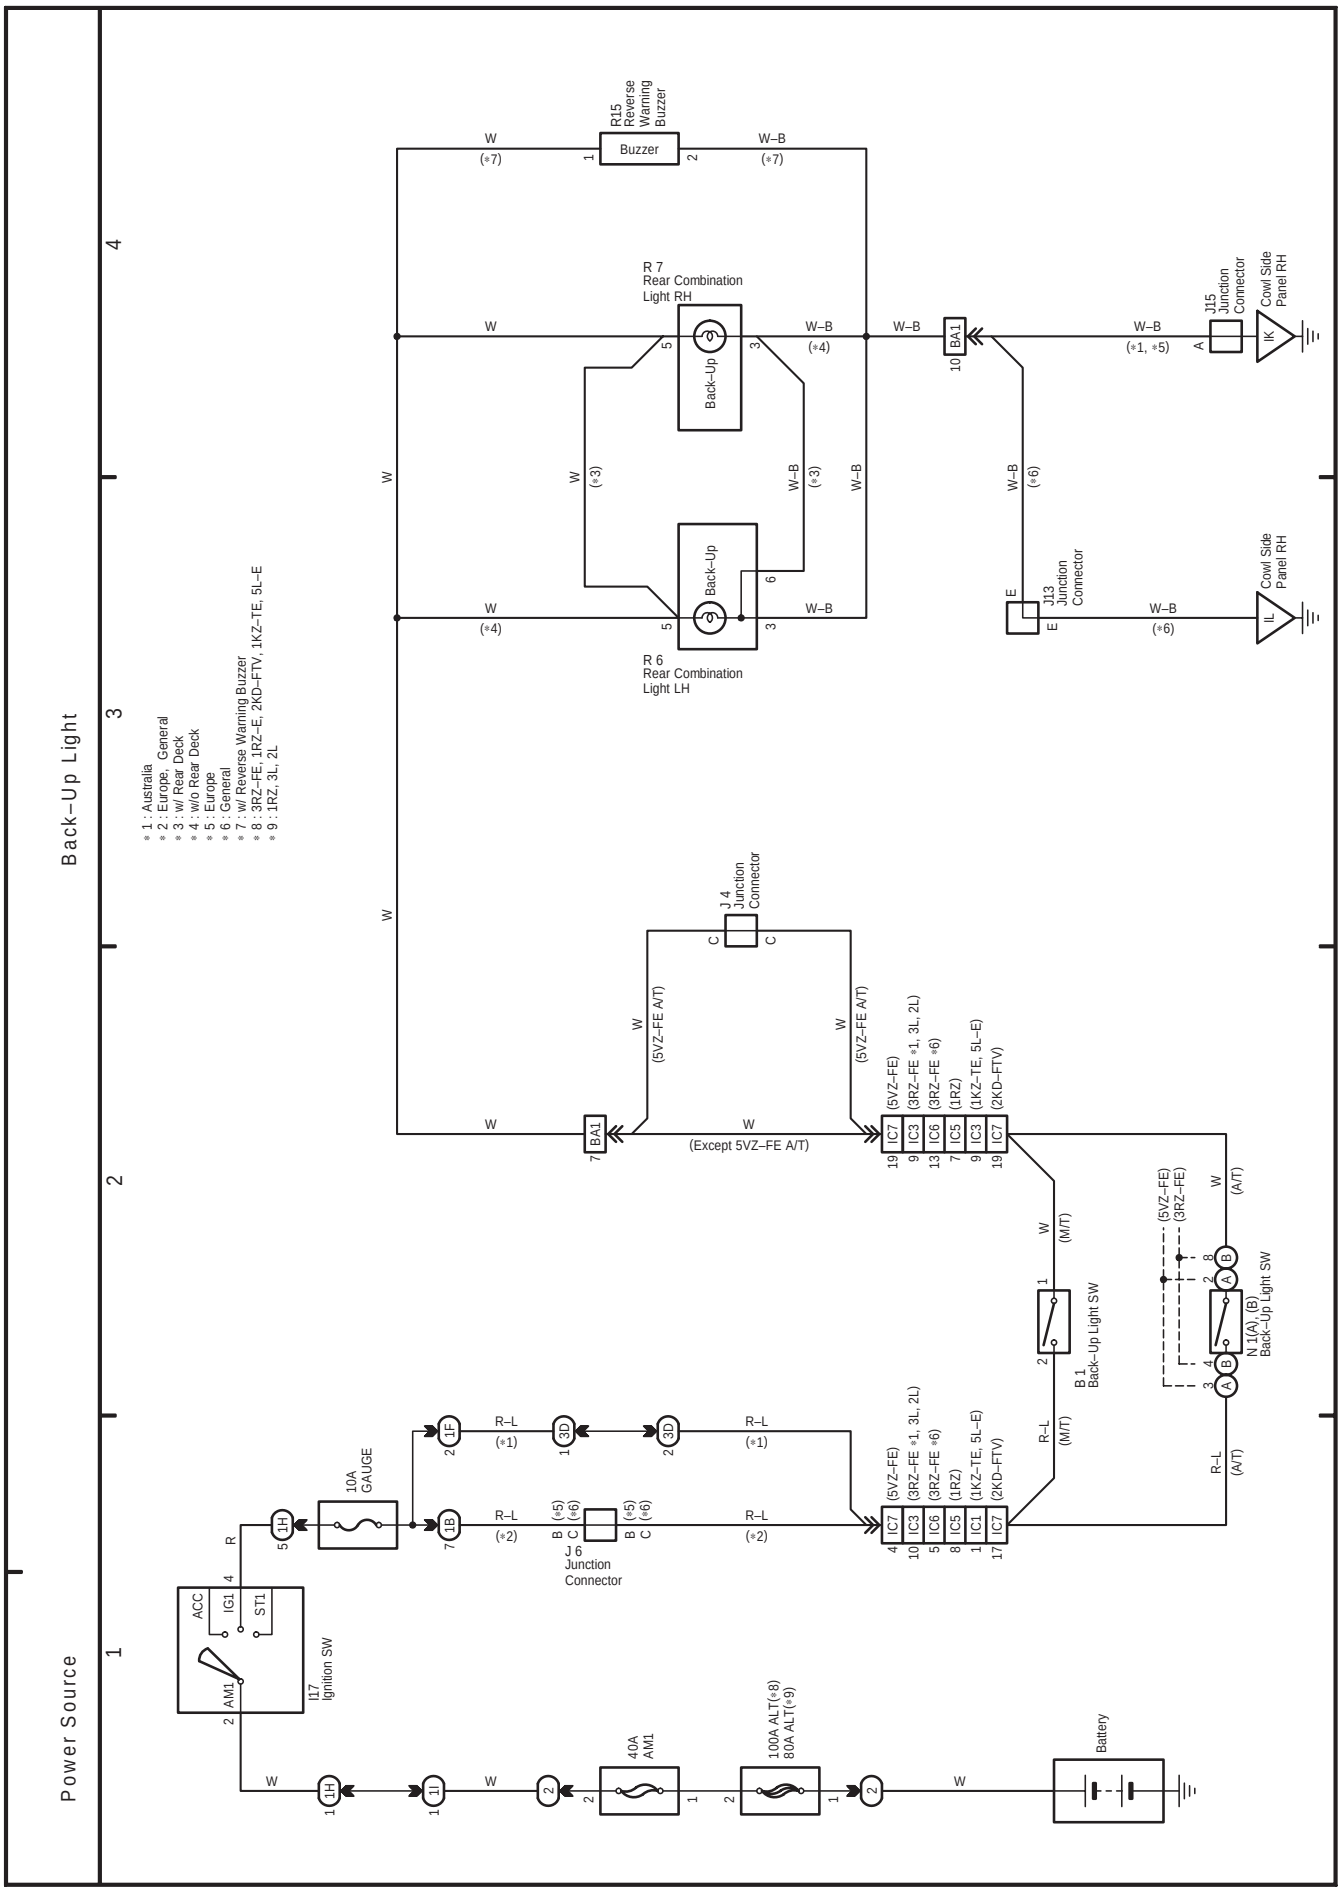

Back–Up Light
Power Source
1
2
3
4
* 1 : Australia
* 2 : Europe; General
* 3 : w/ Rear Deck
* 4 : w/o Rear Deck
* 5 : Europe
* 6 : General
* 7 : w/ Reverse Warning Buzzer
* 8 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
* 9 : 1RZ, 3L, 2L
R15 Reverse Warning Buzzer
Buzzer
R 7 Rear Combination Light RH
R 6 Rear Combination Light LH
Back–Up
J15 Junction Connector
Cowl Side Panel RH
J13 Junction Connector
J 4 Junction Connector
J 6 Junction Connector
B 1 Back–Up Light SW
N 1(A), (B) Back–Up Light SW
I17 Ignition SW
ACC
IG1
ST1
AM1
10A GAUGE
40A AM1
100A ALT(*8) 80A ALT(*9)
Battery
(5VZ–FE)
(3RZ–FE *1, 3L, 2L)
(3RZ–FE *6)
(1RZ)
(1KZ–TE, 5L–E)
(2KD–FTV)
(5VZ–FE A/T)
(Except 5VZ–FE A/T)
(M/T)
(A/T)