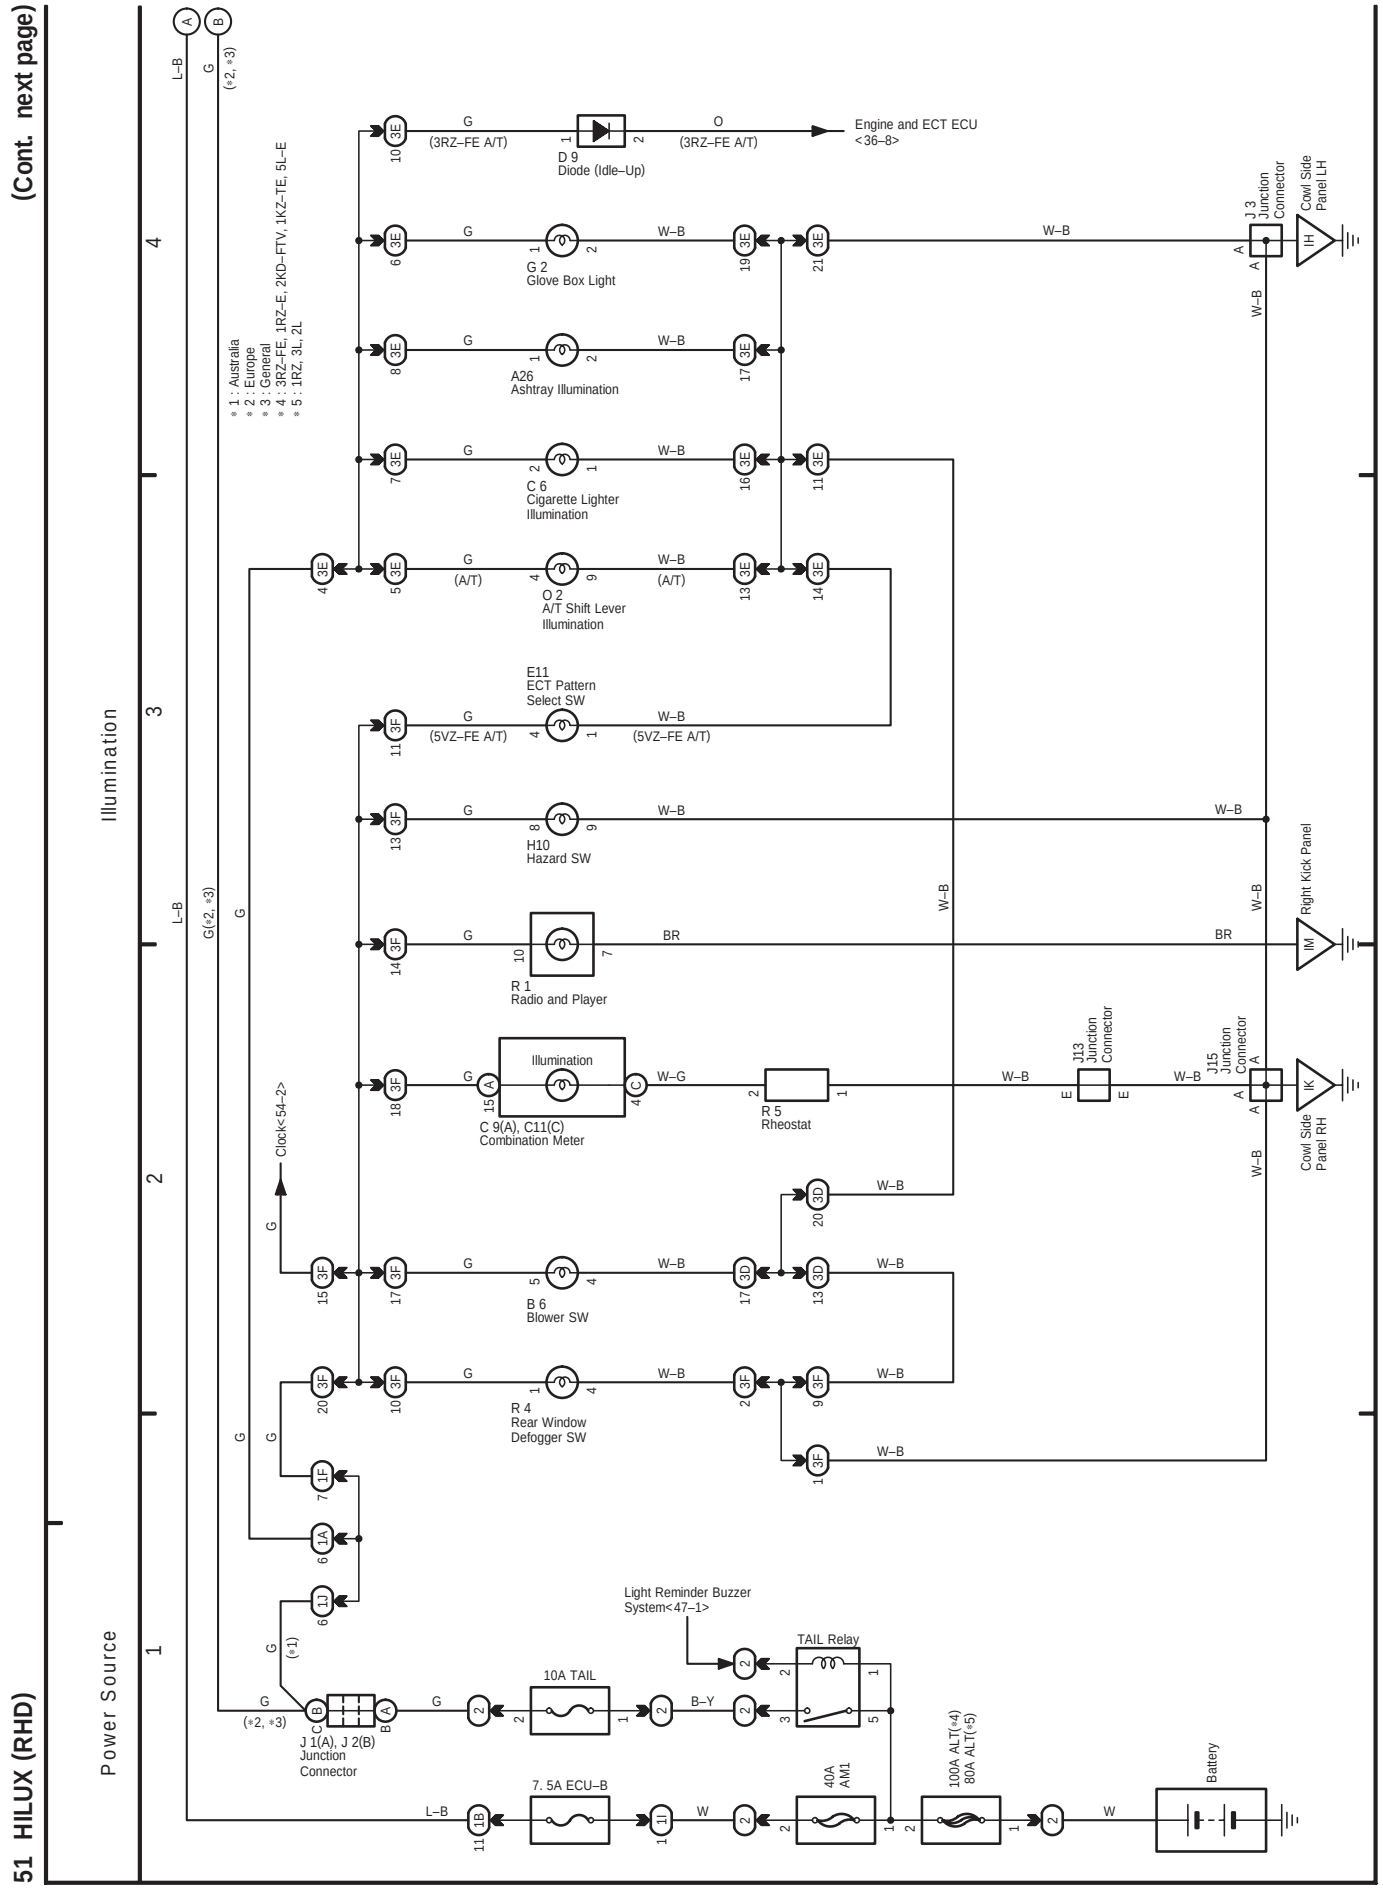
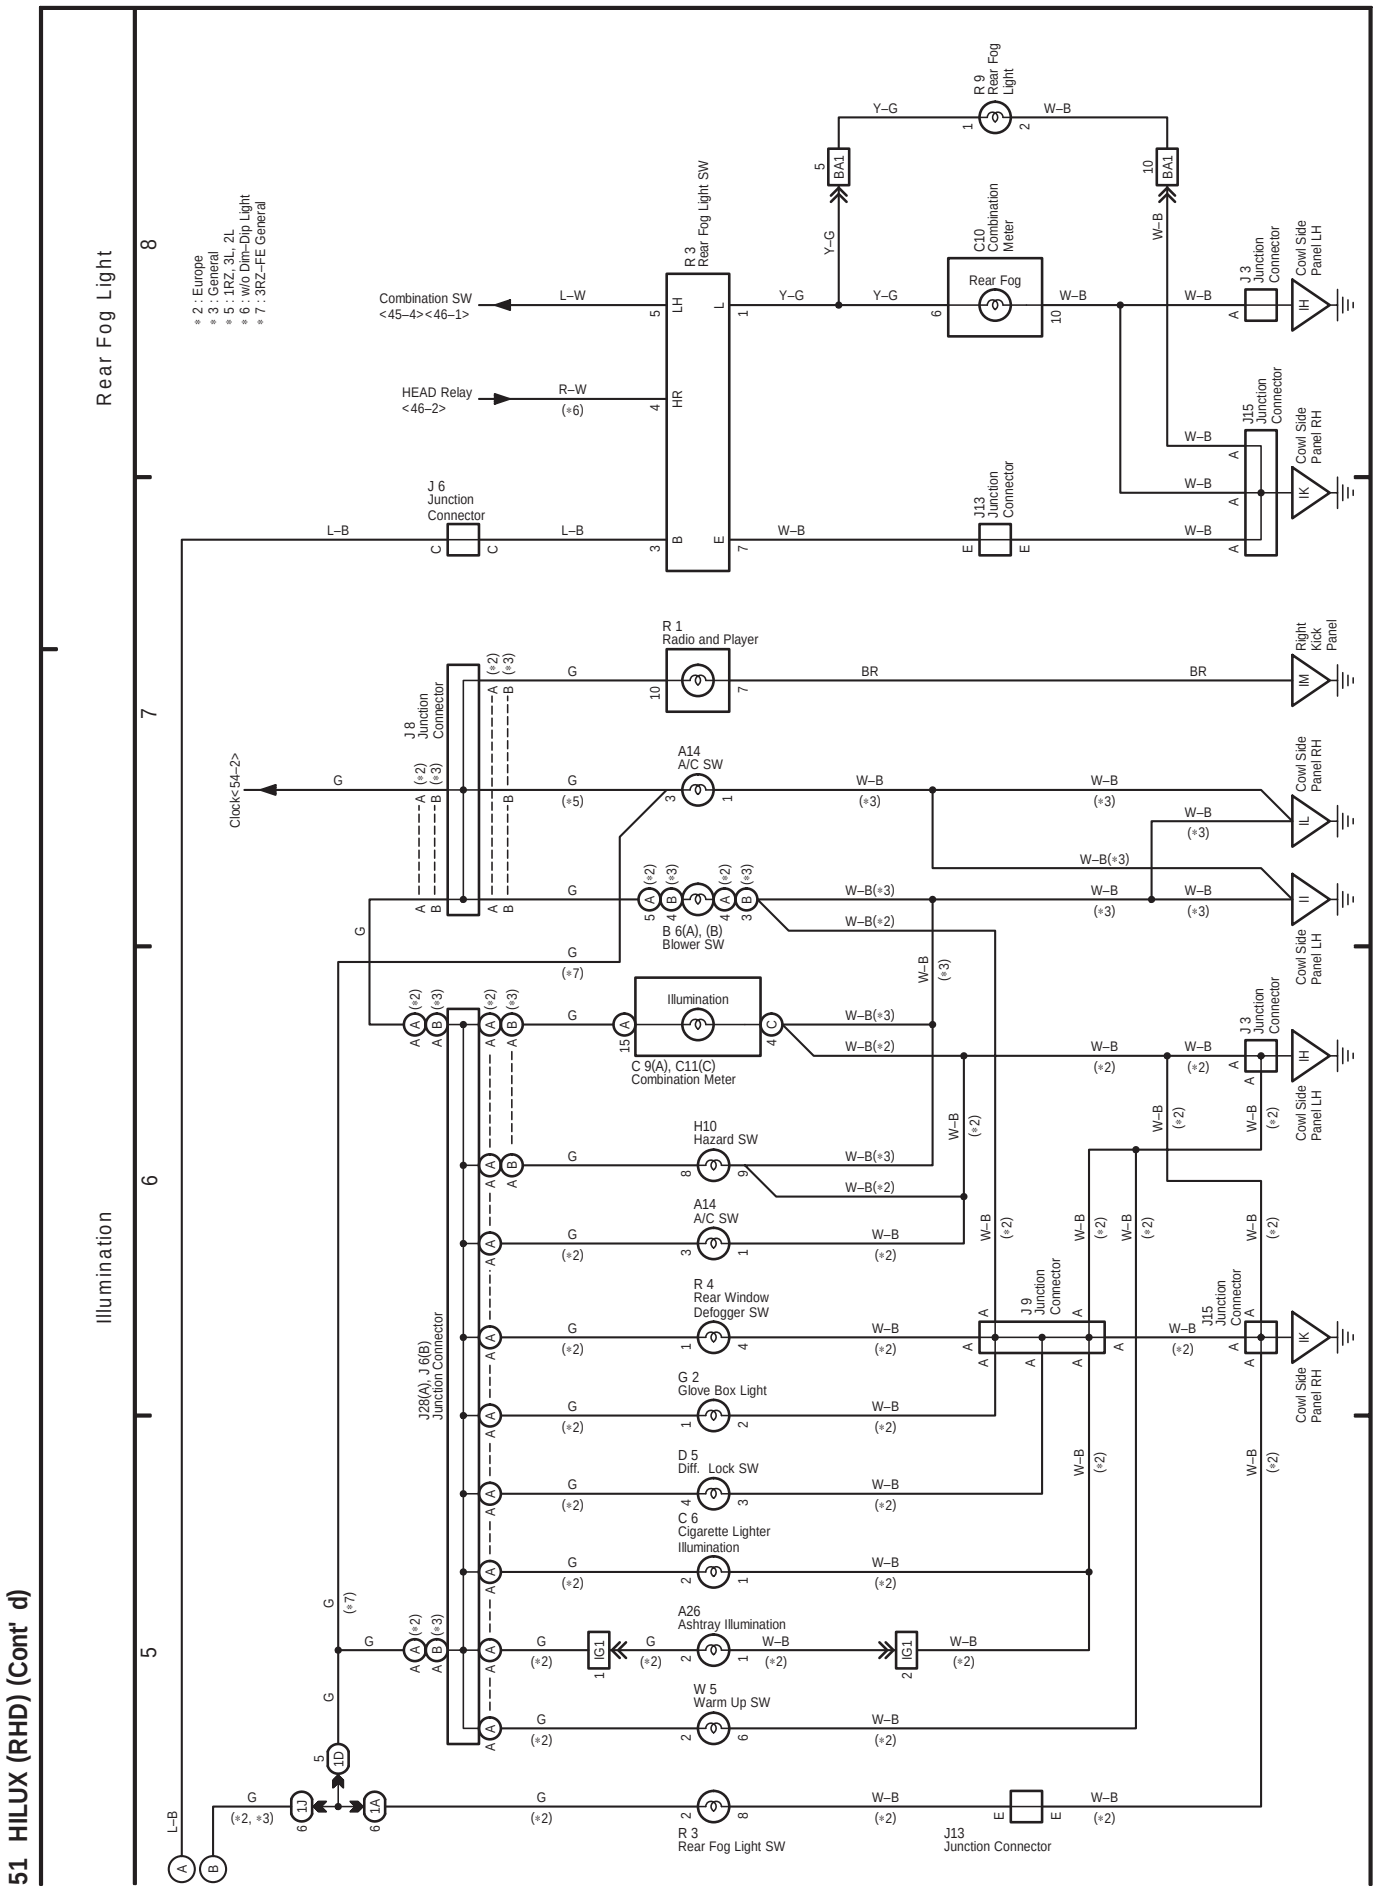

(Cont. next page)
51 HILUX (RHD)
Power Source
Illumination
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
* 5 : 1RZ, 3L, 2L
D 9
Diode (Idle–Up)
Engine and ECT ECU
<36–8>
G 2
Glove Box Light
A26
Ashtray Illumination
C 6
Cigarette Lighter
Illumination
O 2
A/T Shift Lever
Illumination
E11
ECT Pattern
Select SW
H10
Hazard SW
R 1
Radio and Player
C 9(A), C11(C)
Combination Meter
R 5
Rheostat
B 6
Blower SW
R 4
Rear Window
Defogger SW
J 3
Junction
Connector
Cowl Side
Panel LH
J13
Junction
Connector
J15
Junction
Connector
Cowl Side
Panel RH
Right Kick Panel
Clock<54–2>
Light Reminder Buzzer
System<47–1>
TAIL Relay
10A TAIL
J 1(A), J 2(B)
Junction
Connector
7. 5A ECU–B
40A
AM1
100A ALT(*4)
80A ALT(*5)
Battery


51 HILUX (RHD) (Cont' d)
Rear Fog Light
Illumination
8
7
6
5
* 2 : Europe
* 3 : General
* 5 : 1RZ, 3L, 2L
* 6 : w/o Dim–Dip Light
* 7 : 3RZ–FE General
R 9 Rear Fog Light
R 3 Rear Fog Light SW
C10 Combination Meter
Rear Fog
Combination SW <45–4><46–1>
HEAD Relay <46–2>
J 6 Junction Connector
J13 Junction Connector
J 3 Junction Connector
J15 Junction Connector
Cowl Side Panel LH
Cowl Side Panel RH
R 1 Radio and Player
Right Kick Panel
J 8 Junction Connector
Clock<54–2>
A14 A/C SW
B 6(A), (B) Blower SW
Illumination
C 9(A), C11(C) Combination Meter
H10 Hazard SW
R 4 Rear Window Defogger SW
J 9 Junction Connector
J26(A), J 6(B) Junction Connector
G 2 Glove Box Light
D 5 Diff. Lock SW
C 6 Cigarette Lighter Illumination
A26 Ashtray Illumination
W 5 Warm Up SW
R 3 Rear Fog Light SW
J13 Junction Connector