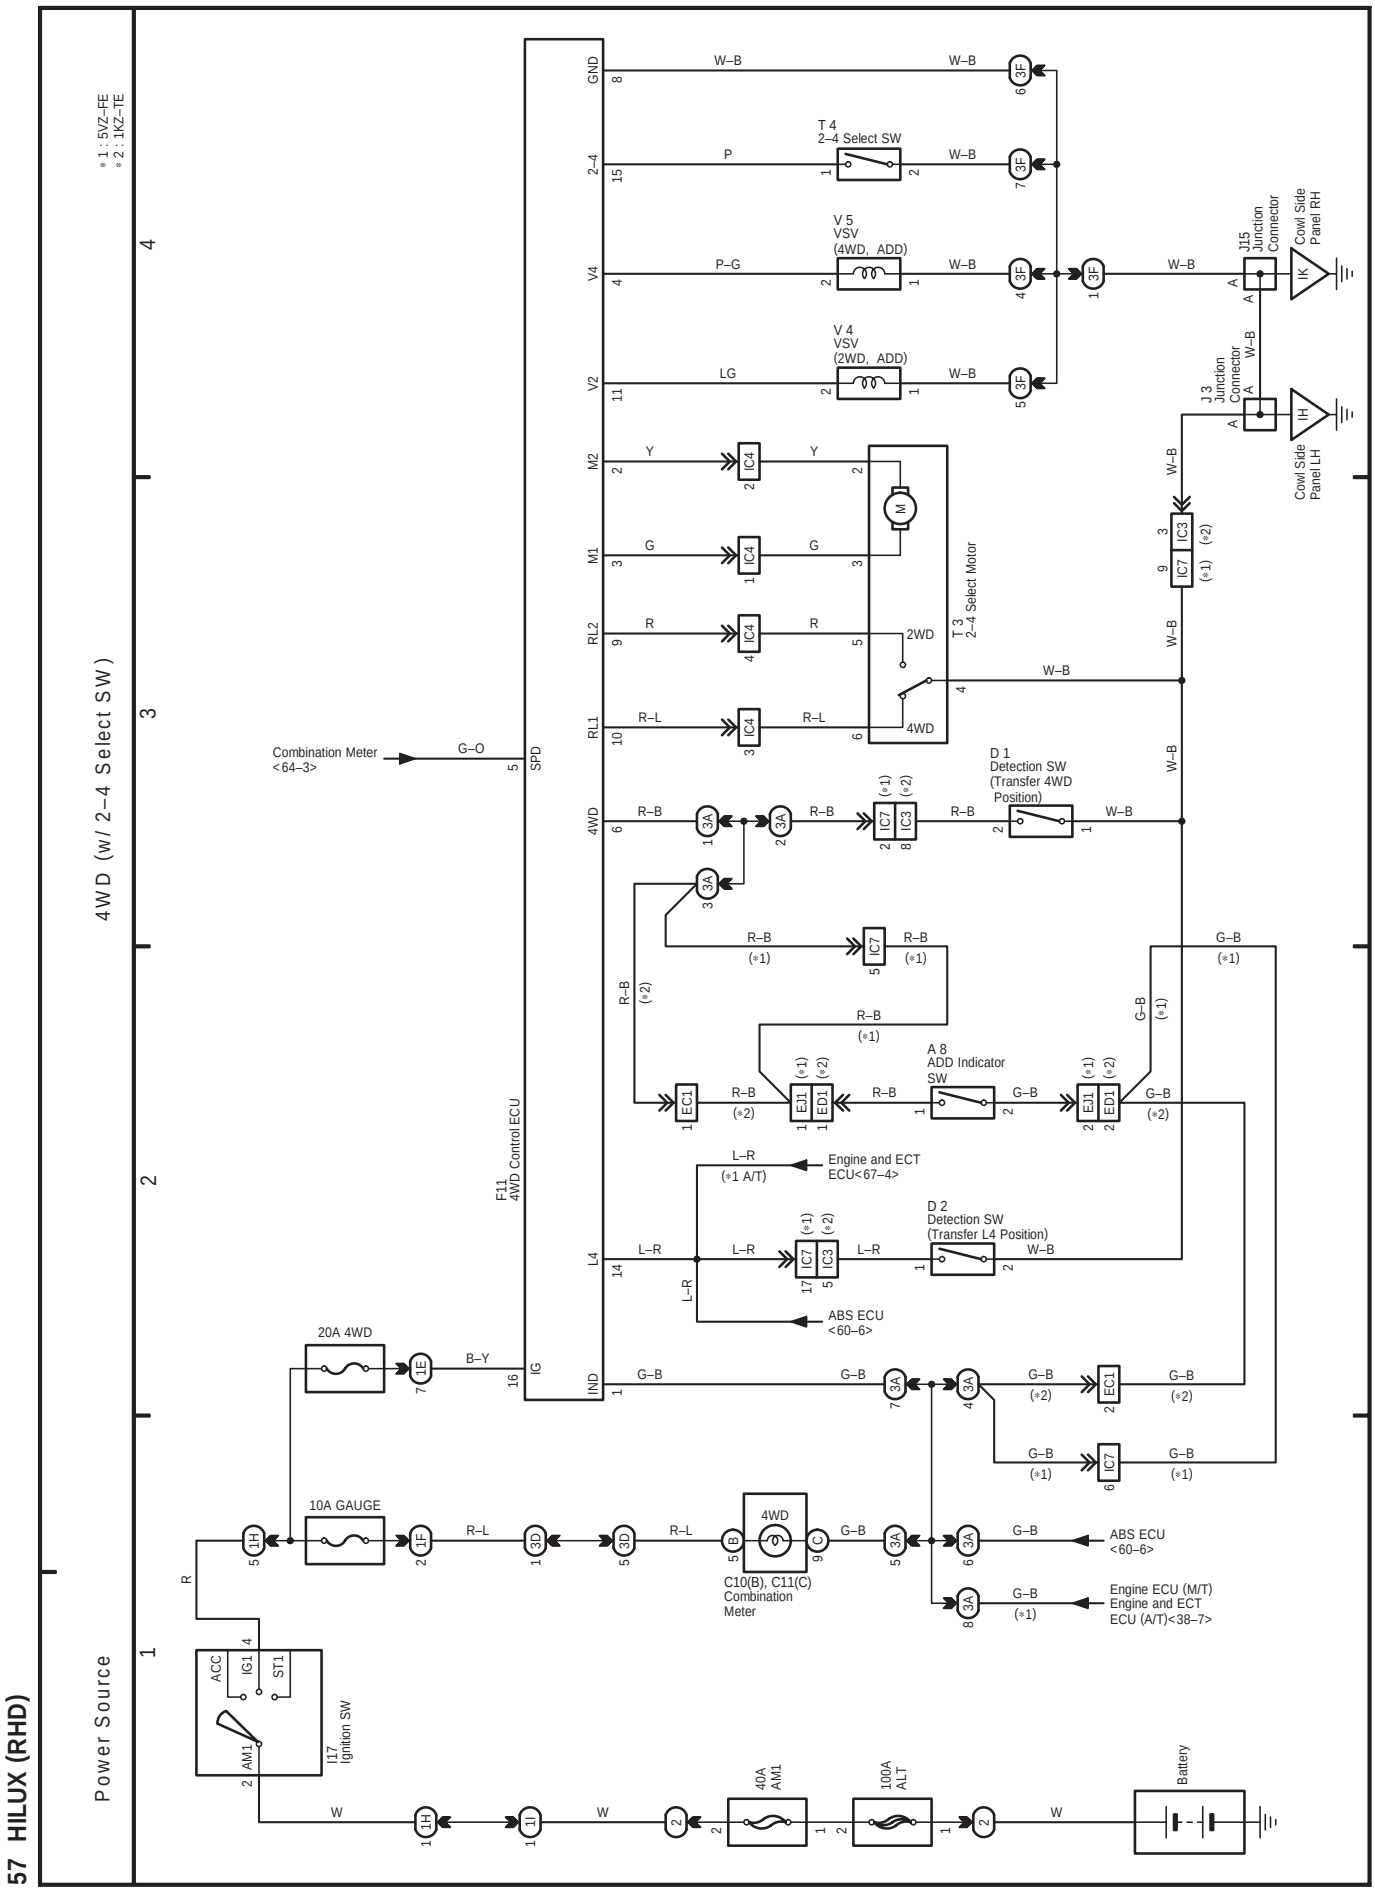

57 HILUX (RHD)
Power Source
4WD (w/ 2–4 Select SW)
*1 : 5VZ–FE
*2 : 1KZ–TE
T 4
2–4 Select SW
V 5
VSV
(4WD, ADD)
V 4
VSV
(2WD, ADD)
J15
Junction
Connector
Cowl Side
Panel RH
J3
Junction
Connector
Cowl Side
Panel LH
T 3
2–4 Select Motor
2WD
4WD
D 1
Detection SW
(Transfer 4WD
Position)
D 2
Detection SW
(Transfer L4 Position)
A 8
ADD Indicator
SW
F11
4WD Control ECU
Combination Meter
<64–3>
Engine and ECT
ECU<67–4>
ABS ECU
<60–6>
20A 4WD
10A GAUGE
4WD
C10(B), C11(C)
Combination
Meter
ABS ECU
<60–6>
Engine ECU (M/T)
Engine and ECT
ECU (A/T)<38–7>
I17
Ignition SW
ACC
IG1
ST1
AM1
40A
AM1
100A
ALT
Battery