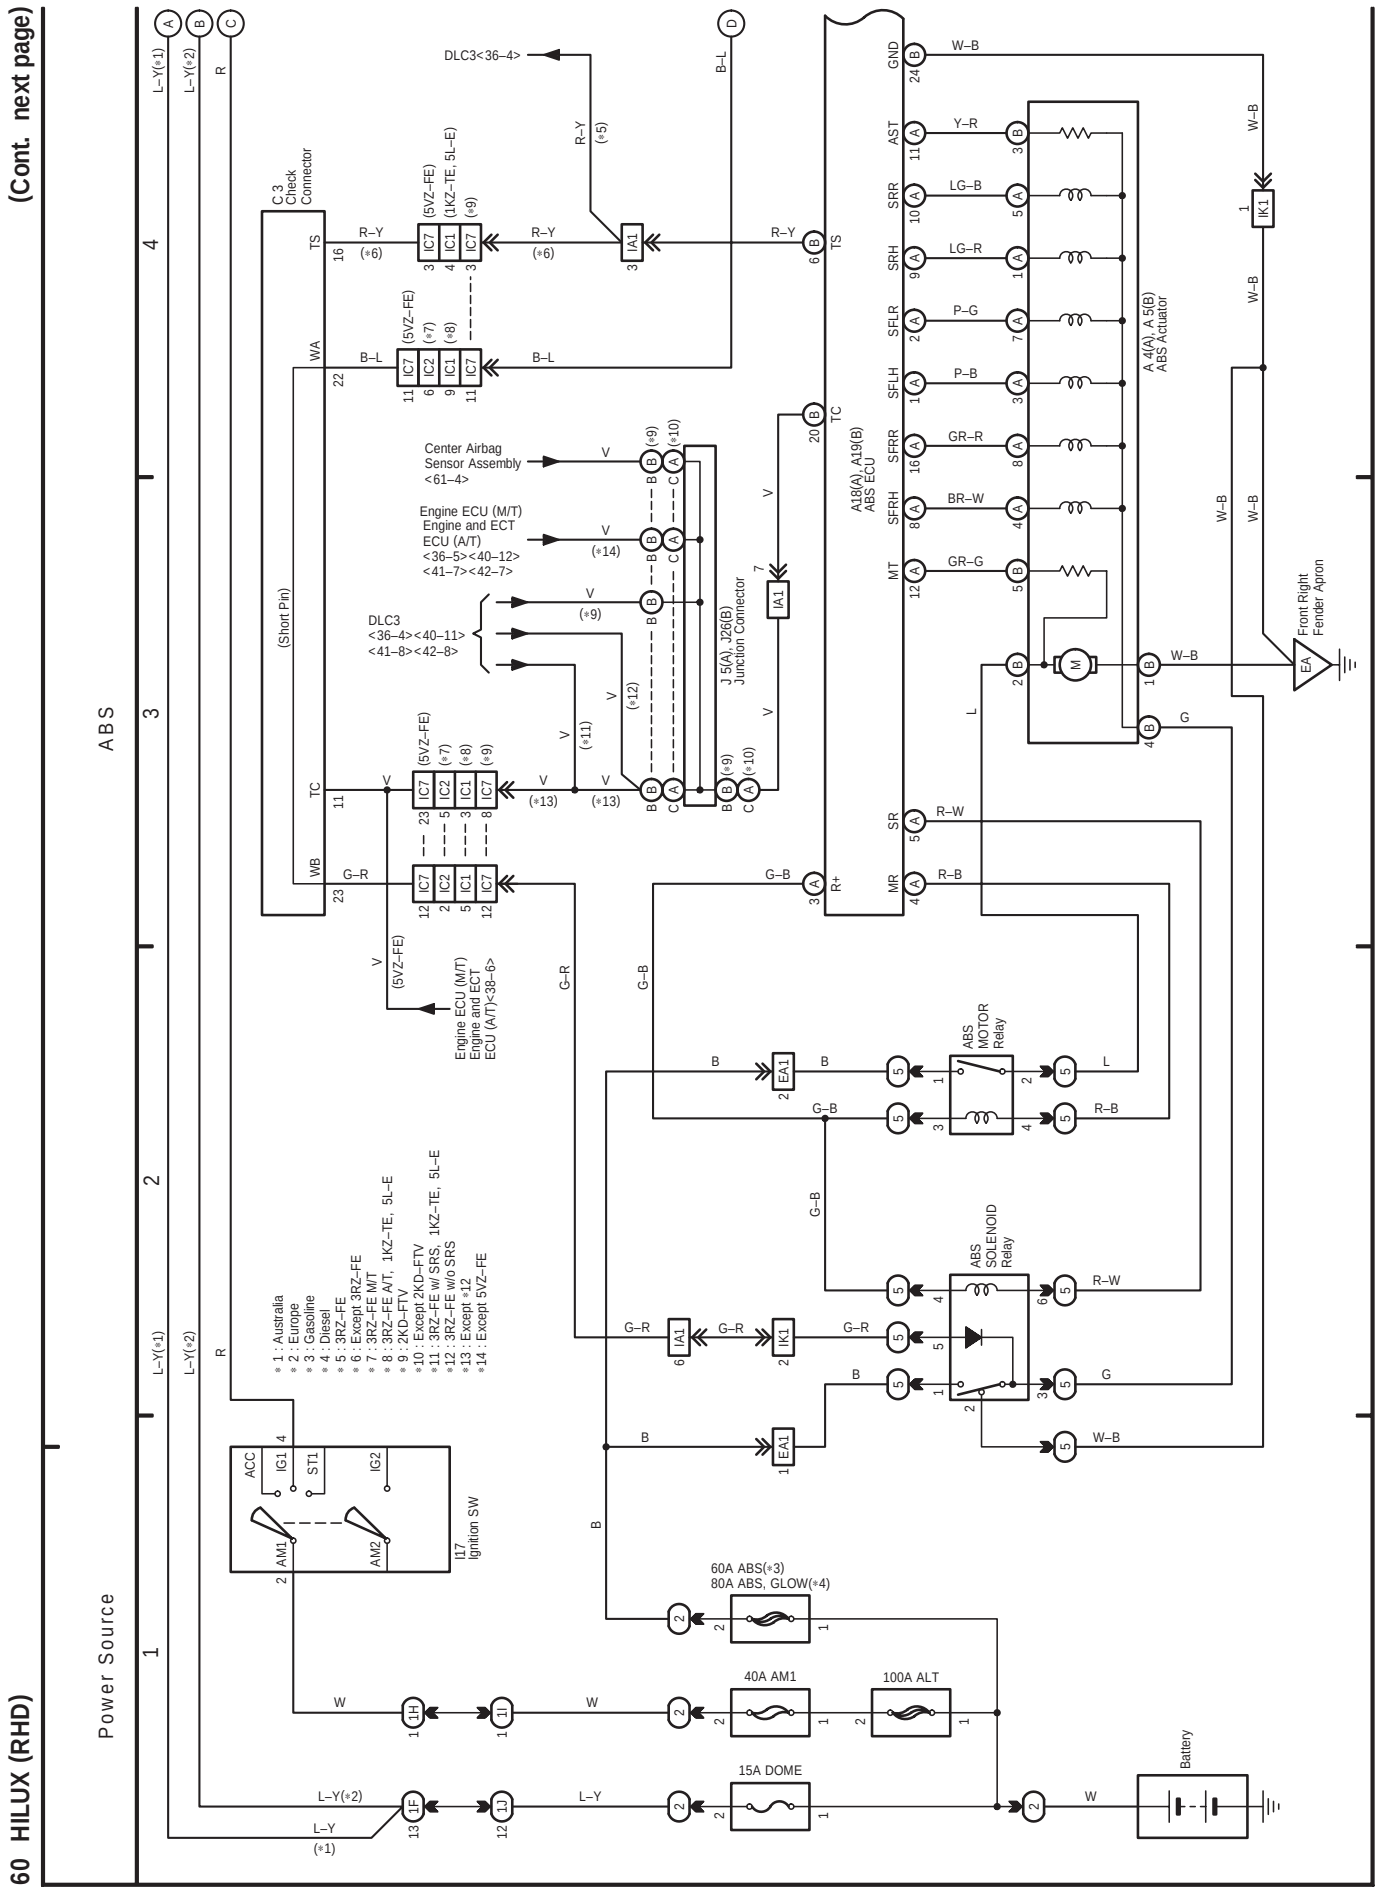
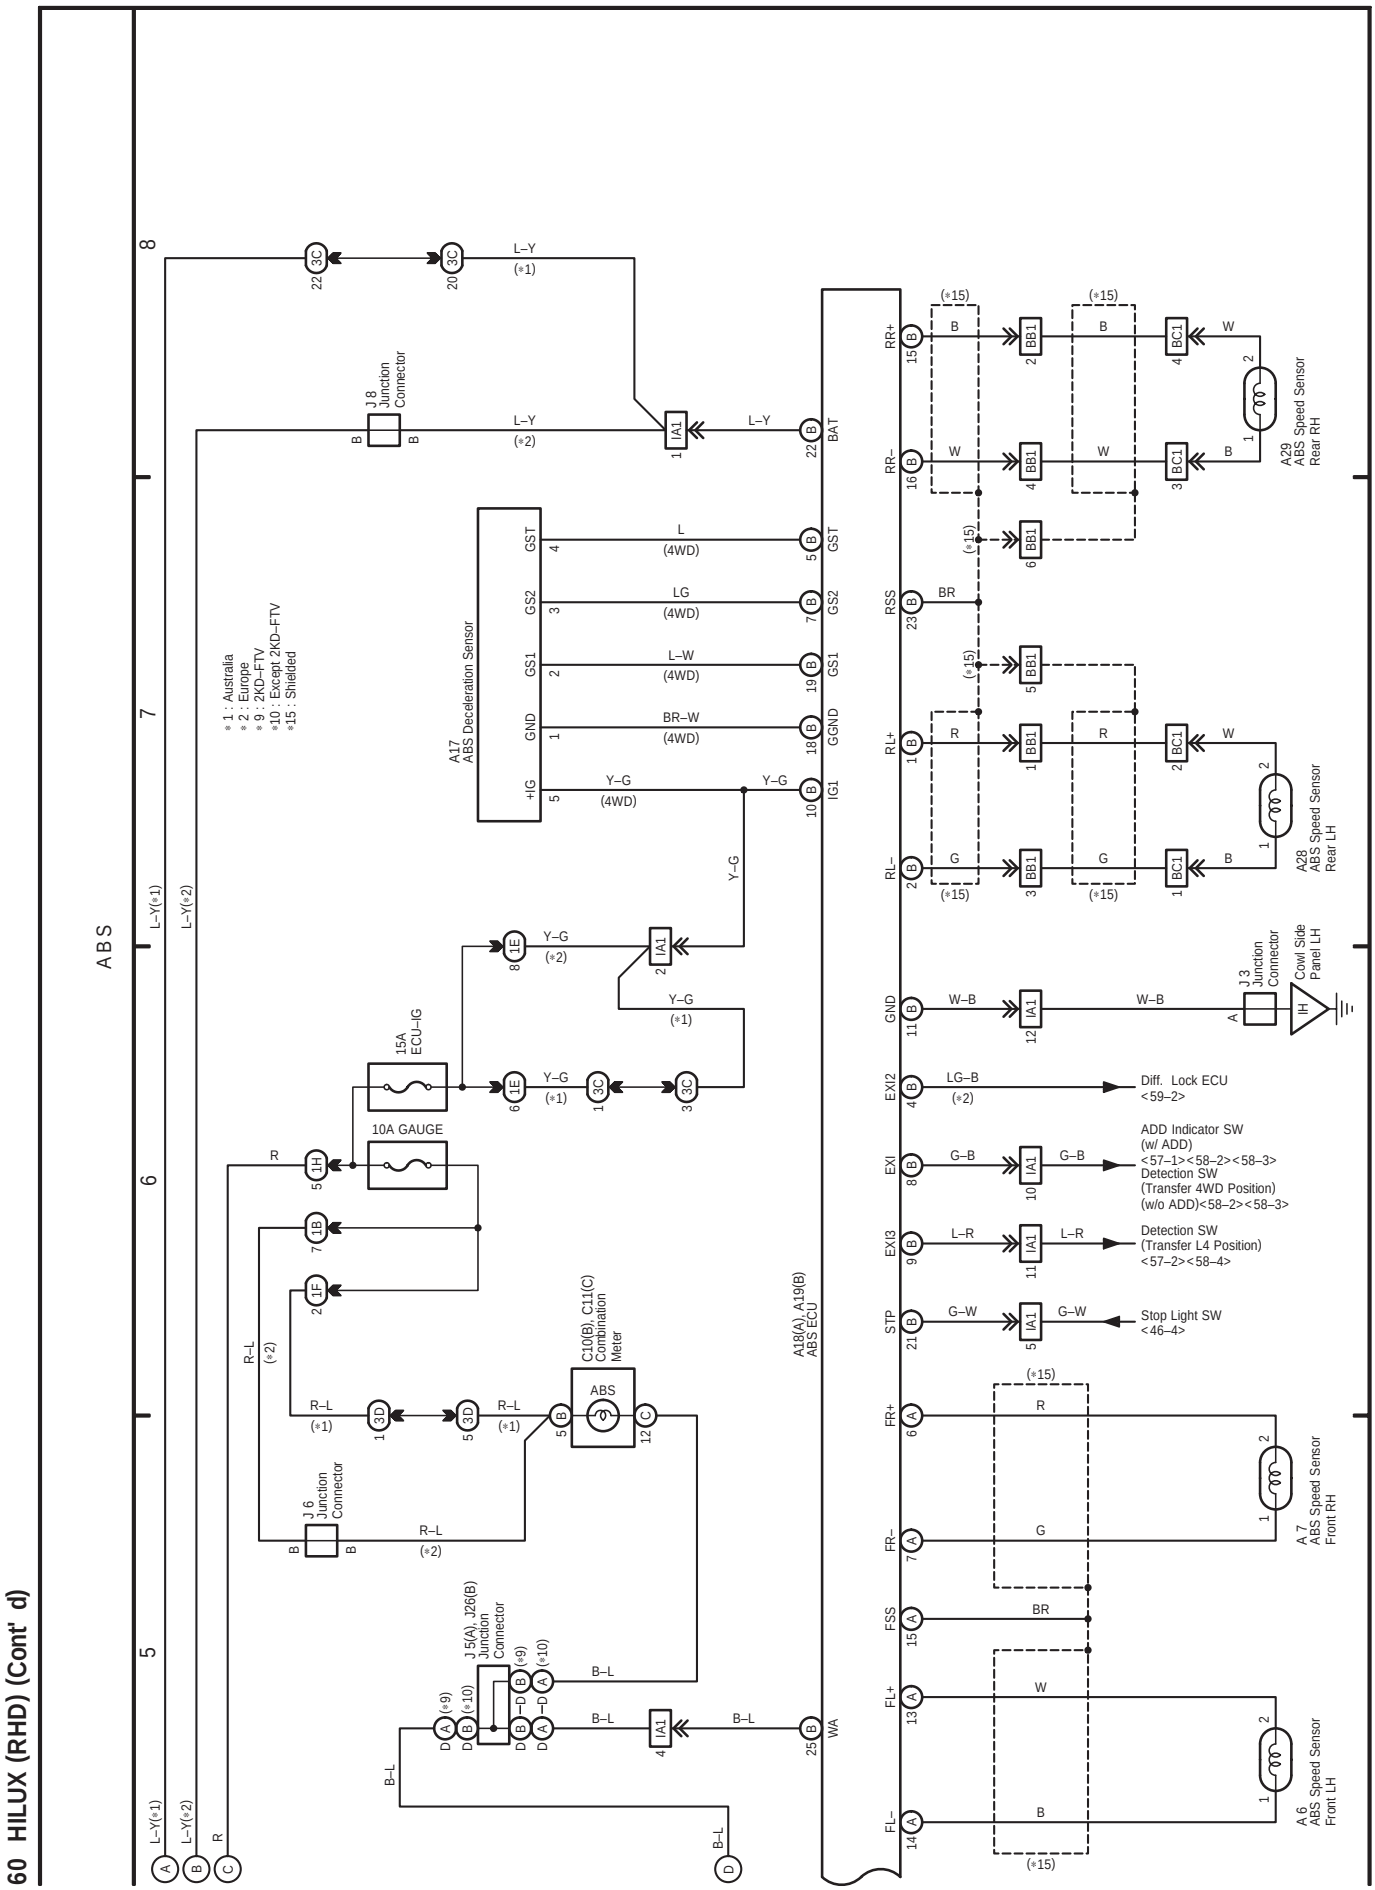

60 HILUX (RHD)
Power Source
ABS
(Cont. next page)
DLC3<36–4>
C 3 Check Connector
(5VZ–FE)
(1KZ–TE, 5L–E)
Center Airbag Sensor Assembly <61–4>
Engine ECU (M/T) Engine and ECT ECU (A/T) <36–5><40–12><41–7><42–7>
DLC3 <36–4><40–11><41–8><42–8>
(Short Pin)
J 5(A), J26(B) Junction Connector
A18(A), A19(B) ABS ECU
A 4(A), A 5(B) ABS Actuator
Front Right Fender Apron
ABS MOTOR Relay
ABS SOLENOID Relay
I17 Ignition SW
60A ABS(*3) 80A ABS, GLOW(*4)
40A AM1
100A ALT
15A DOME
Battery
Engine ECU (M/T) Engine and ECT ECU (A/T)<38–6>
* 1 : Australia
* 2 : Europe
* 3 : Gasoline
* 4 : Diesel
* 5 : 3RZ–FE
* 6 : Except 3RZ–FE
* 7 : 3RZ–FE M/T
* 8 : 3RZ–FE A/T, 1KZ–TE, 5L–E
* 9 : 2KD–FTV
*10 : Except 2KD–FTV
*11 : 3RZ–FE w/ SRS, 1KZ–TE, 5L–E
*12 : 3RZ–FE w/o SRS
*13 : Except *12
*14 : Except 5VZ–FE


60 HILUX (RHD) (Cont' d)
ABS
*1 : Australia
*2 : Europe
*9 : 2KD–FTV
*10 : Except 2KD–FTV
*15 : Shielded
A17 ABS Deceleration Sensor
A18(A), A19(B) ABS ECU
C10(B), C11(C) Combination Meter
J 8 Junction Connector
J 6 Junction Connector
J 5(A), J26(B) Junction Connector
J 3 Junction Connector
Cowl Side Panel LH
15A ECU–IG
10A GAUGE
A29 ABS Speed Sensor Rear RH
A28 ABS Speed Sensor Rear LH
A 7 ABS Speed Sensor Front RH
A 6 ABS Speed Sensor Front LH
Diff. Lock ECU <59–2>
ADD Indicator SW (w/ ADD) <57–1><58–2><58–3>
Detection SW (Transfer 4WD Position) (w/o ADD)<58–2><58–3>
Detection SW (Transfer L4 Position) <57–2><58–4>
Stop Light SW <46–4>