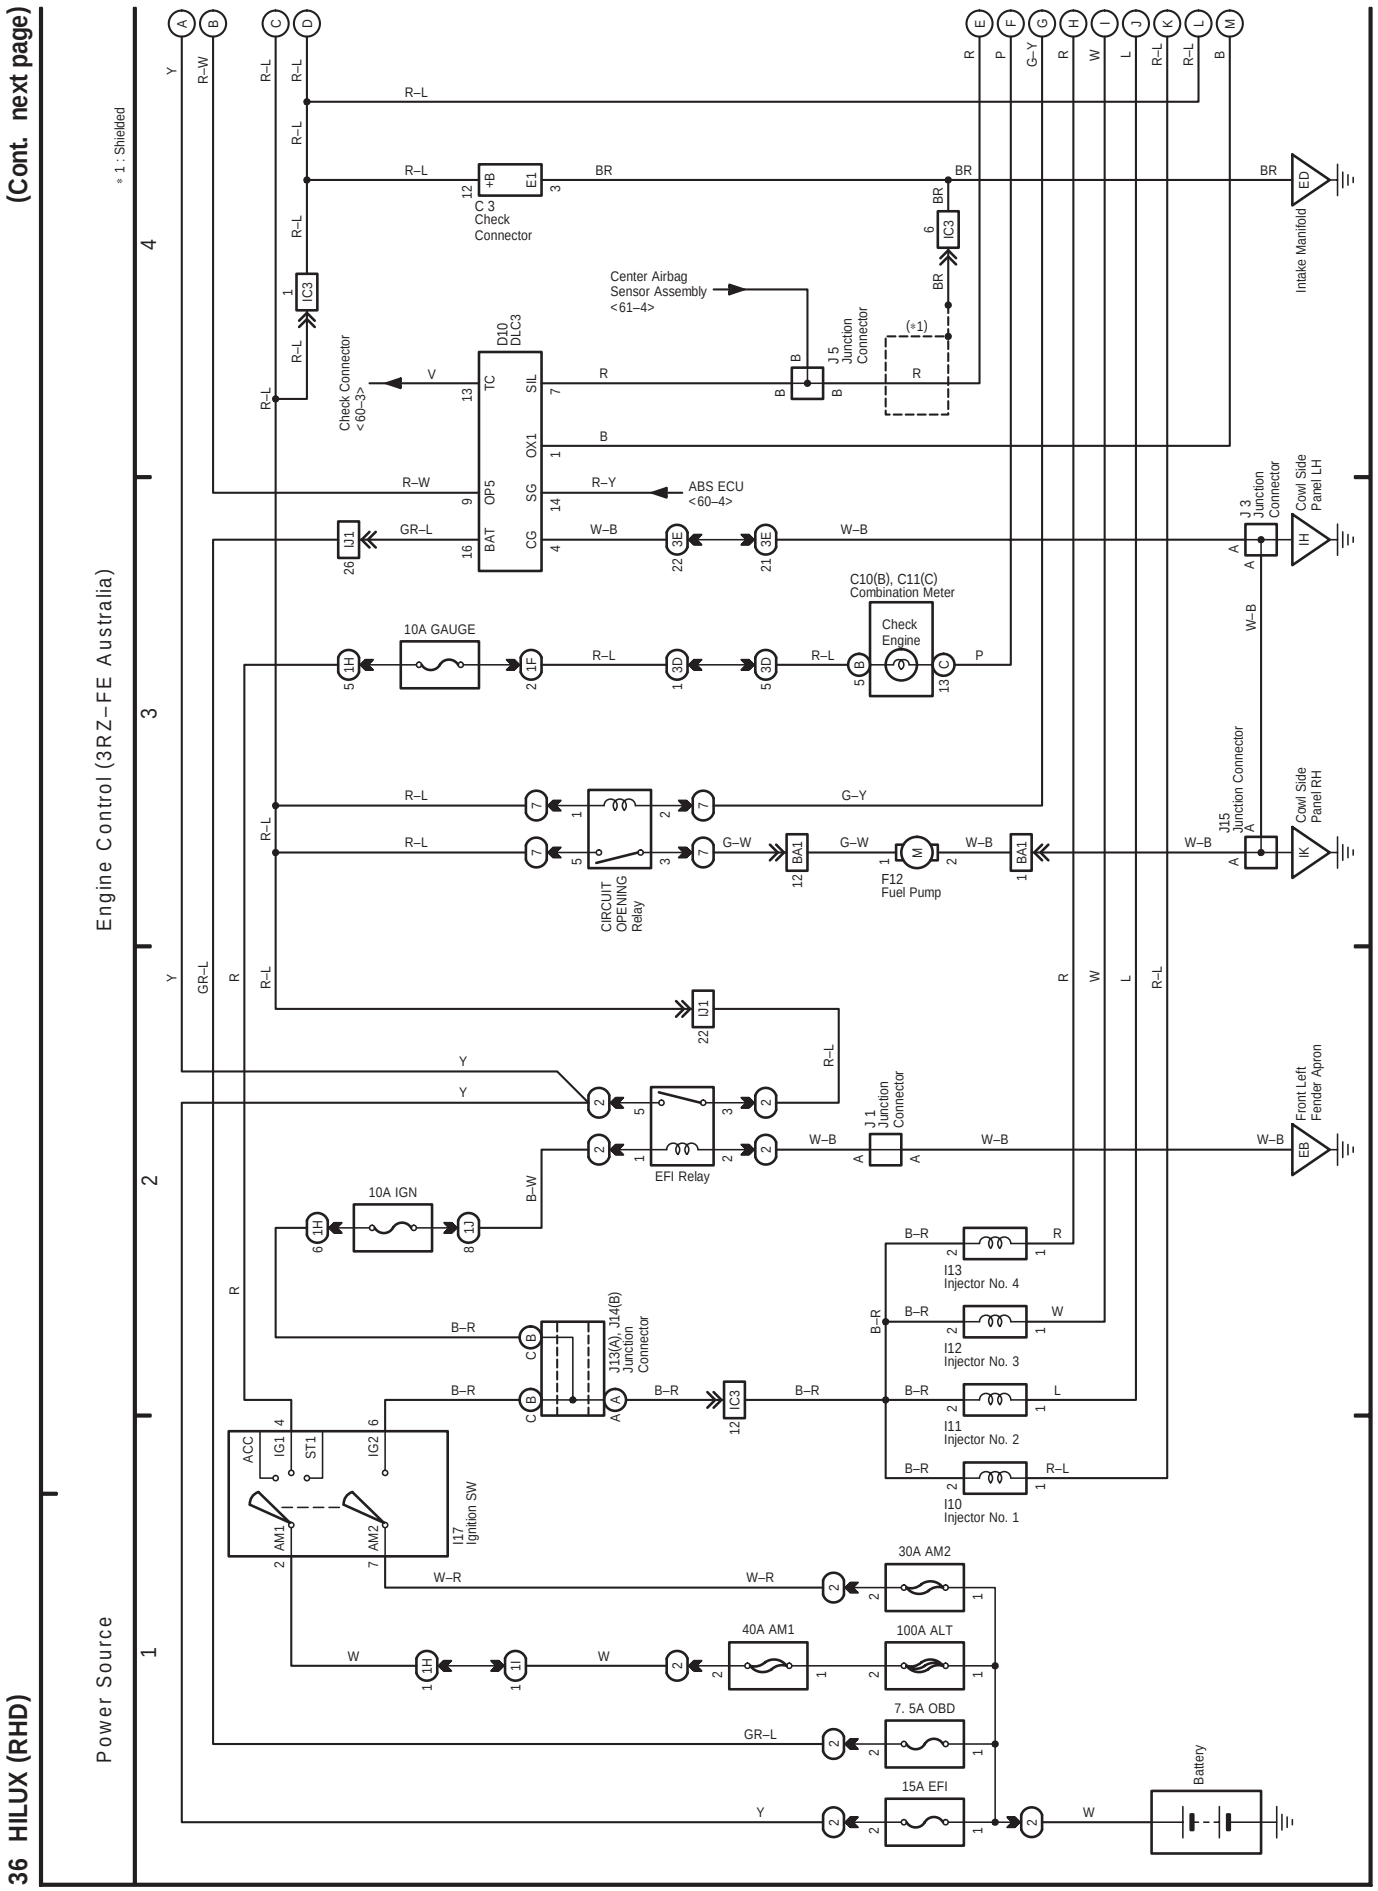

(Cont. next page)
36 HILUX (RHD)
Power Source
Engine Control (3RZ–FE Australia)
*1 : Shielded
C 3 Check Connector
Center Airbag Sensor Assembly <61–4>
Check Connector <60–3>
D10 DLC3
J5 Junction Connector
Intake Manifold
ED
ABS ECU <60–4>
J3 Junction Connector
Cowl Side Panel LH
IH
C10(B), C11(C) Combination Meter
Check Engine
10A GAUGE
J15 Junction Connector
Cowl Side Panel RH
IK
CIRCUIT OPENING Relay
F12 Fuel Pump
J1 Junction Connector
Front Left Fender Apron
EB
EFI Relay
10A IGN
I13 Injector No. 4
I12 Injector No. 3
I11 Injector No. 2
I10 Injector No. 1
J13(A), J14(B) Junction Connector
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
40A AM1
100A ALT
7. 5A OBD
15A EFI
Battery

OVERALL ELECTRICAL WIRING DIAGRAM

