
■FUEL SYSTEM (FOR 2RZ-FE AND 3RZ-FE ENGINES)


1. General

Fuel is supplied under pressure by an electric fuel pump from the fuel tank through the fuel filter to the injectors.

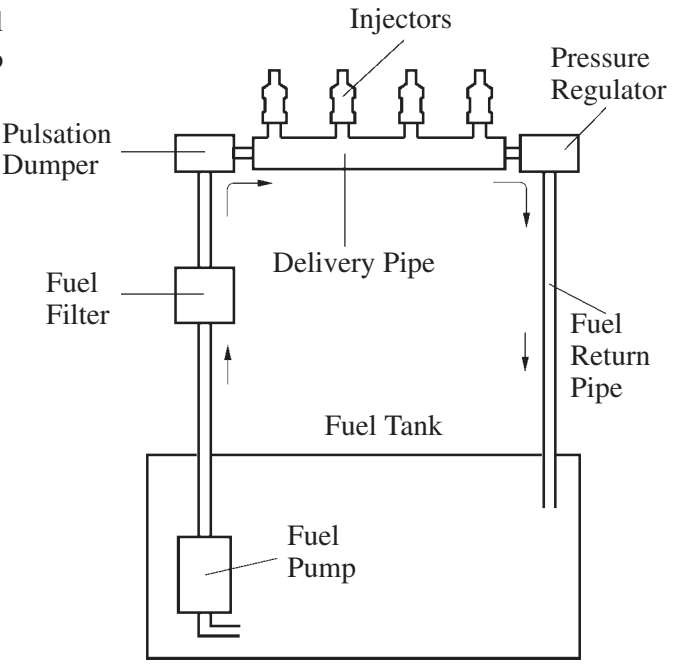

2. Fuel Injectors

2-hole type fuel injectors are used to match the 4-valve-per cylinder engine.

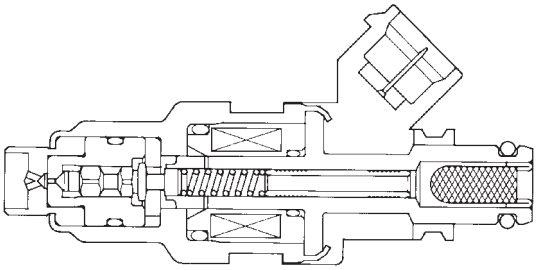

3. Fuel Filter

A quick connector is used to connect the fuel filter and the fuel hose together to improve serviceability. The basic construction of the quick connector is the same as in the 1RZ-E engine. For details see page 53.