
# INTERIOR


## ■COMBINATION METER

- A simple analog combination meter with excellent visibility is used.
- The combination meter with tachometer is available as described in the table below.
- The open door warning light is standard equipment on the double cab model for G.C.C. Countries and optional equipment on the double cab model for Australia.
- The blinking type seat belt warning light is used on the models for G.C.C. Countries.



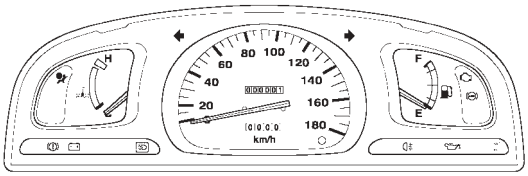


**Without Tachometer** 140IN24

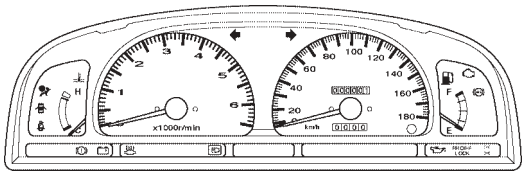


**With Tachometer** 140IN23

**▶ Tachometer ◀**

| Destination / Equipment | Europe | Australia | G.C.C. Countries | General Countries |
|---|---|---|---|---|
| Standard | SR Grade Model | 5L Engine Model | – | SR Grade Model |
| Option | Extra Cab Model | RZ Series Engine Model | All Models | Except 1RZ Engine Model and RZN148L-TRMDK3 |

## ■AIR CONDITIONING


- The availability of the boost ventilator, heater and air conditioner is as follows:

●: Standard ○: Option

| Destination / Item | Europe | Australia | G.C.C. Countries | General Countries |
|---|---|---|---|---|
| Boost Ventilator | | | ○ | ● |
| Heater | ● | ● | ○ | ●*1, ○ |
| Air Conditioner | ○*2 | | ○ | ○ |
| Without Heater | | | ● | |

*1: RZN148L-TRMDK 3
*2: LHD Model with L Series Engine

- An easy-to-use rotary switch and lever type heater control panel is used on the models for Europe, Australia and G.C.C. Countries.
- A rear heater duct has been adopted on some models.

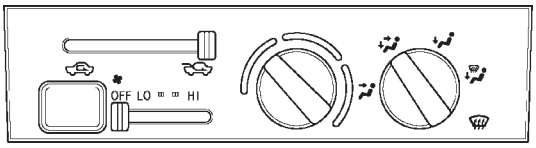


140IN25

**LHD Model**