
Fuel Pressure Regulator

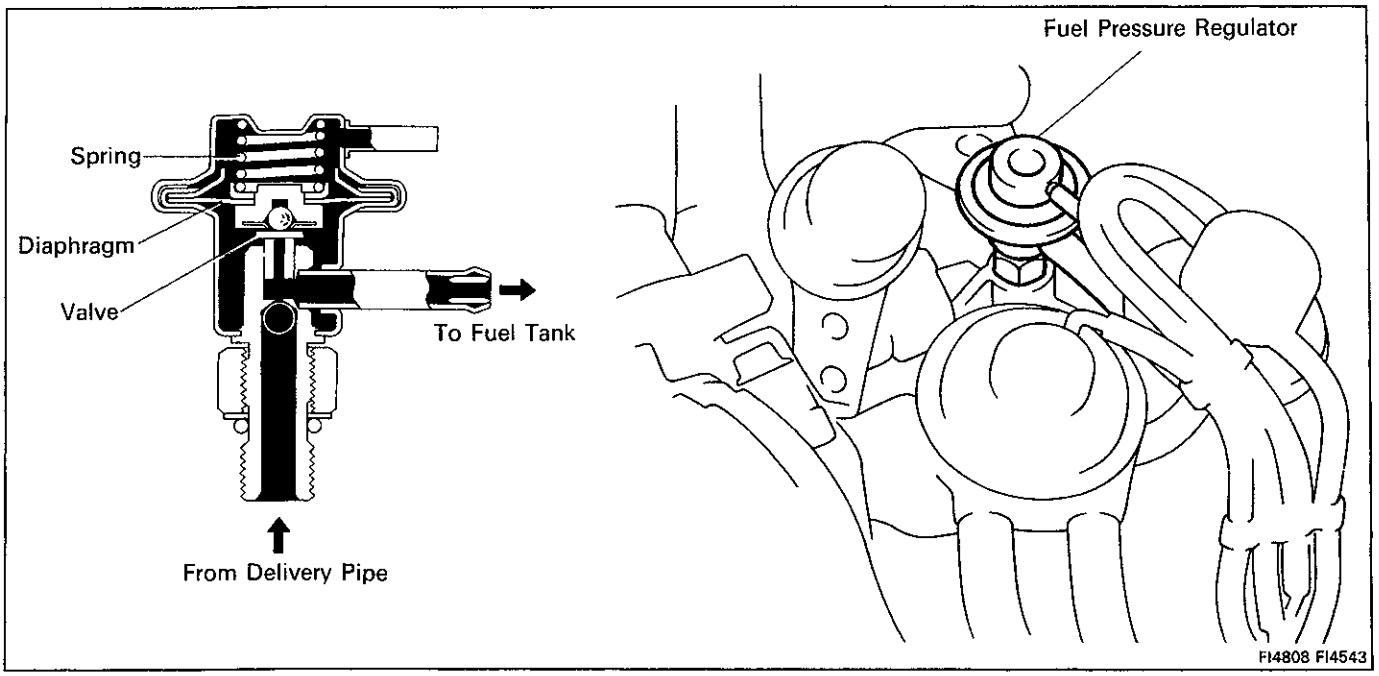

ON-VEHICLE INSPECTION

CHECK FUEL PRESSURE


(See step 2 on pages FI-43 to 45)


REMOVAL OF FUEL PRESSURE REGULATOR


1. **DISCONNECT VACUUM HOSE**

2. **DISCONNECT FUEL RETURN HOSE**
   (a) Place a suitable container or shop towel under the pressure regulator.
   (b) Disconnect the fuel return hose.

3. **REMOVE PRESSURE REGULATOR**
   Loosen the lock nut, and remove the pressure regulator.

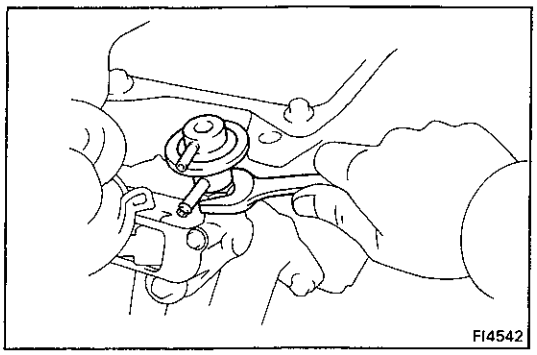

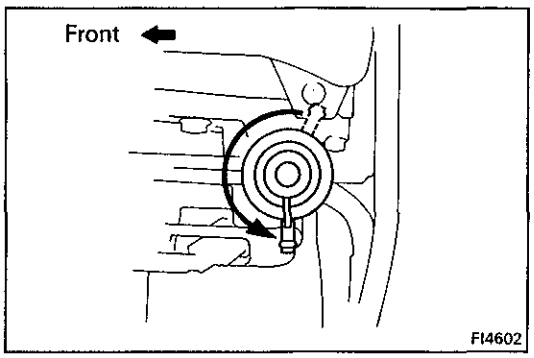

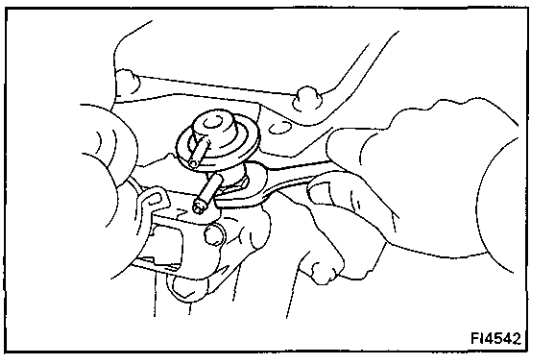

INSTALLATION OF PRESSURE REGULATOR

1. **INSTALL PRESSURE REGULATOR**
   (a) Fully loosen the lock nut of the pressure, regulator.
   (b) Apply a thin coat of gasoline to a new o-ring and install it to the pressure regulator.
   (c) Thrust the pressure regulator completely into the delivery pipe by hand.
   (d) Turn the pressure regulator counterclockwise until the outlet faces in the direction indicated in the figure.
   (e) Torque the lock nut.

   Torque: 250 kg-cm (18 ft-lb, 25 N·m)

2. **CONNECT FUEL RETURN HOSE**

3. **CONNECT VACUUM HOSE**