


EFI Main Relay

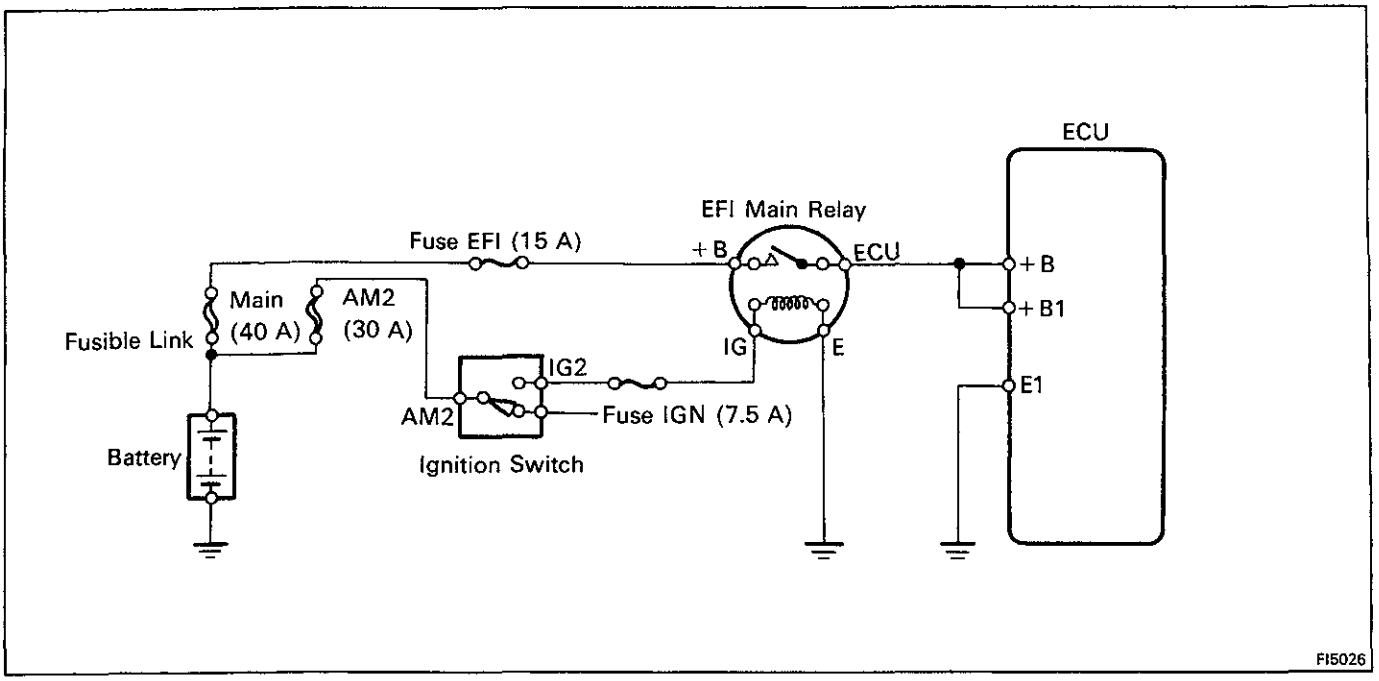

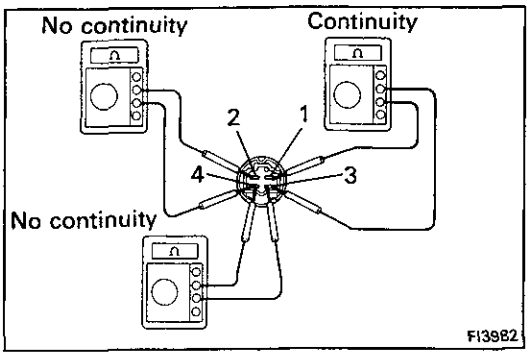

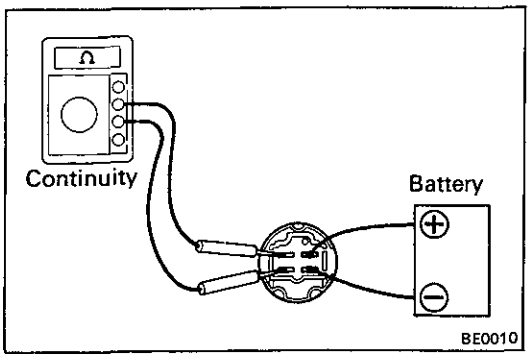

INSPECTION OF EFI MAIN RELAY

1. **INSPECT RELAY CONTINUITY**
   (a) Check that there is continuity between terminals 1 and 3.
   (b) Check that there is no continuity between terminals 2 and 4.
   (c) Check that there is no continuity between terminals 3 and 4.

   If continuity is not as specified, replace the relay.

2. **INSPECT RELAY OPERATION**
   (a) Apply battery voltage across terminals 1 and 3.
   (b) Check that there is continuity between terminals 2 and 4.

   If operation is not as specified, replace the relay.