

Water Temp. Sensor

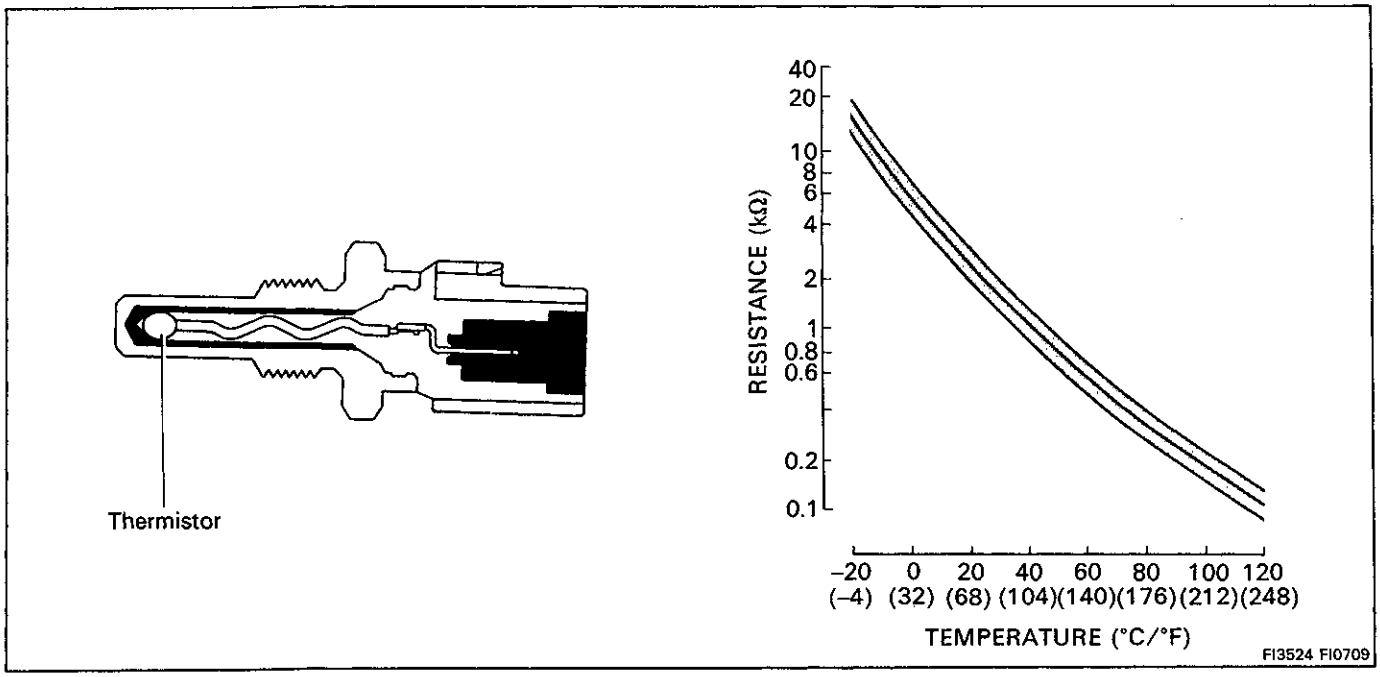

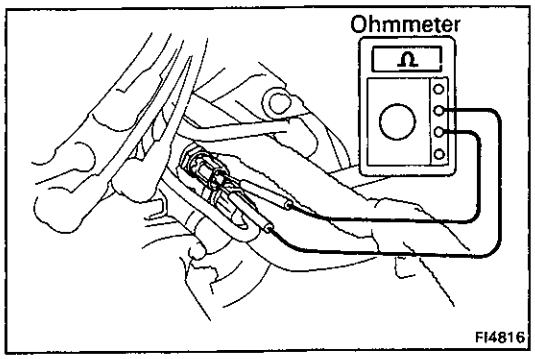

INSPECTION OF WATER TEMP. SENSOR

MEASURE RESISTANCE OF WATER TEMP. SENSOR

(a) Disconnect the connector.

(b) Using an ohmmeter, measure the resistance between both terminals.

Resistance: Refer to chart.