

Intake Air Temp. Sensor

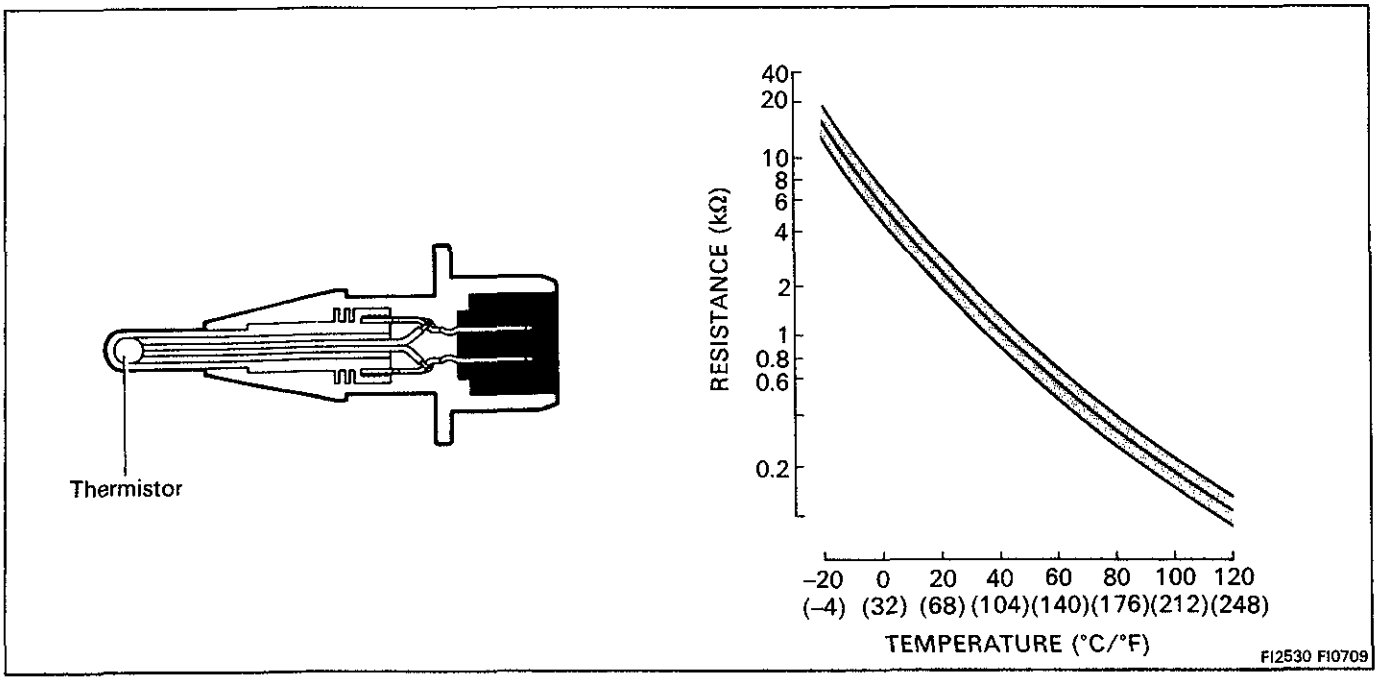

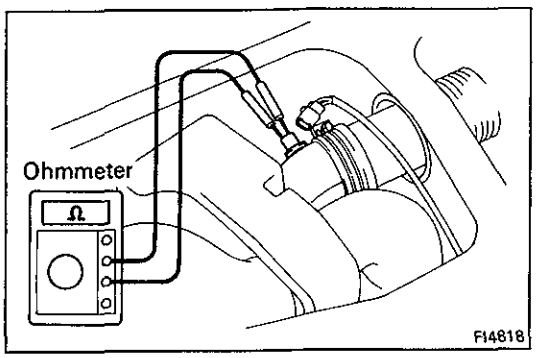

INSPECTION OF INTAKE AIR TEMP. SENSOR

INSPECT RESISTANCE ON INTAKE AIR TEMP. SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to chart

If the resistance is not as specified, replace the sensor.