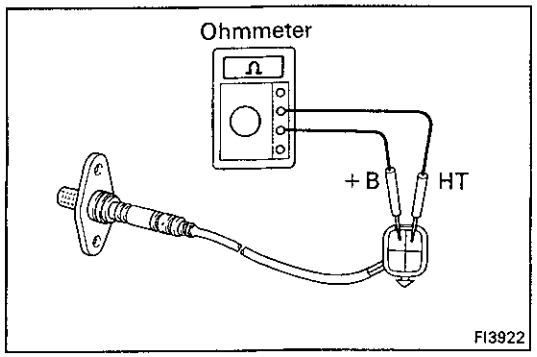


Oxygen Sensor


INSPECTION OF OXYGEN SENSOR

1. INSPECT HEATER RESISTANCE OF OXYGEN SENSOR

Using an ohmmeter, measure the resistance between the terminals +B and HT.

Resistance: 5.1 – 6.3 Ω at 20°C (68°F)

If the resistance is not as specified, replace the oxygen sensor.

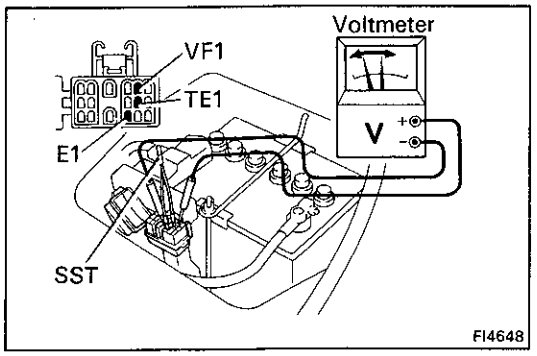


2. INSPECTION OF FEEDBACK VOLTAGE (VF1)

(a) Warm up the engine.

(b) Connect the voltmeter to the check connector terminals VF1 and E1.

HINT: Use SST when connecting between terminals TEI and E1 of the check connector.

SST 09843-18020

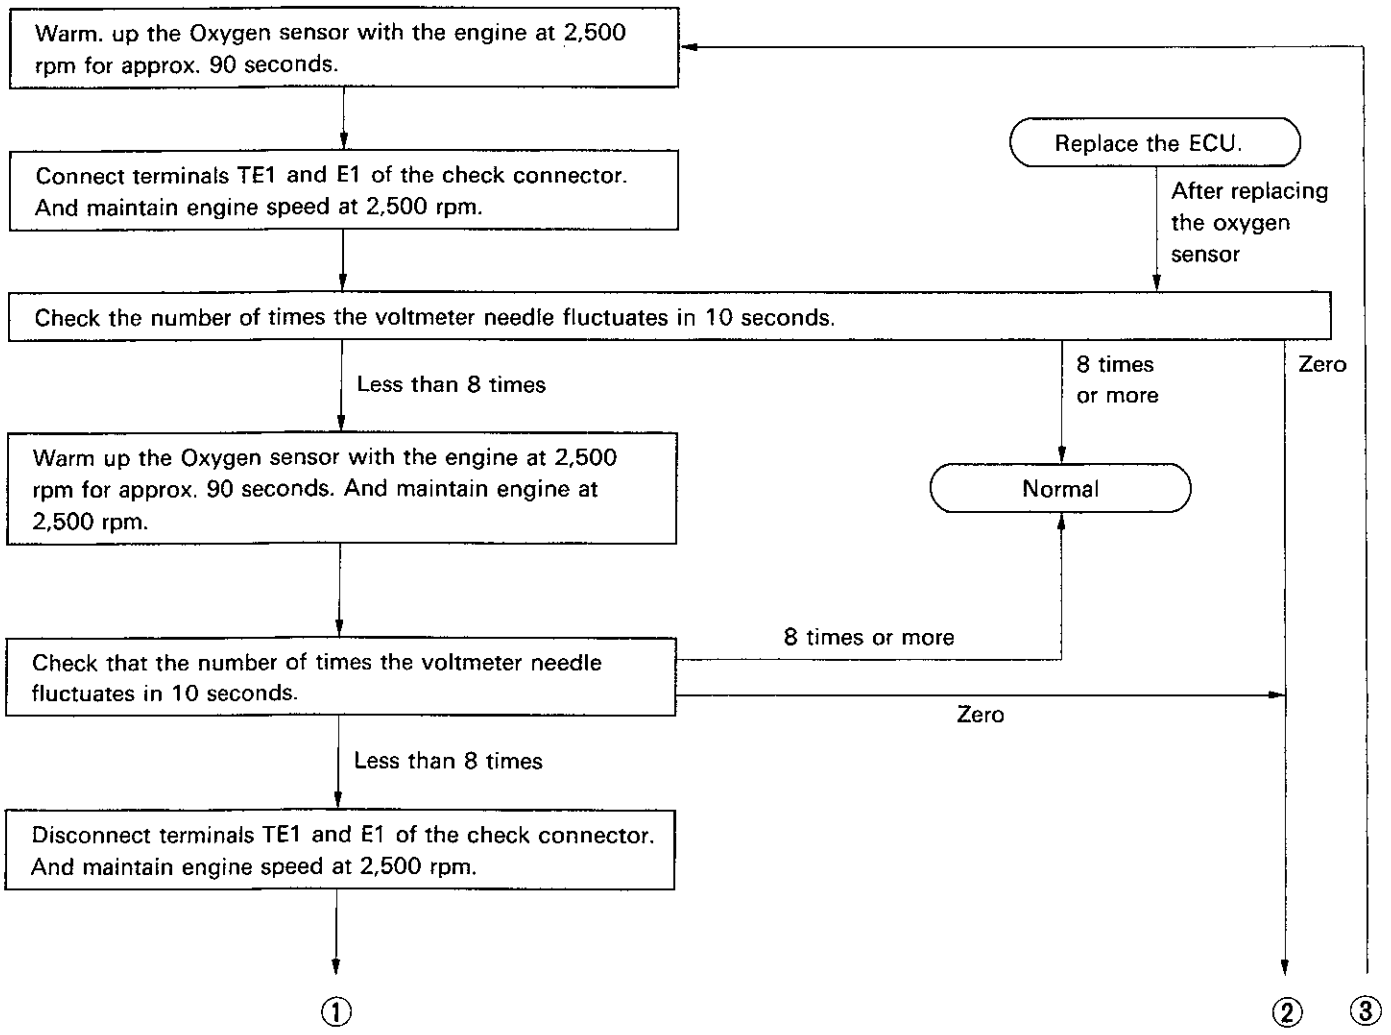

CONTINUED ON PAGE FI-72.

CONTINUED FROM PAGE FI-71.

