

PRECAUTIONS


1. Do not leave the ignition switch on for more than 10 minutes if the engine does not start.

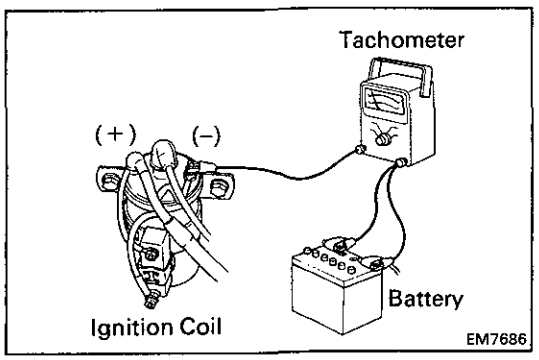

2. [1RZ (Conventional Type)]
When a tachometer is connected to the system, connect the tachometer positive (+) terminal to the ignition coil negative (–) terminal.

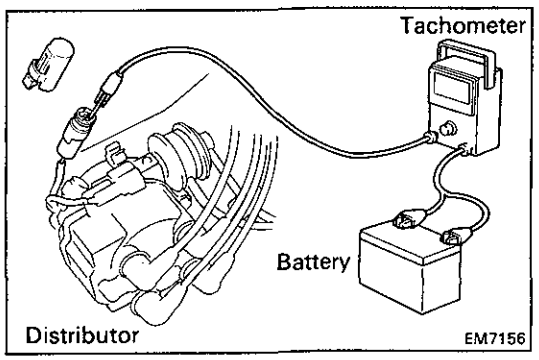

[1RZ (IIA Type) AND 2RZ]
When a tachometer is connected to the system, connect the tachometer positive (+) terminal to the service connector of the distributor.

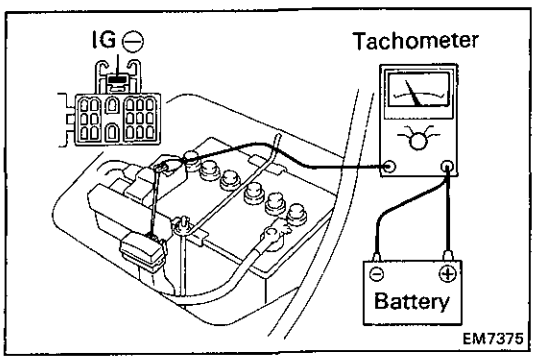

[2RZ-E]
When a tachometer is connected to the system, connect the tachometer positive (+) terminal to the IG⊖ terminal of the check connector.

3. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before using.
4. NEVER allow the tachometer terminals to touch ground as it could result in damage to the igniter and/or ignition coil.
5. Do not disconnect the battery while the engine is running.
6. (2RZ-E)
Make sure that the igniter is properly grounded to the body.