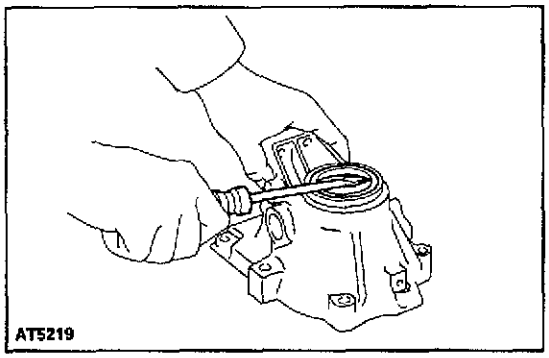



EXTENSION HOUSING

EXTENSION HOUSING DISASSEMBLY

ATDEM–03


1. REMOVE OIL SEAL FROM EXTENSION HOUSING

Using a screwdriver, remove the oil seal.

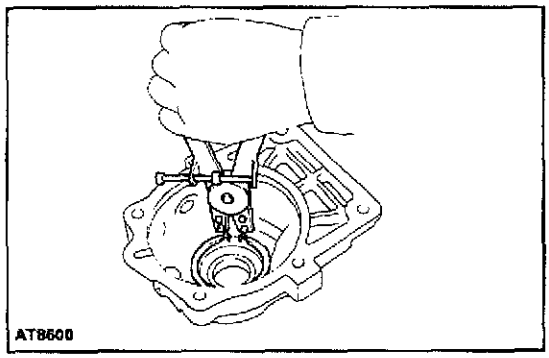

2. REMOVE EXTENSION HOUSING BEARING

(a) Using a snap ring expander, remove the snap ring.

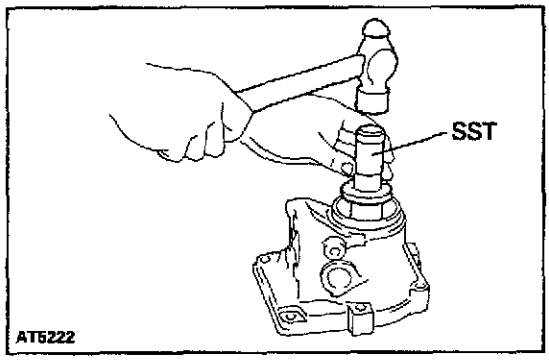


(b) Using SST, drive out the bearing.
SST 09325–12010


EXTENSION HOUSING ASSEMBLY

ATDEM–03


1. INSTALL EXTENSION HOUSING BEARING

(a) Using SST, drive in the bearing.
SST 09350–30020 (09350–32140)

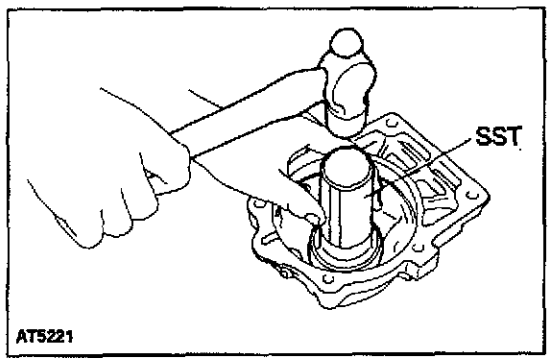

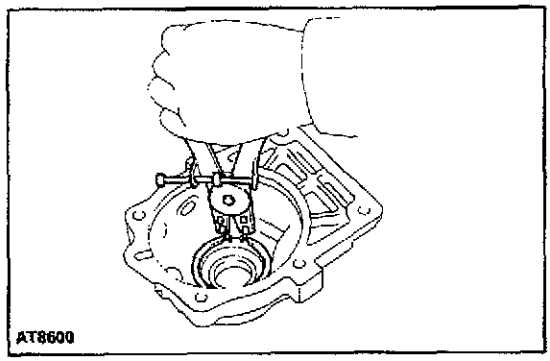

(b) Using a snap ring expander, install the snap ring.

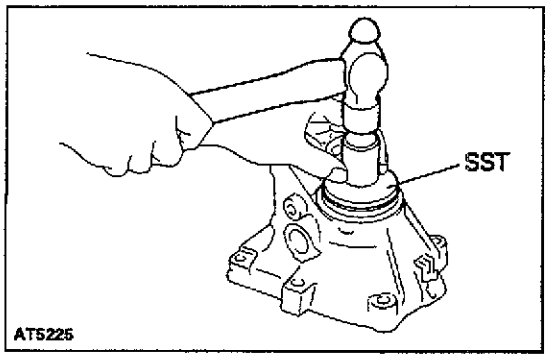

2. INSTALL OIL SEAL TO EXTENSION HOUSING

Using SST, install a new oil seal.

SST 09325−40010