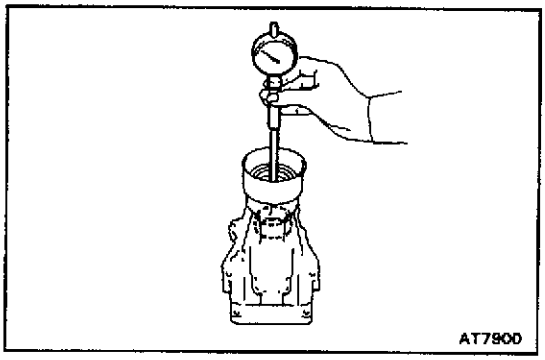


EXTENSION HOUSING

EXTENSION HOUSING INSPECTION

AT06K–03

INSPECT EXTENSION HOUSING BUSHING

Using a cylinder gauge, measure the inside diameter of the extension housing bushing.

Maximum inside diameter:

40.09 mm (1.5783 in.)

If the inside diameter is greater than the maximum, replace the extension housing.