

TRANSFER EXTENSION HOUSING

COMPONENTS

AT0KR-01

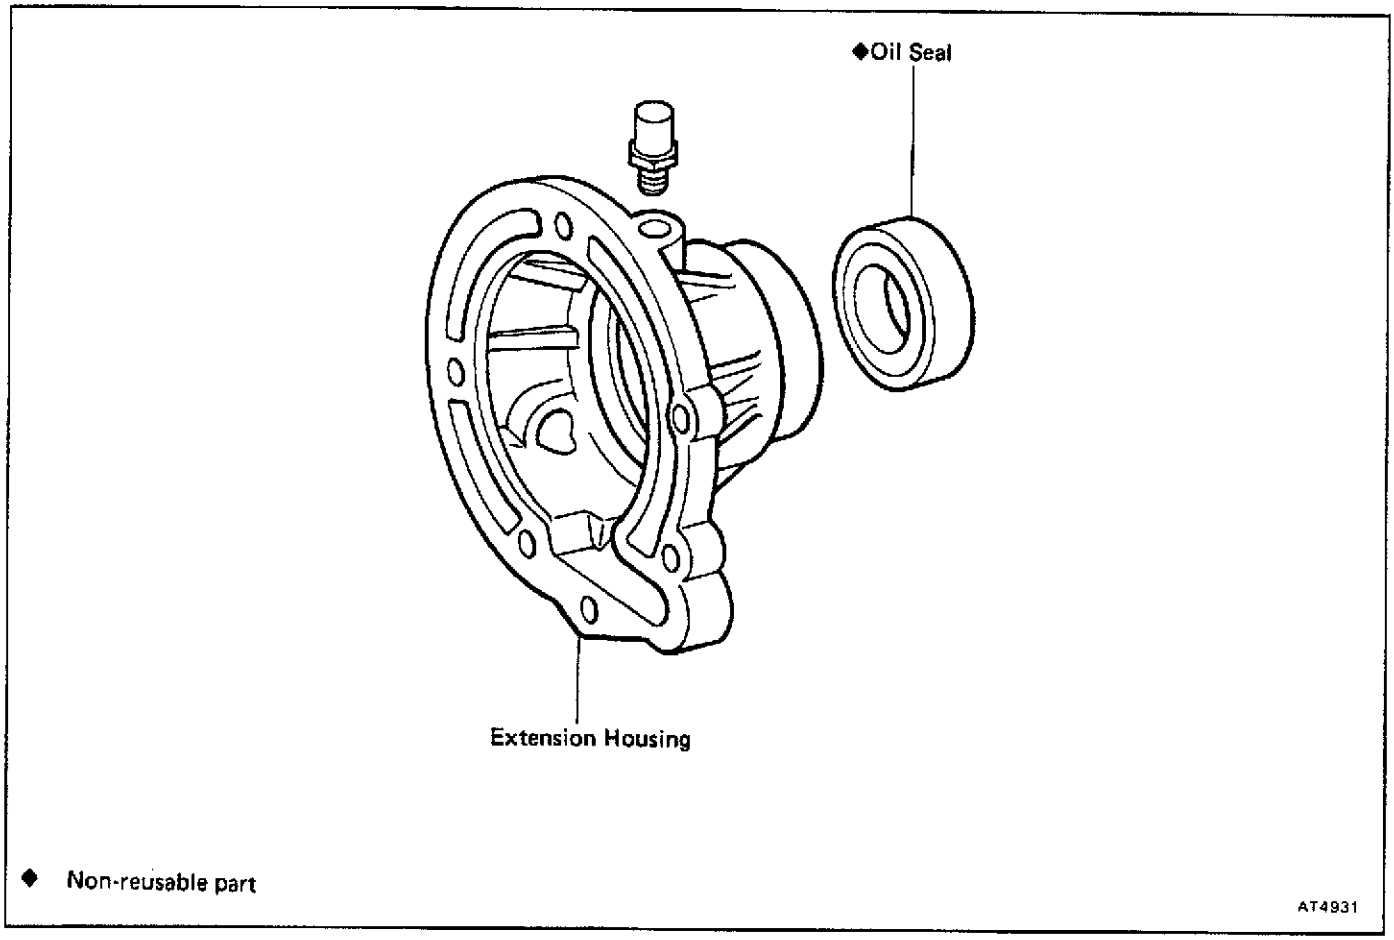

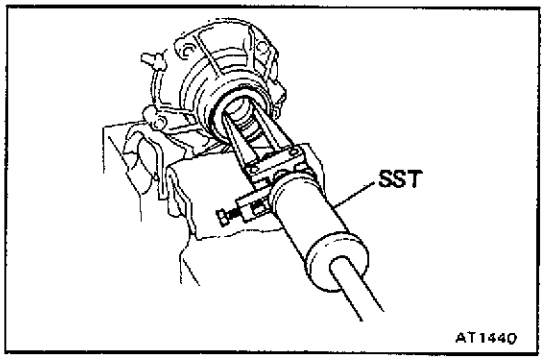


TRANSFER EXTENSION HOUSING INSPECTION

AT0K8-01

HINT: If the bearing is worn, replace the extension housing assembly.

IF NECESSARY, REPLACE OIL SEAL

(a) Using SST, remove the oil seal
SST 09308–00010

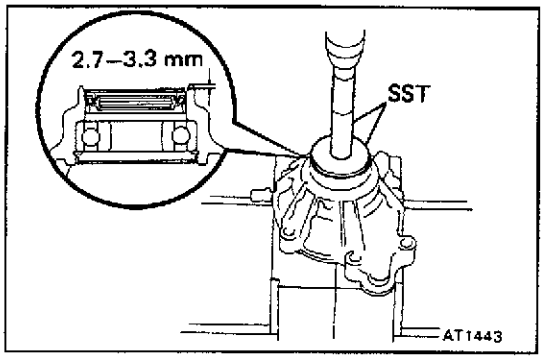

(b) Using SST and a press, install a new oil seal to the extension housing.
SST 09608–35014 (09608–06020, 09608–06100)
Oil seal depth:
2.7 – 3.3 mm (0.106 – 0.130 in.)

(c) Coat the oil seal lip with MP grease.