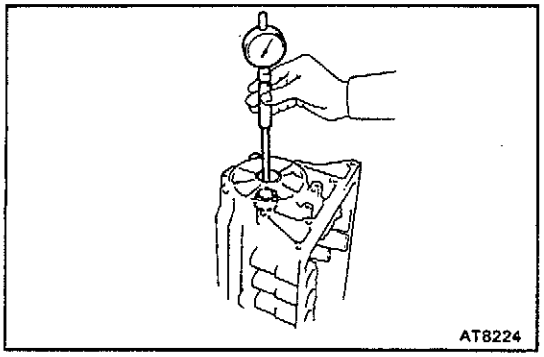

AT8224

TRANSMISSION CASE

TRANSMISSION CASE INSPECTION

AT06J-05

INSPECT TRANSMISSION CASE BUSHING

Using a cylinder gauge, measure the inside diameter of the transmission case rear bushing.

Maximum inside diameter:

38.19 mm (1.5035 in.)

If the inside diameter is grease than the maximum, replace the transmission case.