
Soft brush	
Solvent	
Spring tester	Valve spring
Steel square	Valve spring
Thermometer	
Torque wrench	
Valve seat cutter	
V–block	
Vernier calipers	
Wire brush	Valve

SSM (SPECIAL SERVICE MATERIALS)

EG081–2L

08826–00080	Seal Packing Black or equivalent (FIPG)	Cylinder head gasket Cylinder head semi–circular plug Cylinder head cover
08826–00080	Seal Packing Black or equivalent (FIPG)	Rear oil seal retainer
08826–00100	Seal Packing 1282B, THREE BOND 1282B or equivalent (FIPG)	Cylinder head rear plate Engine coolant drain union
08833–00070	Adhesive 1324, THREE BOND 1324 or equivalent	Flywheel bolt

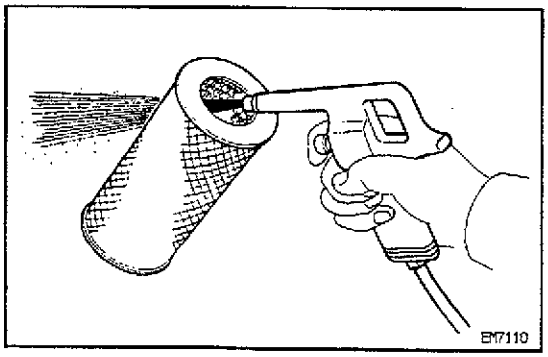

AIR FILTER INSPECTION AND CLEANING

EG058–02

1. **REMOVE AIR FILTER**
2. **INSPECT AIR FILTER**
   Visually check that the filter element is not excessively dirty, damaged or oily.
3. **CLEAN AIR FILTER**
   Clean the filter element with compressed air.
   First blow from the inside thoroughly. Then blow off the outside of the filter element.
4. **REINSTALL AIR FILTER**