
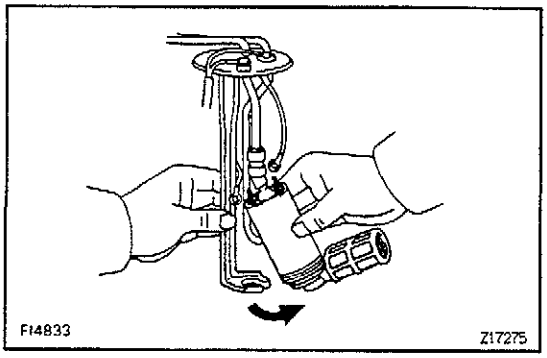


FUEL PUMP ASSEMBLY

1. **INSTALL FUEL PUMP FILTER TO FUEL PUMP**
   Install the pump filter with a new clip.
2. **INSTALL FUEL PUMP TO FUEL PUMP BRACKET**

(a) Connect the fuel hose to the outlet port of the fuel pump.
(b) Install the rubber cushion to the fuel pump.
(c) Install the fuel pump by pushing the lower side of the fuel pump.
(d) Connect the 2 lead wires to the fuel pump with the 2 spring washers and 2 nuts.

EG

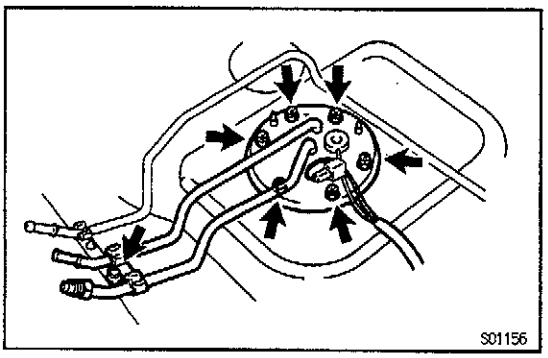

FUEL PUMP INSTALLATION

1. **INSTALL FUEL PUMP AND BRACKET ASSEMBLY**

(a) Install a new gasket to the fuel pump bracket.
(b) Attach the fuel pump and bracket assembly to the fuel tank.
(c) Install the fuel pump bracket with the 6 bolts.
Torque: 3.5 N·m (35 kgf-cm, 31 in.-lbf)
(d) Install the fuel pipe clamp to the fuel tank with the bolt.

2. **INSTALL FUEL TANK TO VEHICLE**
(See fuel tank and line in Body in Pub. No. RM156E)
3. **CHECK FOR FUEL LEAKS**
(See step 5 in fuel system in precaution)


FUEL PRESSURE REGULATOR
ON–VEHICLE INSPECTION

INSPECT FUEL PRESSURE
(See step 2 in on–vehicle inspection in fuel pump)

EG12R-0E

COMPONENTS FOR REMOVAL AND INSTALLATION


EG

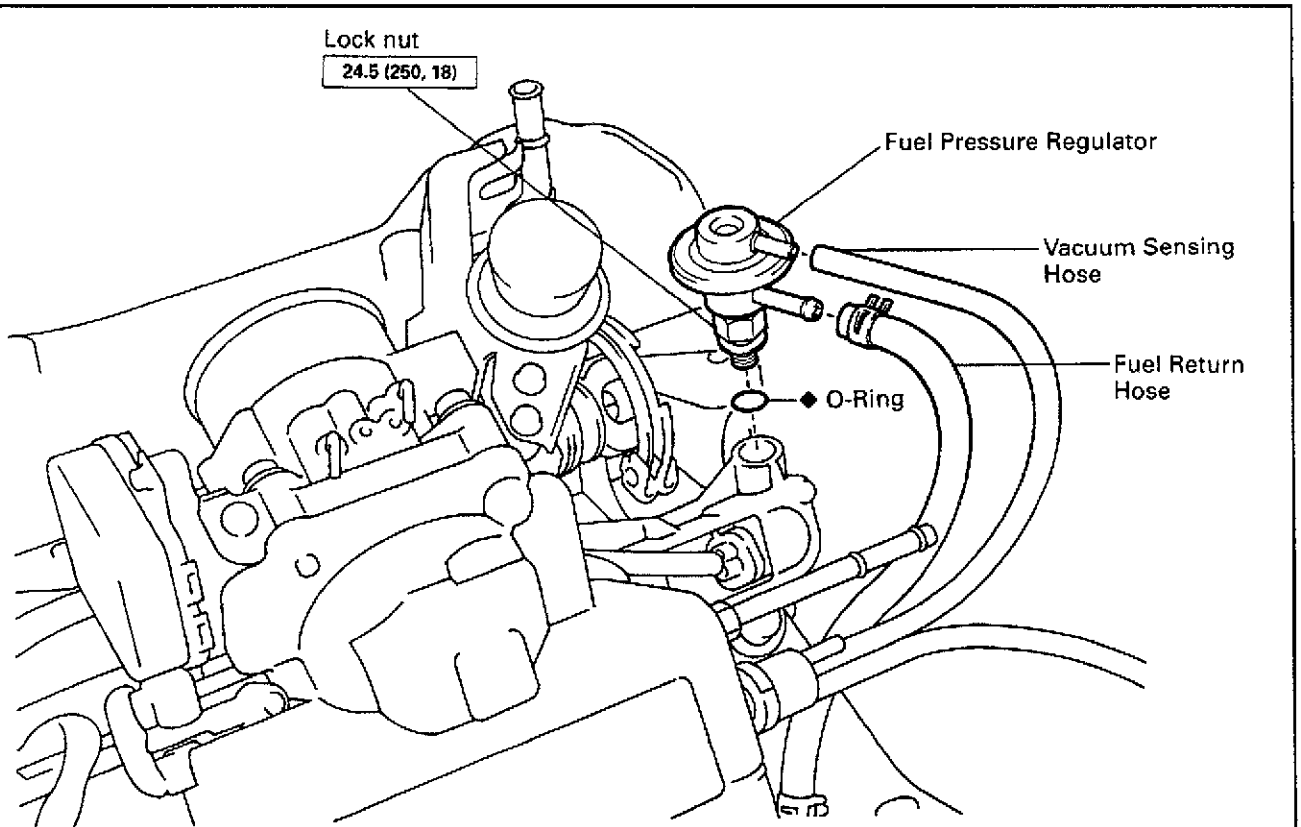

FUEL PRESSURE REGULATOR REMOVAL

EG0RF-01

1. **DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR**
2. **DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR**
   Disconnect the fuel return hose, and plug the hose end.

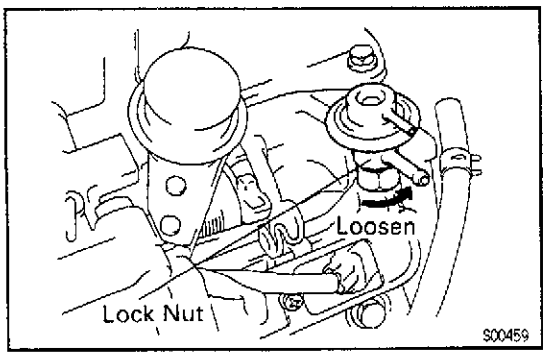

3. **REMOVE FUEL PRESSURE REGULATOR**

(a) Loosen the lock nut, and remove the pressure regulator.

(b) Remove the O–ring from the pressure regulator.