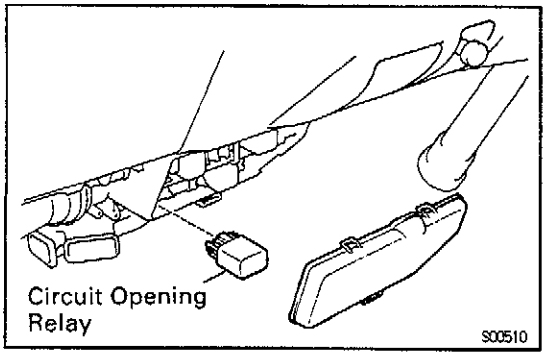



CIRCUIT OPENING RELAY

EG0RU-01

CIRCUIT OPENING RELAY (Marking: EFI C/O) INSPECTION

1. REMOVE CIRCUIT OPENING RELAY

EG

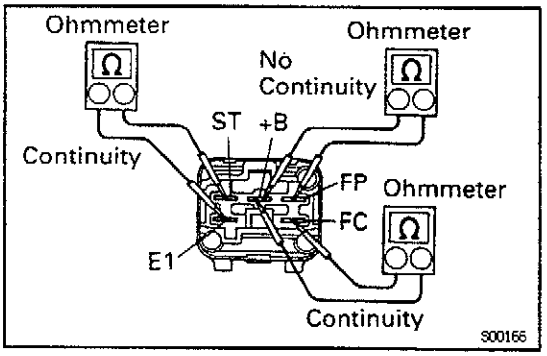


2. INSPECT CIRCUIT OPENING RELAY

A. Inspect relay continuity

(a) Using and ohmmeter, check that there is continuity between terminals ST and E1.
If there is no continuity, replace the relay.

(b) Check that there is continuity between terminals +B and FC.
If there is no continuity, replace the relay.


(c) Check that there is no continuity between terminals +B and FP.
If there is continuity, replace the relay.

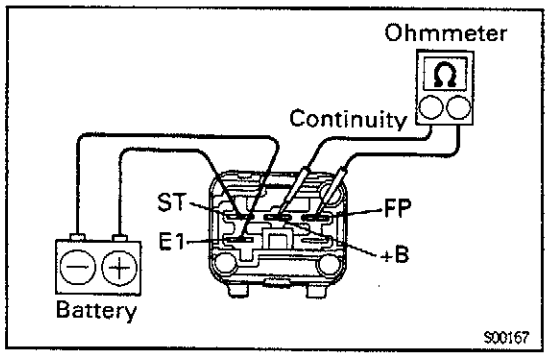

B. Inspect relay operation

(a) Apply battery voltage across terminals ST and E1.

(b) Using an ohmmeter, check that there is continuity between terminals +B and FP.
If there is no continuity, replace the relay.

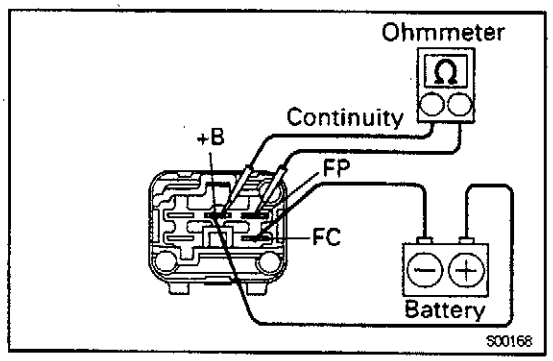

(c) Apply battery voltage across terminals +B and FC.

(d) Check that there is continuity between terminals +B and FP.
If there is no continuity, replace the relay.

3. REINSTALL CIRCUIT OPENING RELAY