
EG

FUEL PUMP RELAY


E0070-13

COMPONENTS FOR REMOVAL AND INSTALLATION

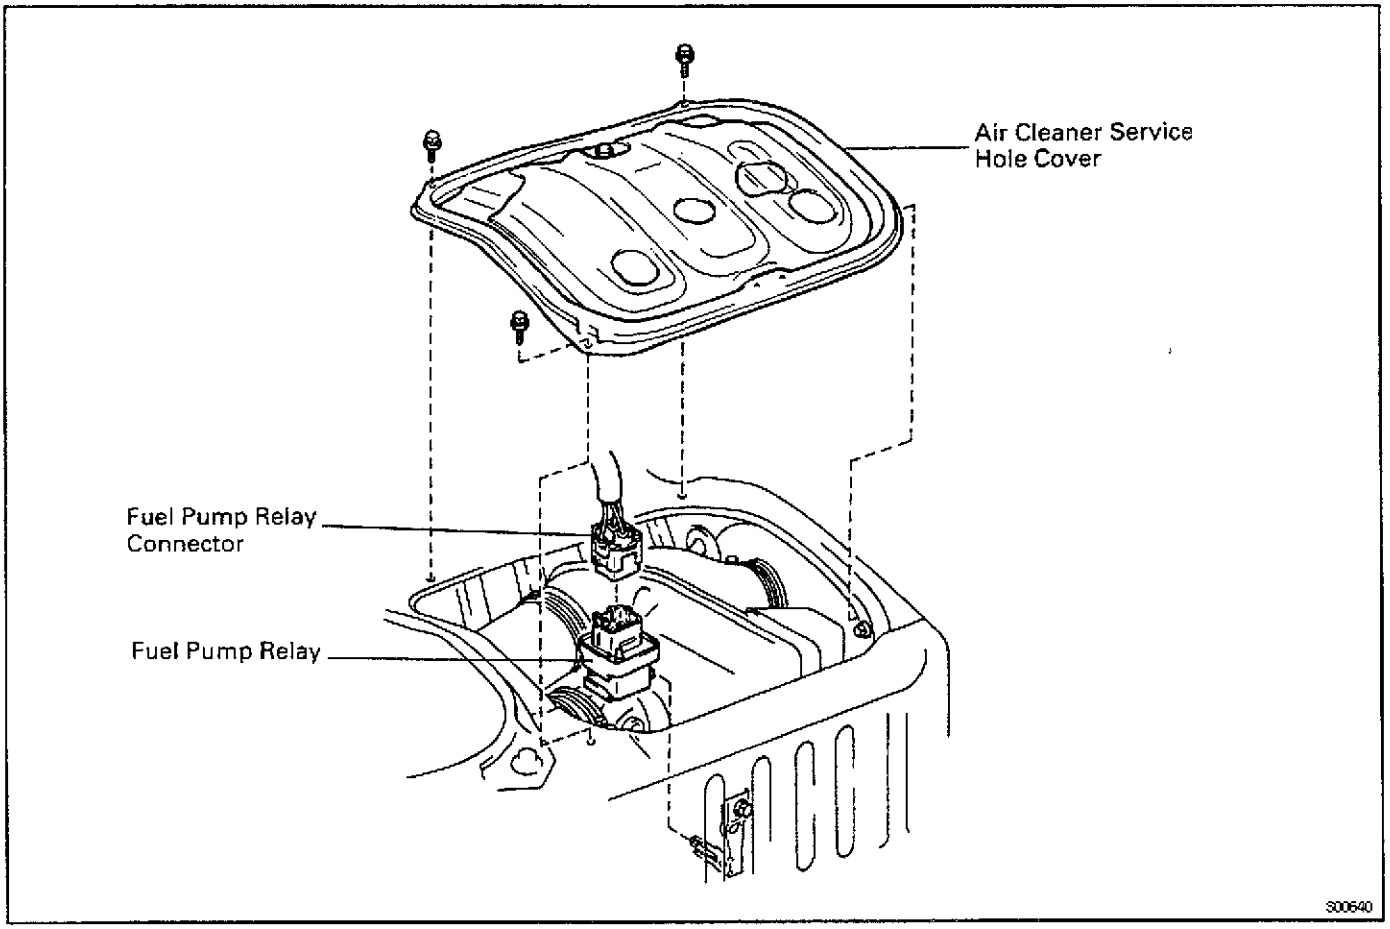

E0BRH-01

FUEL PUMP RELAY INSPECTION

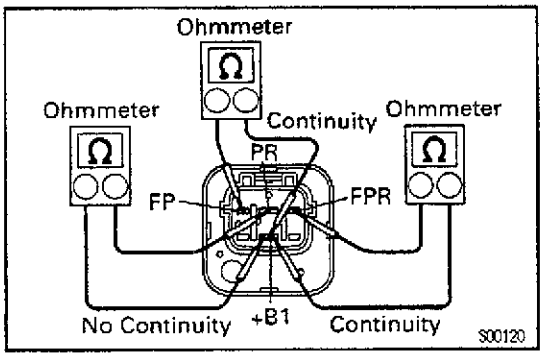

1. **REMOVE FUEL PUMP RELAY**
2. **INSPECT FUEL PUMP RELAY**

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals +B1 and FPR.
If there is no continuity, replace the relay.

(b) Check that there is continuity between terminals +B1 and FP.
If there is no continuity, replace the relay.

(c) Check that there is no continuity between terminals +B1 and PR.
If there is continuity, replace the relay.