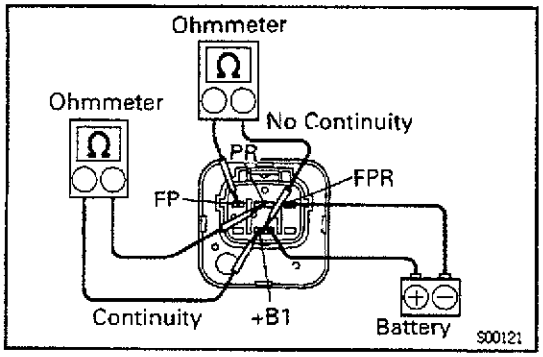


B. Inspect relay operation

(a) Apply battery voltage across terminals +B1 and FPR.

(b) Using an ohmmeter, check that there is no continuity between terminals +B1 and FP.
If there is continuity, replace the relay.

(c) Check that there is continuity between terminals +B1 and PR.
If there is no continuity, replace the relay.


3. REINSTALL FUEL PUMP RELAY


EG

FUEL PUMP RESISTOR

EG07Q-14

COMPONENTS FOR REMOVAL AND INSTALLATION

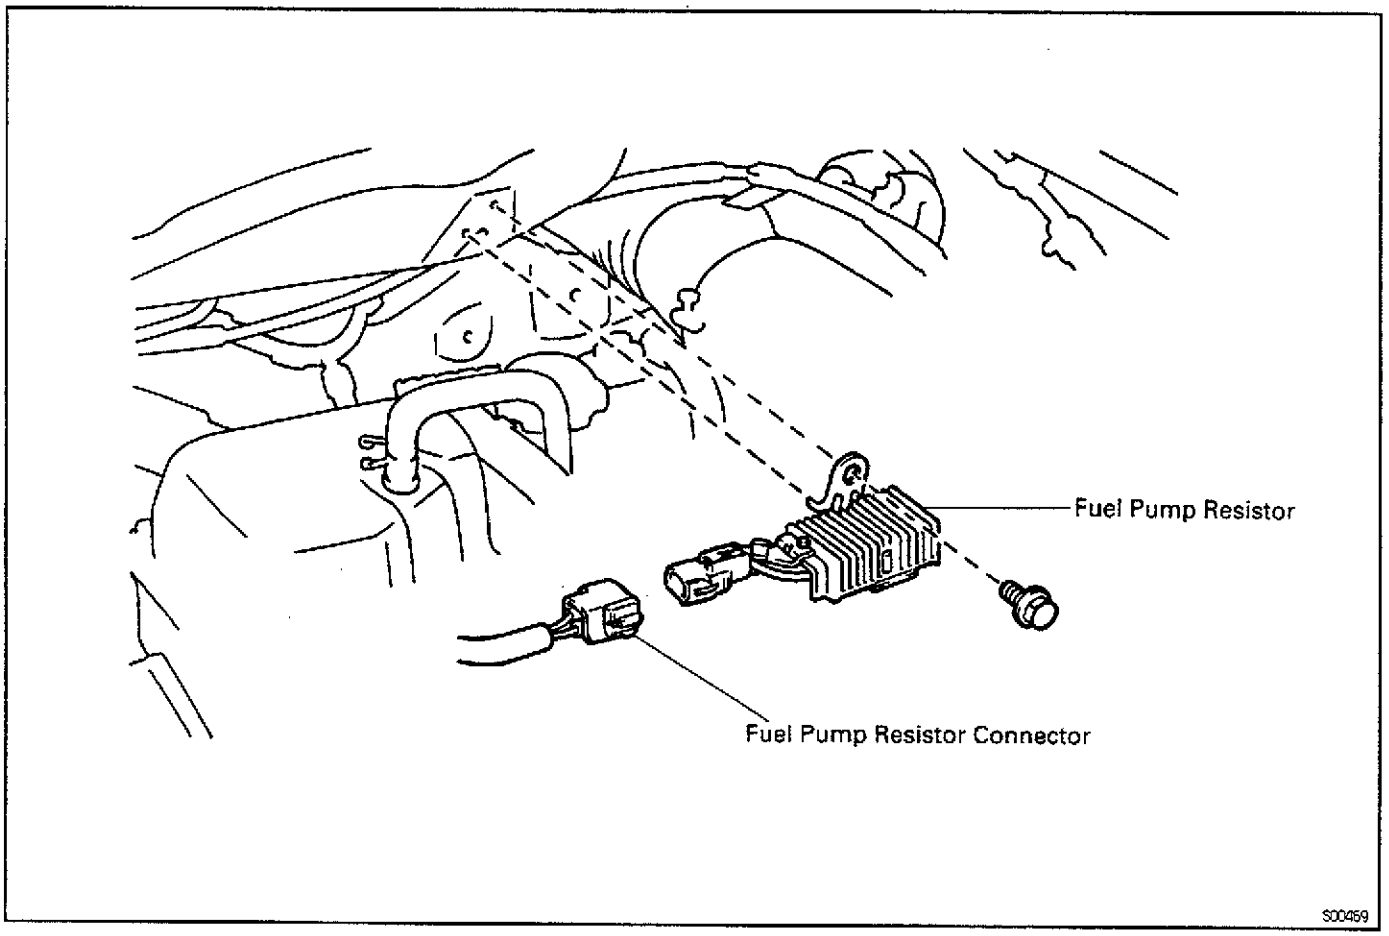

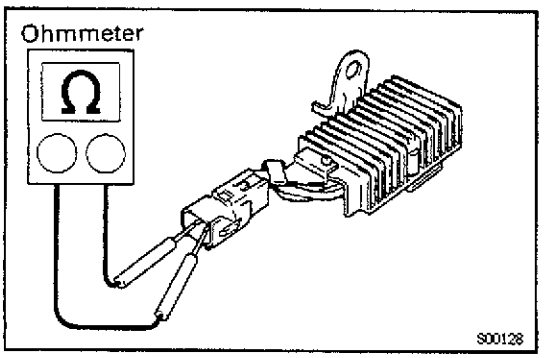

FUEL PUMP RESISTOR INSPECTION

EG5FQ-04

INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

At 20°C (68°F) 0.61 – 0.67 Ω

If the resistance is not as specified, replace the resistor.