

WATER TEMPERATURE SENSOR

COMPONENTS FOR REMOVAL AND INSTALLATION

EG8QX-01

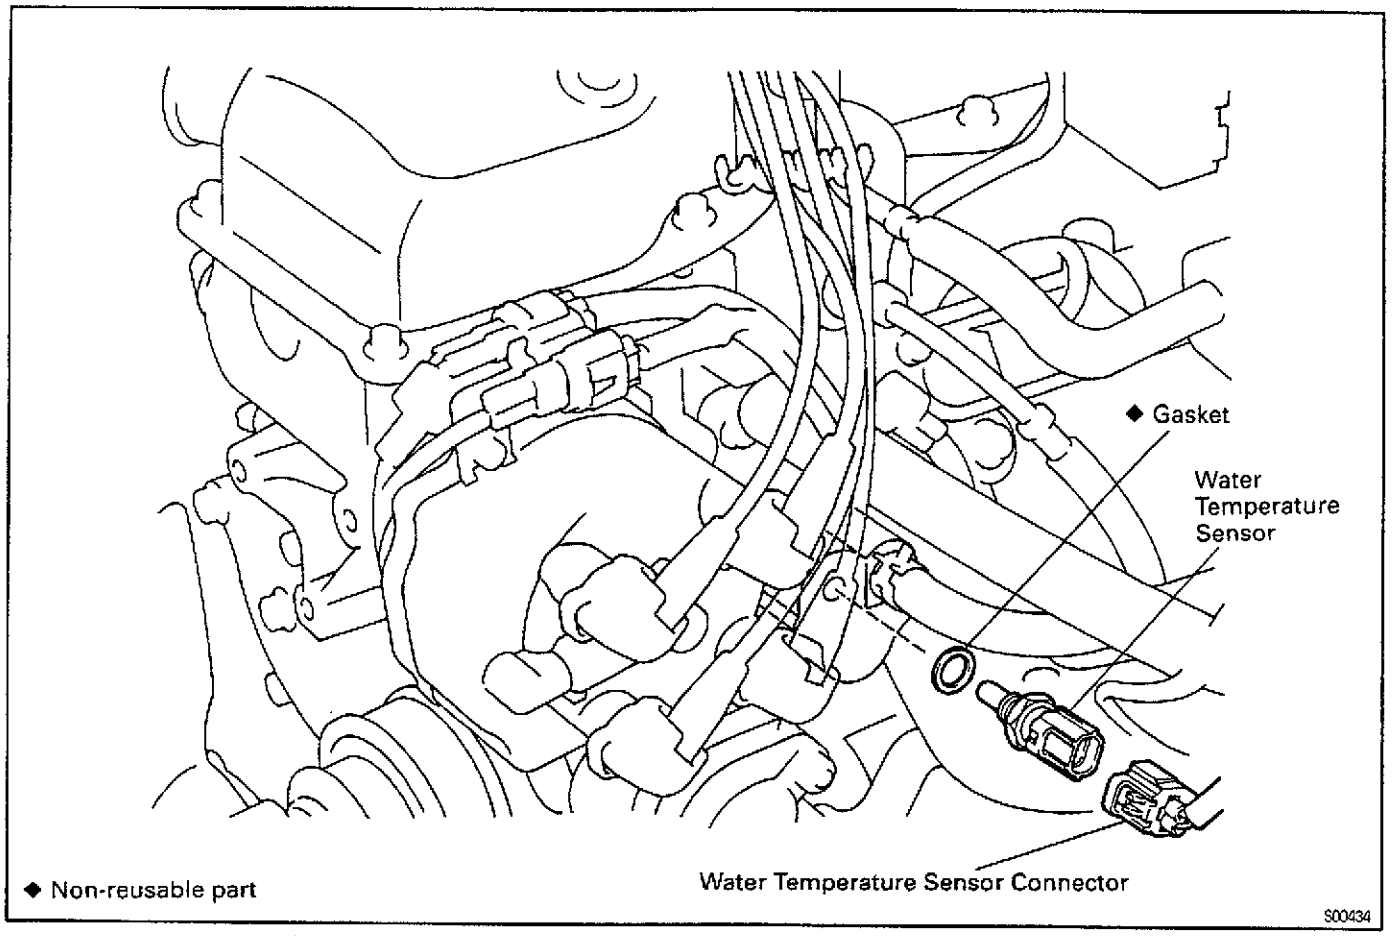

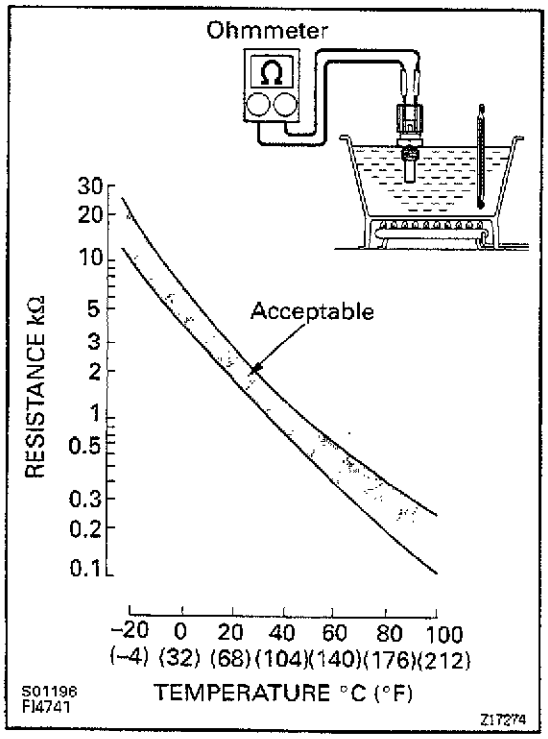

EG4QY-01

WATER TEMPERATURE SENSOR INSPECTION

1. **DRAIN ENGINE COOLANT**
2. **REMOVE WATER TEMPERATURE SENSOR**

(a) Disconnect the sensor connector.

(b) Remove the sensor and gasket.

3. **INSPECT WATER TEMPERATURE SENSOR**

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Refer to the chart graph

If the resistance is not as specified, replace the sensor.

4. **REINSTALL WATER TEMPERATURE SENSOR**

(a) Install a new gasket and the sensor.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

(b) Connect the sensor connector.

5. **REFILL WITH ENGINE COOLANT**