
INTAKE AIR TEMPERATURE SENSOR

EG14F-02

COMPONENTS FOR REMOVAL AND INSTALLATION

EG

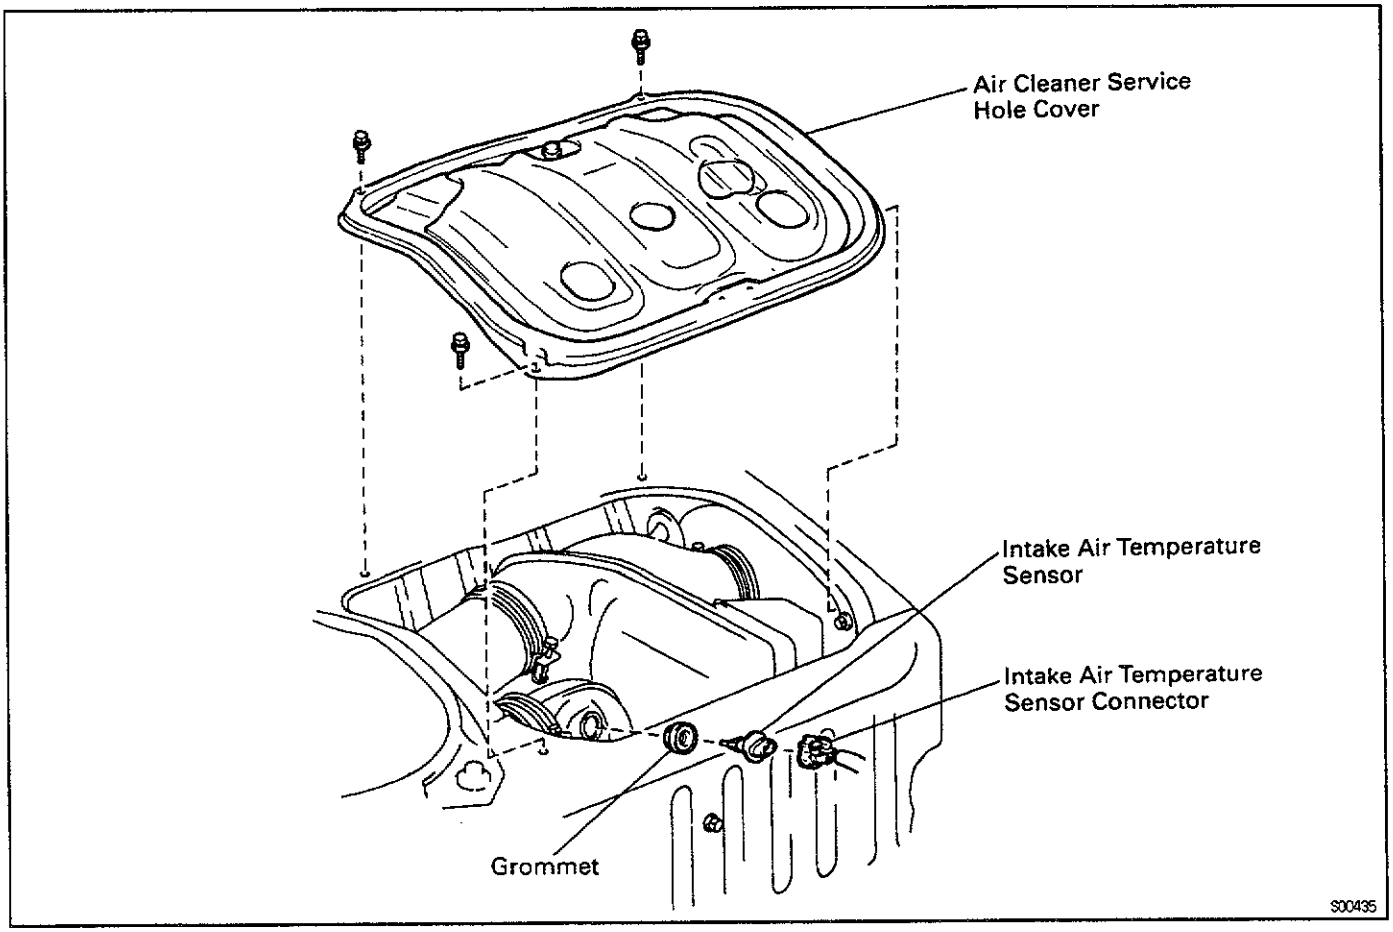

EG80Z-01

INTAKE AIR TEMPERATURE SENSOR INSPECTION

1. **REMOVE INTAKE AIR TEMPERATURE SENSOR**
2. **INSPECT INTAKE AIR TEMPERATURE SENSOR**
   Using an ohmmeter, measure the resistance between the terminals.
   Resistance:
   Refer to the graph
   If the resistance is not as specified, replace the sensor.
3. **REINSTALL INTAKE AIR TEMPERATURE SENSOR**

