EG14X-16

LUBRICANT


Item	Capacity	Classification
Engine oil		API grade SG, SH or ILSAC multigrade
Dry fill	4.9 liters (5.2 US qts, 4.3 Imp. qts)	engine oil and recommended viscosity oil
Drain and refill		
w/ Oil filter change	4.3 liters (4.5 US qts, 3.8 Imp. qts)	
w/o Oil filter change	4.1 liters (4.3 US qts, 3.6 Imp. qts)	

EG

EG14Y-03

SSM (SPECIAL SERVICE MATERIALS)

08826–00080	Seal Packing Black or equivalent (FIPG)	Oil pan
08833–00080	Adhesive 1344, THREE BOND 1344, LOCTITE 242 or equivalent	Oil pressure switch

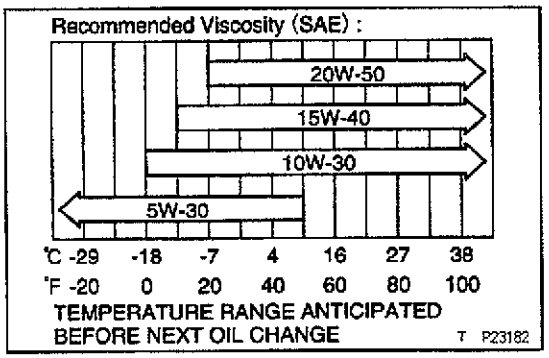

OIL PRESSURE CHECK

EG082-01


1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

Oil grade:

API grade SG, SH or ILSAC multigrade engine oil. Recommended viscosity is as shown in the illustration.

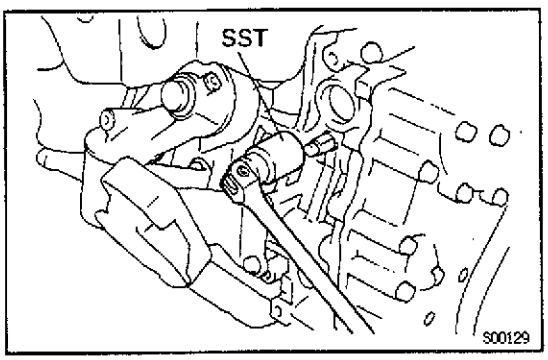


2. CHECK ENGINE OIL LEVEL

The oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to "F" mark.

3. REMOVE OIL PRESSURE SWITCH AND INSTALL OIL PRESSURE GAUGE

(a) Using SST, remove the oil pressure switch.
SST 09816–30010

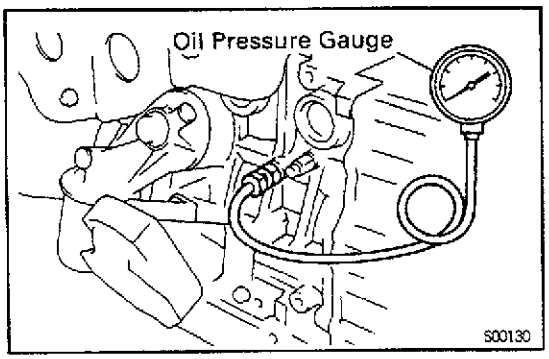

(b) Install the oil pressure gauge.

4. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.