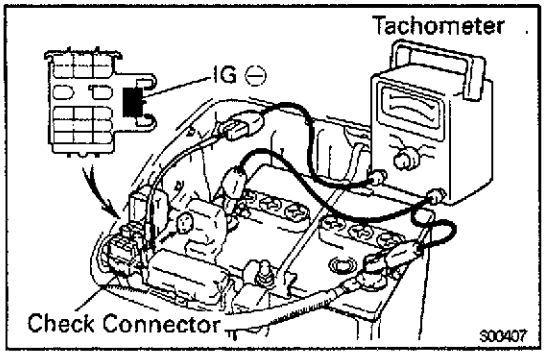


IG

PRECAUTION

1. With a tachometer connected to the system, connect the tester probe of the tachometer to terminal IG⊖ of the check connector.
2. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your before use.
3. Never allow the tachometer terminals to touch ground as it could result in damage to the igniter and/or ignition coil.
4. Do not disconnect the battery while the engine is running.
5. Check that the igniter is properly grounded to the body.

PREPARATION

RECOMMENDED TOOLS

	09082–00050	TOYOTA Electrical Tester Set.	
	09200–00010	Engine Adjust Kit .	

EQUIPMENT

Spark plug cleaner	

SSM (SPECIAL SERVICE MATERIALS)

	08826–00080	Seal Packing Black or equivalent (FIPG)	Ignition coil