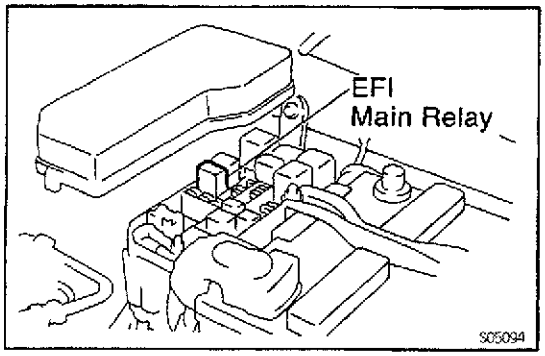



EFI MAIN RELAY

EFI MAIN RELAY (Marking: EFI)


EG68Q-03

INSPECTION

1. **REMOVE EFI MAIN RELAY**
   LOCATION: In the engine compartment relay box.

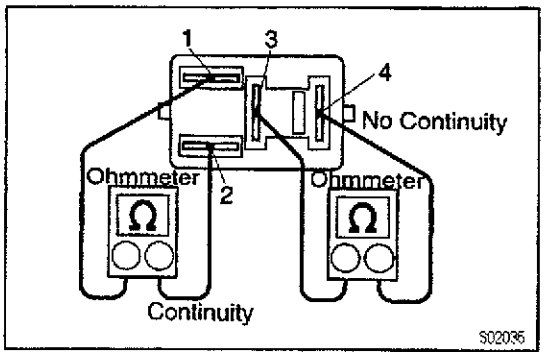

2. **INSPECT EFI MAIN RELAY CONTINUITY**
   (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
   If there is no continuity, replace the relay.
   (b) Check that there is no continuity between terminals 3 and 4.
   If there is continuity, replace the relay.

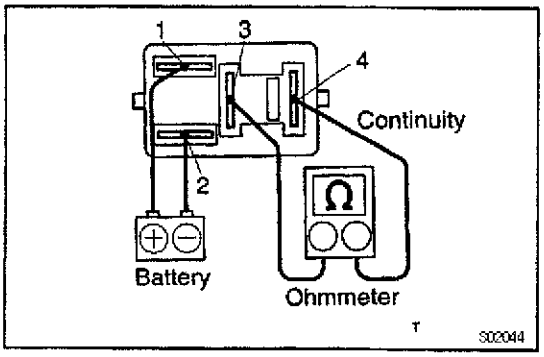

3. **INSPECT EFI MAIN RELAY OPERATION**
   (a) Apply battery positive voltage across terminals 1 and 2.
   (b) Using an ohmmeter, check that there is continuity between terminals 3 and 4.
   If operation is not as specified, replace the relay.
4. **REINSTALL EFI MAIN RELAY**