

CIRCUIT OPENING RELAY


COMPONENTS FOR REMOVAL AND INSTALLATION

EG0HM-01

EG

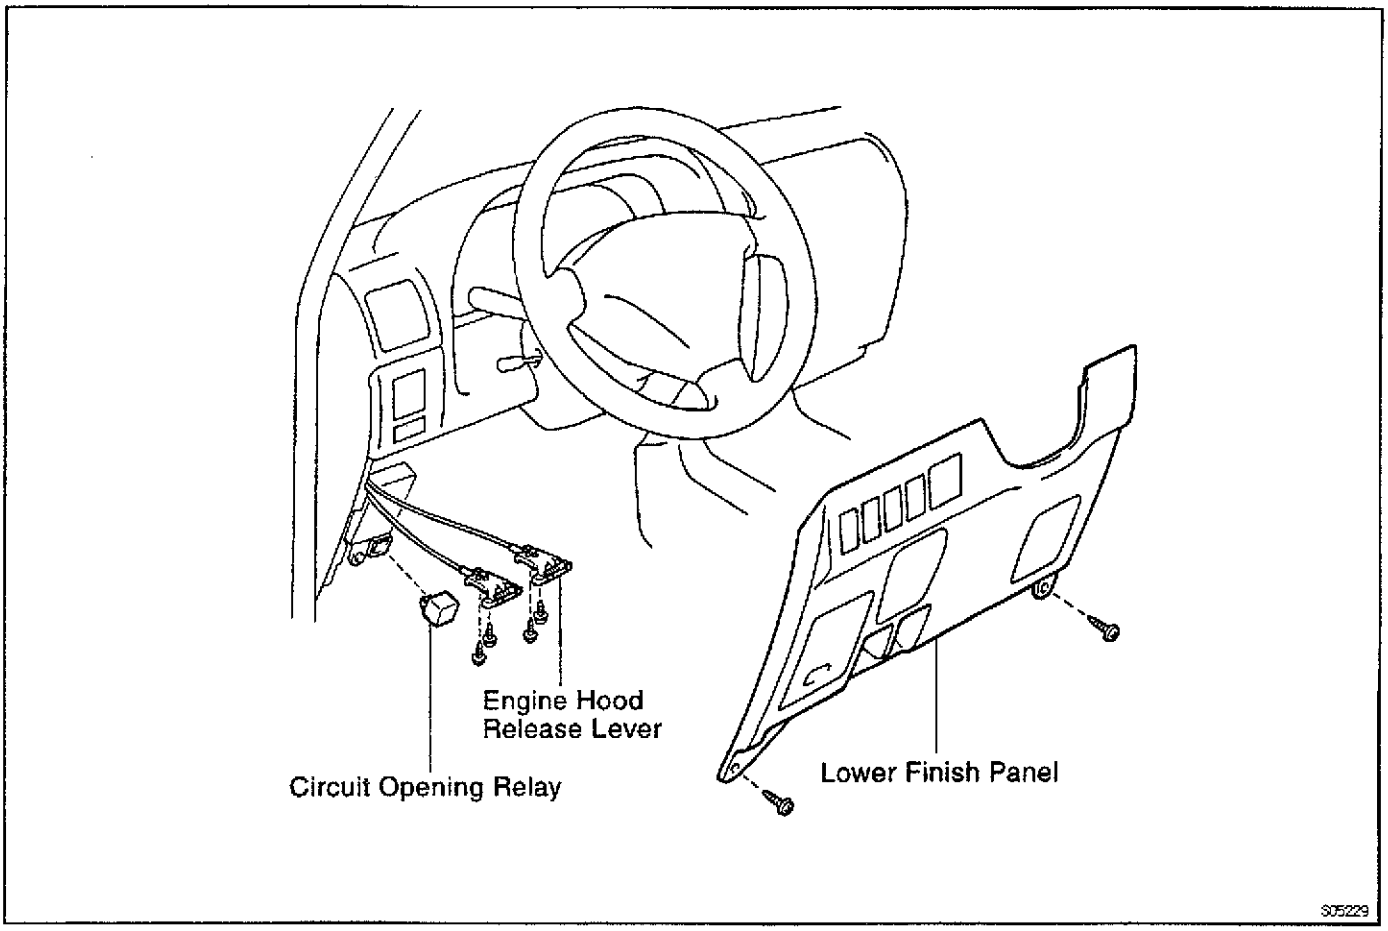

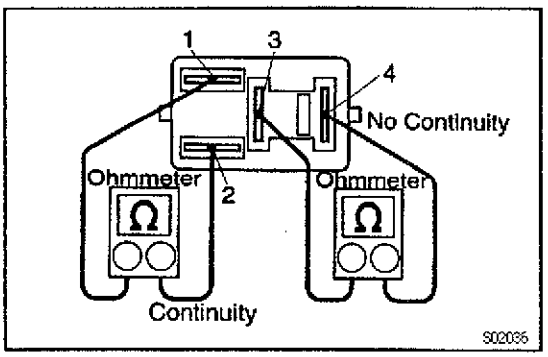

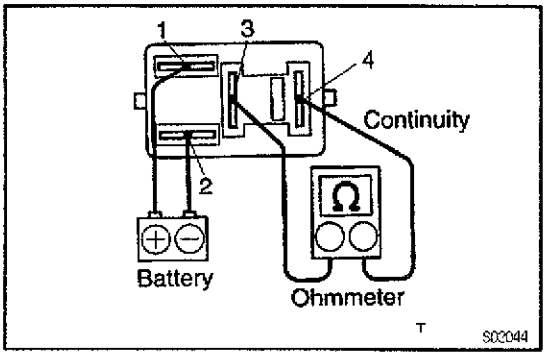

CIRCUIT OPENING RELAY INSPECTION

EG4FA-03

1. **REMOVE CIRCUIT OPENING RELAY**
2. **INSPECT CIRCUIT OPENING RELAY CONTINUITY**

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 4.
If there continuity, replace the relay.

3. **INSPECT CIRCUIT OPENING RELAY OPERATION**

(a) Apply battery positive voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 4.
If operation is not as specified, replace the relay.

4. **REINSTALL CIRCUIT OPENING RELAY**