
ECU

COMPONENTS FOR REMOVAL AND INSTALLATION

EG0CB-01

EG

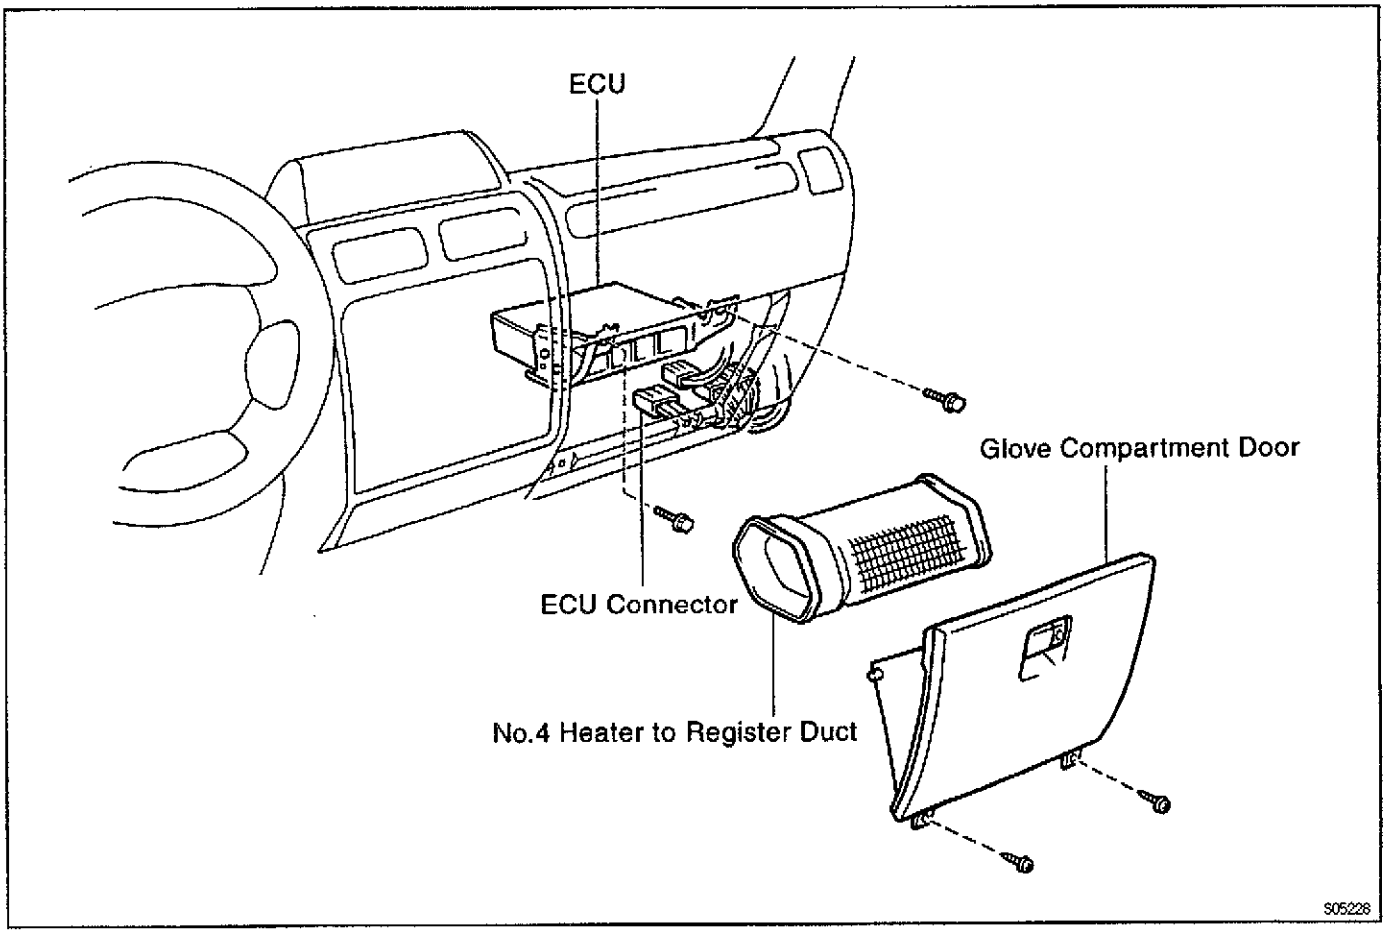

EG1Q4-01

ECU INSPECTION

(See Troubleshooting in EFI System)