

OIL COOLER

COMPONENTS FOR REMOVAL AND INSTALLATION

EG20M-0A

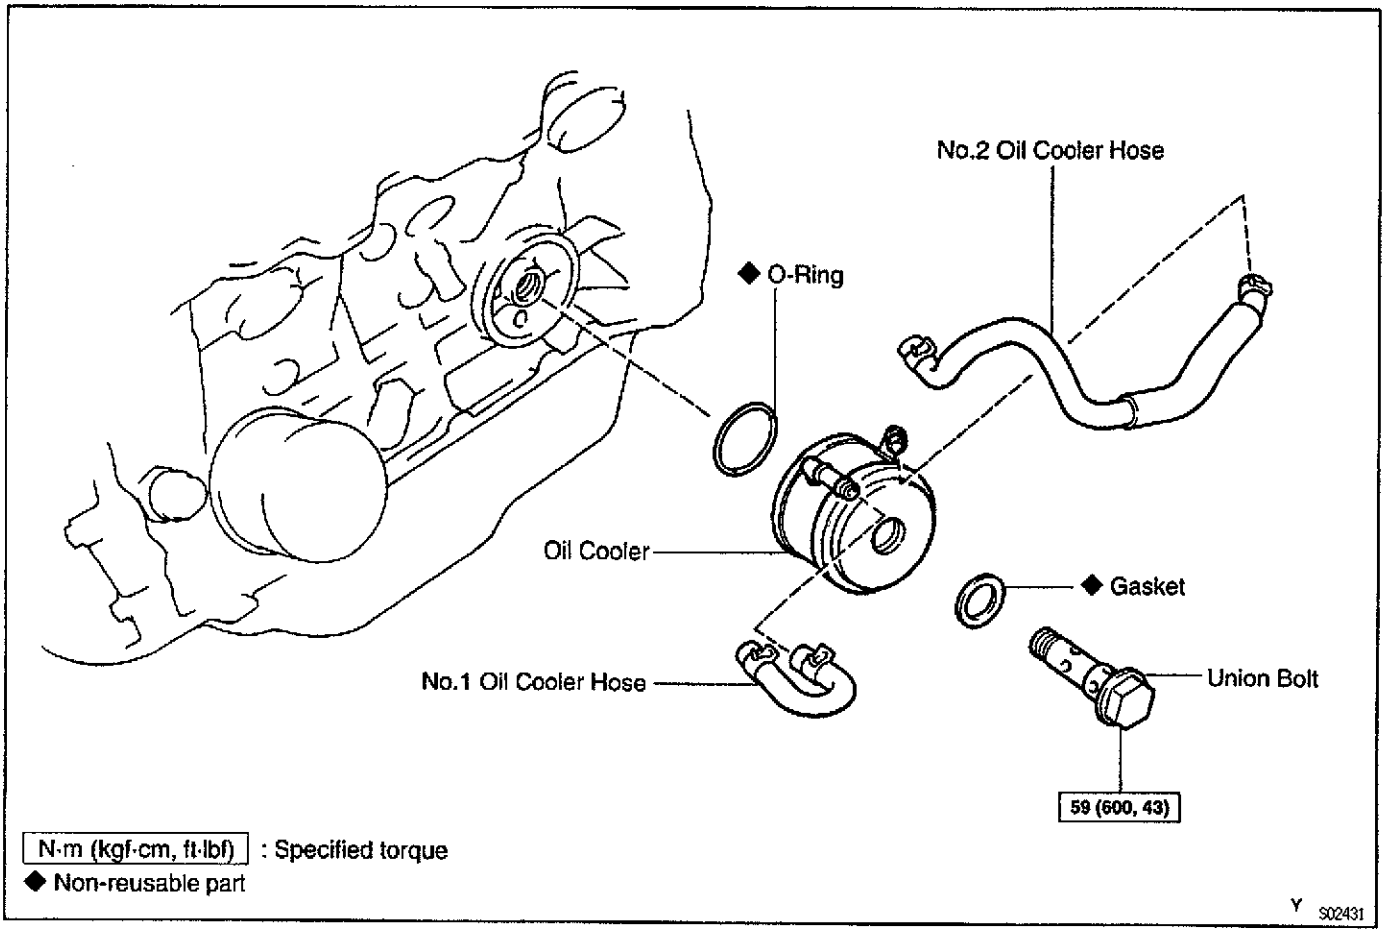


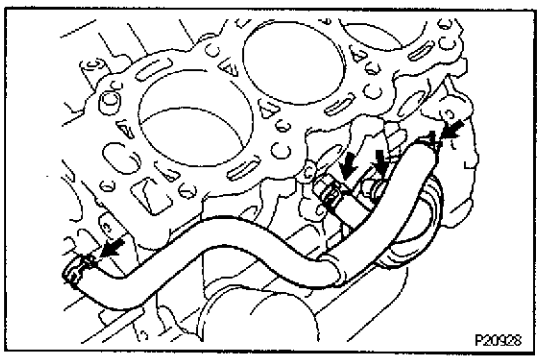

OIL COOLER REMOVAL

EG20N-0A

1. **DRAIN ENGINE COOLANT**
2. **DISCONNECT OIL COOLER HOSES**
   Disconnect the No.1 and No.2 oil cooler hoses.

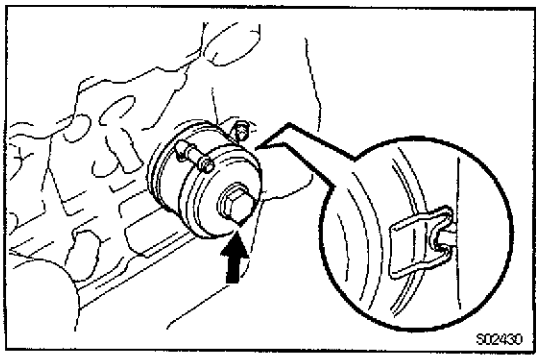

3. **REMOVE OIL COOLER**
   Remove the union bolt, gaskets and oil cooler and O-ring.
   Torque: 59 N·m (600 kgf·cm, 43 ft·lbf)
   INSTALLATION HINT:
   - Replace the O-ring with a new part.
   - Use a new gasket to the relief valve.

EG1C2-04

OIL COOLER INSPECTION

INSPECT OIL COOLER

Check the oil cooler for damage or clogging.
If necessary, replace the oil cooler.

EG

EG6VD-01

OIL COOLER INSTALLATION

Installation is in the reverse order of removal.