CAMSHAFT POSITION SENSOR

CAMSHAFT POSITION SENSOR REMOVAL

1GGGM-04

1. **REMOVE UPPER RADIATOR HOSE**
2. **REMOVE NO.2 TIMING BELT COVER**

(a) Remove the high–tension cord clamps from the No.2 timing belt cover.


(b) Remove the PS pump hose from the No.2 timing belt cover clamp.

(c) Remove the 6 bolts and No.2 timing belt cover.

3. **REMOVE CAMSHAFT POSITION SENSOR**

(a) Disconnect the camshaft position sensor connector.

(b) Remove the bolts and camshaft position sensor.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

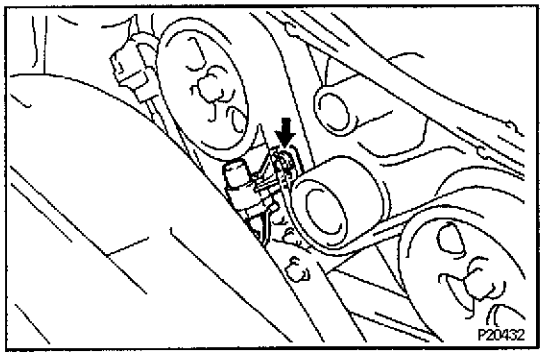

CAMSHAFT POSITION SENSOR INSTALLATION

1GGJH-02

Installation is in the reverse order of removal.