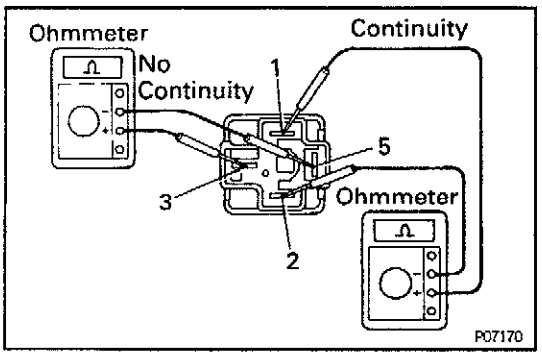


STARTER RELAY

STARTER RELAY INSPECTION


ST0GG—07

1. **REMOVE STARTER RELAY**
   LOCATION: In the engine compertment relay box.
   Remove the relay box cover and starter relay.
2. **INSPECT STARTER RELAY**

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.
If there is continuity, replace the relay.

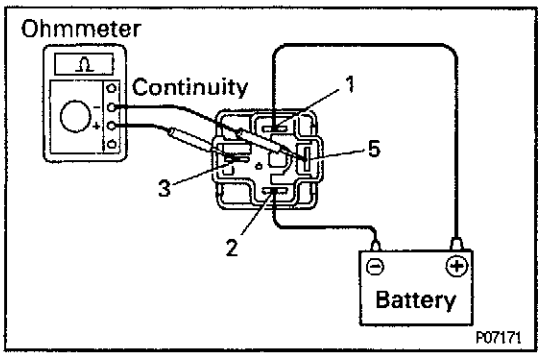

B. Inspect relay operation

(a) Apply battery voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
If there is no continuity, replace the relay.

3. **REINSTALL STARTER RELAY**

ST